

---

Ham Radio Deluxe

# User Guide

By Simon Brown, HB9DRV



January 28, 2006



# Contents

<b>Introduction</b>	<b>9</b>
How It All Began .....	9
This Guide .....	10
Sponsors.....	10
<b>Requirements</b>	<b>11</b>
Computer .....	11
Supported Radios .....	11
Interfacing .....	12
<b>Installation</b>	<b>13</b>
Introduction .....	13
Ham Radio Deluxe .....	13
<b>First Steps</b>	<b>17</b>
Connection.....	17
Dem-o-matic.....	17
Options .....	17
Connecting.....	18
What's Next.....	19
<b>Radio Display</b>	<b>21</b>
Introduction .....	21
Frequency Display.....	22
Tuning Dial.....	23
Fine Tuning .....	23
Main Tuning.....	23
Band Selection.....	25
Display Scroll.....	25
Band Selection.....	25
Date & Time .....	25
Buttons .....	26
Dropdowns .....	26
Sliders.....	26
<b>Customise Layout</b>	<b>27</b>
Introduction .....	27
Schemes .....	27
Layout.....	28
Buttons.....	30
Faceplate.....	31
Frequency .....	32
Meters .....	33
Sliders: Appearance.....	34
Sliders: Layout.....	34

Tuning Dial.....	35
<b>Program Options</b>	<b>37</b>
Introduction .....	37
Accelerators.....	37
Comms.....	38
COM Port TX.....	39
Docking Panes.....	39
ICOM Calibration.....	40
Info: Modes.....	40
Info: Options.....	41
Internet.....	42
Out Of Band.....	42
Mouse Wheel.....	43
Selection Window.....	43
Toolbars.....	44
Updates.....	44
<b>Audio</b>	<b>45</b>
Introduction .....	45
Audio Grabber.....	45
Record .....	45
Folder .....	46
Quality.....	46
Soundcard.....	46
Tags.....	46
Audio Browser.....	46
<b>Auxiliary Switching</b>	<b>49</b>
Introduction .....	49
Technology.....	49
Manager.....	49
Definitions.....	49
Port Address.....	50
Various.....	50
Monitor.....	51
Selection Window.....	51
<b>Band Layouts</b>	<b>53</b>
Introduction .....	53
Manager.....	53
Adding A Definition.....	54
Copying A Definition.....	55
Selecting.....	55
<b>DDE Support</b>	<b>57</b>
Introduction .....	57
Available Support.....	57
Commands.....	57
Add ADIF Record.....	58
Refresh.....	58
Set Button.....	58
Set Dropdown.....	58
Set Frequency.....	58
Set Mode.....	58
Top Window.....	58

<b>DX Cluster</b>	<b>59</b>
Introduction .....	59
OH2AQ .....	60
HRD .....	60
Starting.....	60
Configuration.....	61
Cluster Source .....	61
OH2AQ / Ham Radio Deluxe.....	61
Custom – DX Cluster Client.....	61
Options.....	62
<b>Favourites</b>	<b>65</b>
Inspiration.....	65
Manager .....	65
Markers.....	67
<b>Logbook</b>	<b>69</b>
Introduction .....	69
Database .....	69
Starting .....	69
Small Display .....	69
Input Fields.....	70
Main Display .....	70
Options .....	71
Configuration.....	72
Problems .....	72
Performance.....	72
Errors.....	73
<b>K1EL WinKey</b>	<b>75</b>
Introduction .....	75
Main Window .....	75
Options.....	76
Keyer .....	76
Speeds.....	78
Options .....	78
Pin Config .....	80
Macros.....	80
Logfile .....	80
Help .....	81
<b>Macros</b>	<b>83</b>
Introduction .....	83
CAT Commands .....	83
Manager.....	83
Protocols.....	84
Input Fields.....	86
Manager.....	86
Snapshots.....	88
<b>Quick Save</b>	<b>89</b>
Introduction .....	89
Add Entry .....	89
Markers.....	89

<b>Remote Server</b>	<b>91</b>
Introduction .....	91
Requirements.....	91
Technology.....	91
Installing.....	91
Configuring.....	92
Restricting TX.....	93
Connecting.....	93
Remote Connection .....	95
Slow Link .....	96
<b>Rotator</b>	<b>97</b>
Introduction .....	97
Main Window .....	97
Options.....	98
Connect.....	98
Limits .....	98
Presets.....	99
Logfile.....	99
<b>Satellite Tracking</b>	<b>101</b>
Introduction .....	101
Satellites.....	101
Observer.....	104
Ground Control.....	105
Tabs .....	105
Kenwood TS-2000 .....	107
Yaesu.....	108
ICOM .....	108
Single VFO Radios.....	109
Linear Transponders.....	109
Frequency Resolution.....	110
Options .....	110
Schedule.....	111
Current Data .....	111
Mutual Visibility.....	112
Visibility .....	113
Next Passes.....	114
Single Pass.....	114
Plot.....	115
DDE.....	116
<b>Synchroniser</b>	<b>117</b>
Introduction .....	117
Starting.....	117
Dual Radio Satellite Tracking.....	118
<b>3<sup>rd</sup>-Party Programs</b>	<b>121</b>
Introduction .....	121
Configuring.....	122
Testing .....	122
Command Detail.....	122
<b>Annex: Command Tester</b>	<b>125</b>
Introduction .....	125
Too Many Radios.....	125

Data Formats .....	125
Command Types.....	125
Starting.....	125
Connect.....	126
General Options.....	126
Results .....	127
Platforms.....	127
Elecraft .....	127
ICOM CI-V .....	128
Yaesu.....	130
<b>Annex: Portmon</b> .....	<b>133</b>
Introduction .....	133
Sample Log.....	134
<b>Annex: Remote Server</b> .....	<b>135</b>
Technical Information.....	135
Commands.....	135
Structures.....	136
<b>Annex: Settings</b> .....	<b>139</b>
Overview .....	139
Registry.....	139
Files .....	139
Archiving.....	140
<b>Annex: Logbook Database</b> .....	<b>141</b>
Introduction .....	141
Tables.....	141
Bands.....	141
Countries .....	142
Logbook .....	142
Modes.....	142
QRZ.....	143
ADIF .....	143
<b>Annex: Building HRD</b> .....	<b>149</b>
Overview .....	149
Source Code.....	149
Tools .....	150
Building .....	150
<b>Index</b> .....	<b>151</b>





# Introduction

---

## How It All Began

In early 2003 Peter PH1PH and myself Simon HB9DRV talked about developing a simple program to control the soon to be released ICOM IC-703.

We had previously developed the FT-817 Commander, which proved to be very popular, the main lesson being learnt that future programs must not be tied to a single radio or a single manufacturer; rather they must be designed to support all current and future radios.


Maybe it was the beer, maybe the desire to give something back to the radio amateur community, however on June 6<sup>th</sup>, 2003 the first line of code was written, Ham Radio Deluxe (HRD) was born.

The inspiration for the design came from a variety of sources: Internet Explorer (especially the Favourites), my old Eddystone EA12 and a desire to prove that Peter and myself could develop something better than the current 'not quite so free and fantastic' products being peddled to radio amateurs.

On December 23<sup>rd</sup>, 2005 the number of registered users stood at 20,006 – quite an achievement in such a short time.

--- --- ---

Very sadly Peter passed away on June 8<sup>th</sup>, 2005. His contribution to Ham Radio Deluxe will never be forgotten.

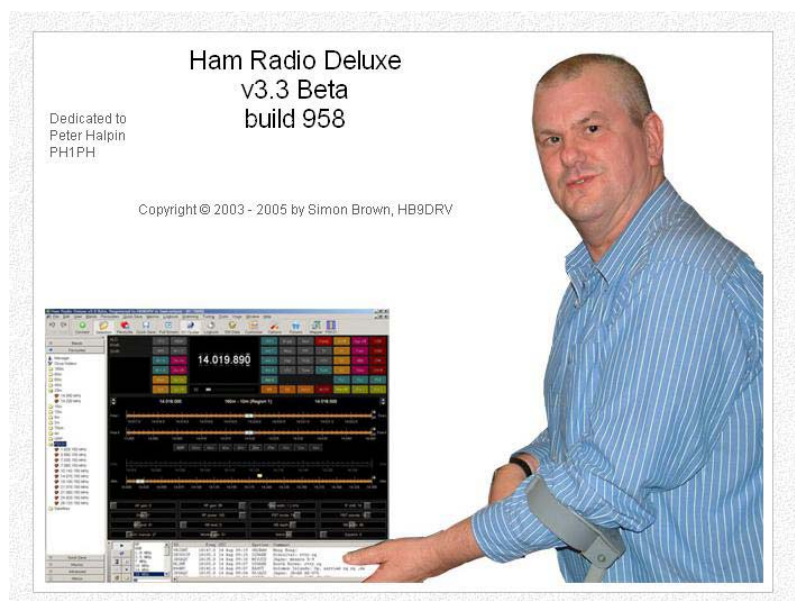

---

## This Guide

Kevin Crockett, VK3CKC, wrote the original user guide. Now that HRD is a more mature product the time has come to write the document you are currently reading.

Thank-you for reading this guide - and before you ask it's written in British English, with plenty of my favourite colours despite Word's attempts to change the spelling ☺.

If you are only going to read one more section then now go to Radio Display on page 21.

Please report errors and omissions to [simon@hb9drv.ch](mailto:simon@hb9drv.ch) or in the HRD forums (page 147).

---

## Sponsors

To help keep HRD free for all Amateurs and SWL's several companies have helped by sponsoring the HRD development. If I have missed your company please let me know.

And a very big thank-you to everybody when has lent radios to Peter and myself so that we have been able to provide the current level of support.

### West Mountain Radio



### ZLP Electronics



# Requirements

---

## Computer

You can run HRD on any Windows 98 or NT/2K/XP computer.

---

There will never be a LINUX or Macintosh native version, HRD is known to run under Wine for LINUX and PC emulators for the Macintosh.

I may be crazy undertaking a project like this in my spare time<sup>1</sup>; I am not ‘deep stir-fry serve in a bun with extra chilies’ crazy<sup>2</sup>!

The code is not open source; it cannot be ported to Linux and will never be released as some of the code is protected under copyright and if released will land the author with a nice big legal ‘fee’.

---

## Supported Radios

You don’t need a radio – HRD comes with built-in Dem-o-matic radio support (FTDX-9000, K2, Orion, TS-480, TS-570 and TS-2000).

HRD currently supports these ‘real’ radios:

- *Elecraft*: K2
- *FlexRadio*: SDR-1000
- *ICOM*: IC-7000, IC-703, IC-706, IC-706MkII, IC-706MkIIG, IC-707, IC-718, IC-725, IC-726, IC-728, IC-729, IC-735, IC-736, IC-737, IC-738, IC-7400, IC-746, IC-746Pro, IC-751A, IC-751A (Piexx), IC-756, IC-756Pro, IC-756ProII, IC-756ProIII, IC-761, IC-765, IC-775DSP, IC-7800, IC-781, IC-821H, IC-910H, IC-R10, IC-R20, IC-R75, IC-R8500, PCR-1000
- *Kenwood*: R-5000, TS-140S, TS-2000, TS-440S, TS-450S, TS-480, TS-50S, TS-570, TS-60S, TS-680S, TS-690S, TS-790, TS-850, TS-870, TS-940S, TS-950, TS-B2000
- *Ten-Tec*: Argonaut, Jupiter, Orion, RX-350
- *Yaesu*: FT-100, FT-1000D, FT-1000MP MkV, FT-600, FT-817, FT-840, FT-847, FT-857, FT-890, FT-897, FT-900, FT-920, FT-990, FTDX-9000.

---

<sup>1</sup> It was the voices in my head that made me do it

<sup>2</sup> Medical opinion may differ here

## Interfacing

You will need a cable to connect your radio to the computer's serial (COM) port.

If you don't have a serial port all is not lost – USB ⇔ serial converters are widely available. Please note: not all USB ⇔ serial converters work well enough for HRD. If in doubt ask for a recommendation in the HRD support forums.

For more interfacing information refer to:

- The HRD Interface guide, and
- CATbox, a Modular Computer Interface by Bas Helman G4TIC.

These files are downloadable from the HRD download center - <http://hrd.ham-radio.ch/downloads.html>.

Check out the cable solutions from:

- G4ZLP <http://g4zlp.ham-radio.ch/> and
- West Mountain Radio <http://www.westmountainradio.com/>.

# Installation

---

## Introduction

The Ham Radio Deluxe kit is a standard Windows kit – it supports Windows 98, Windows 2000 and more recent releases.


The Logbook uses the Microsoft Jet 4.0 Database Engine, see Database on page 69 for more information.

---


## Ham Radio Deluxe

Ham Radio Deluxe can be installed in under a minute. Special knowledge is not needed – the kit does everything for you!

You will not need to reboot your computer, HRD does not update your system files or change your system's configuration in any way.

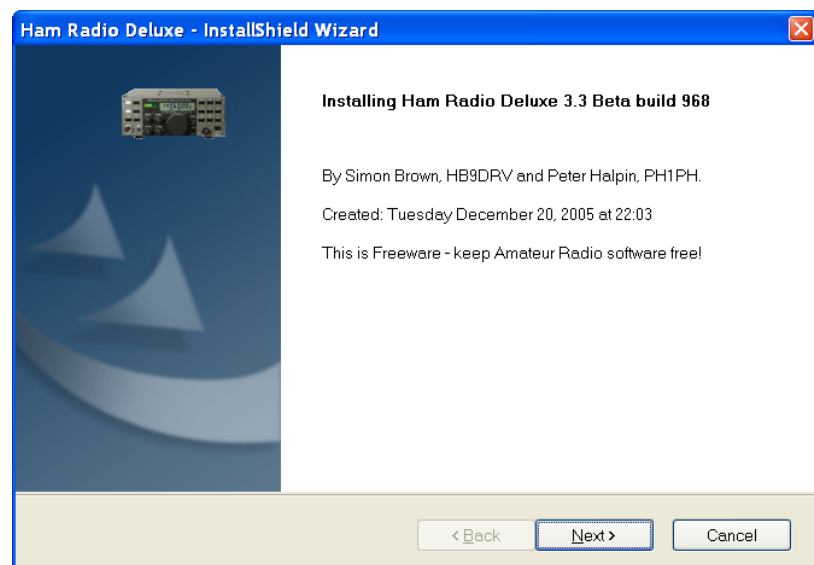


When you start the installation the first screen shows the release and build you are installing.

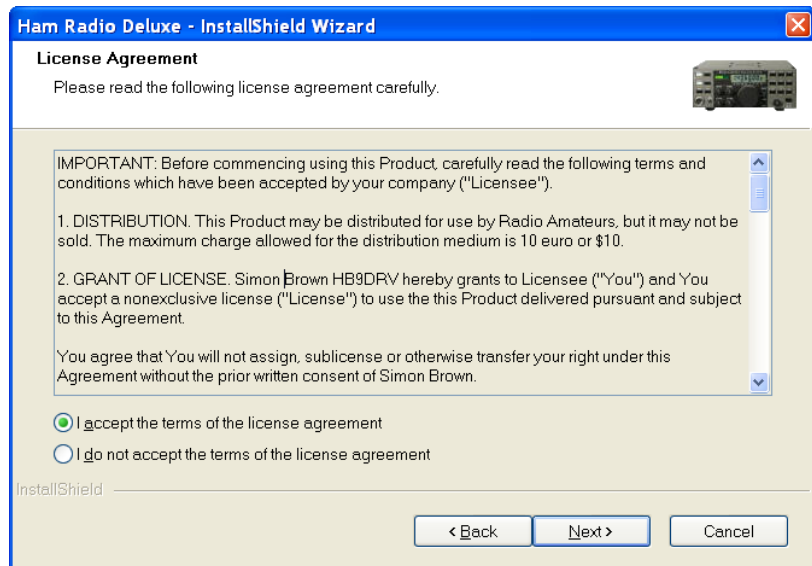


You must accept the licencing conditions. Ham Radio Deluxe is free for radio amateurs and shortwave listeners, commercial use requires a licence.


If you are a commercial (non-amateur user) stop the installation now unless you have a licence.

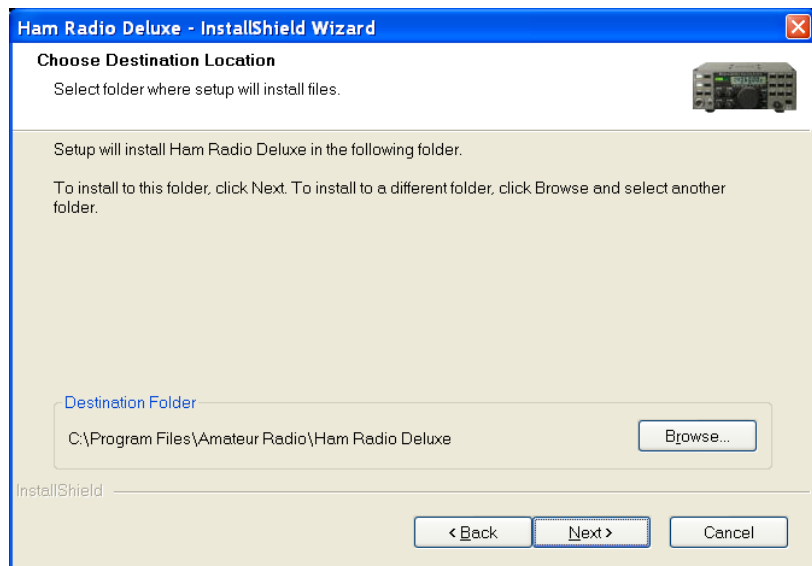


Select the folder where Ham Radio Deluxe will be installed, the suggested default is usually sufficient.

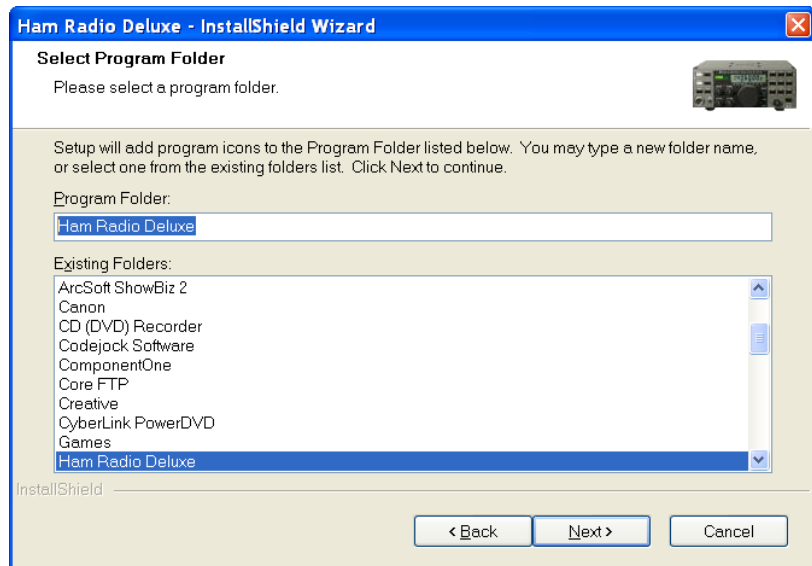


Select the folder in the *Start* menu where the Ham Radio Deluxe entries will be added, the suggested default is usually sufficient.

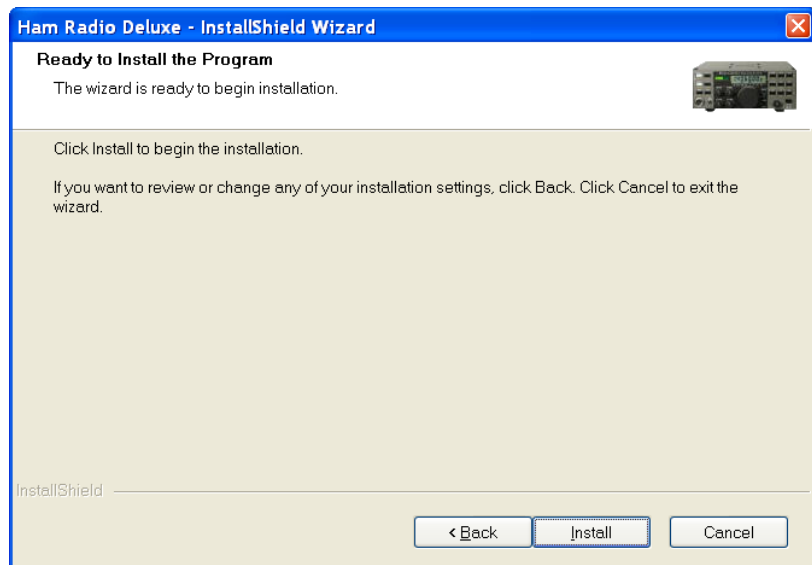

Click *Install* to start the installation.

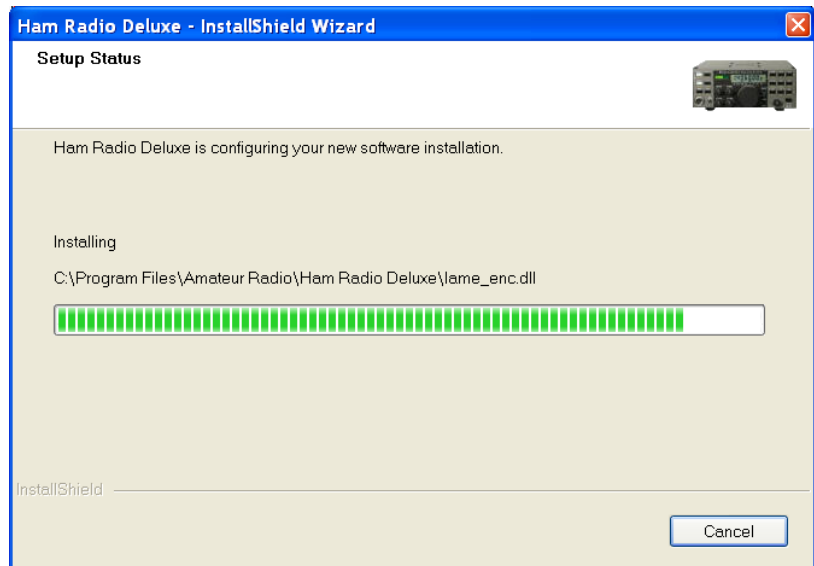

The progress of the installation is shown while the software is being installed.

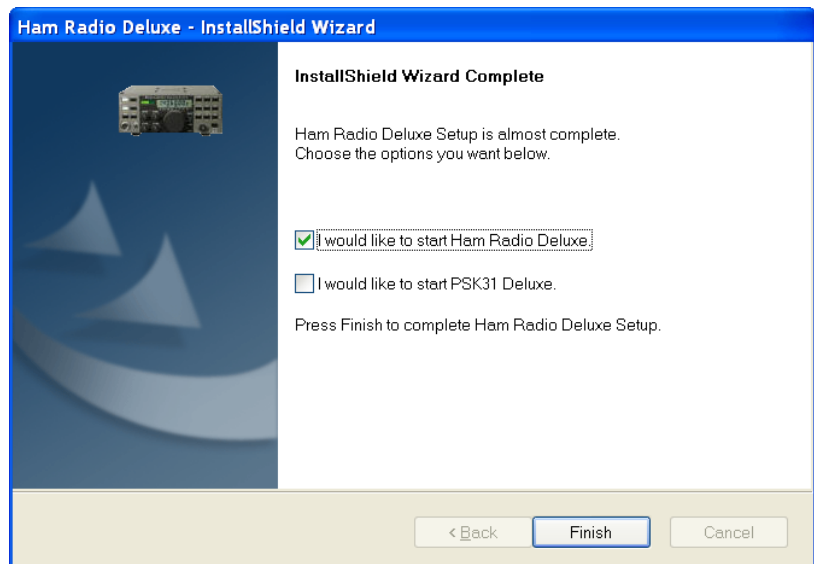

When the software has been installed select the programs to be started, then press *Finish*.



# First Steps

---

## Connection

Now that you have installed HRD you can try it out using a *Dem-o-matic* radio. This is a reasonable accurate simulation of the real thing, designed for use during presentations and while developing HRD when a radio is not available (on the train, in a plane, in an airport, stuck in a hotel room in Finland etc.).

From the *Start* menu select *Programs > Ham Radio Deluxe*. Once the splash screen has closes you see the *Connect* window.



## Dem-o-matic

The *Dem-o-matic* radios do not need cables – simply select *Dem-o-matic* in the Company dropdown, select an option in the Radio dropdown, and then press *Connect*.

They are ideal for demonstrating HRD when you do not have a suitable radio available.

## Options

### Company

Select your radio manufacturer from the drop-down list.

*FlexRadio*: you must install the virtual serial port drivers from Philip Covington (N8VB). These are used to provide the connection between HRD and the PowerSDR software that must be running before you try to create the connection with HRD. More information is available from <http://www.flex-radio.com/>.

*ICOM*: disable the CI-V Transceive option for best performance.

*Kenwood*: make sure Packet communication mode is switched OFF (if supported). Most Kenwood radios require CTS and RTS to be ON for flow control.

### **Radio**

Select your radio model from the drop-down list.

### **COM Port**

The COM port on this computer where you have connected the radio interface cable.

Make sure that you do not have other programs using the same port, for example mobile phones and personal organisers.

Select 'Auto-detect' to try all available ports.

### **Speed**

The speed used for communicating with the radio, check the speed setting via the radio's configuration menu.

Select 'Auto-detect' to try all available speeds.

### **CI-V Address**

*ICOM only*: the address assigned to the radio, consult the radio's handbook for the default address. This can also be configured via the radio's configuration menu.

### **CTS**

Enables the CTS flow control, required for Kenwood radios.

### **DTR**

Enables the DTR line when the COM Port is opened and leaves it on, usually to provide power for an interface cable. For Yaesu CT-62 and ICOM CT-17 interfaces this can be left unchecked (off).

### **RTS**

Enables the RTS line when the COM Port is opened and leaves it on, usually to provide power for an interface cable. For Yaesu CT-62 and ICOM CT-17 interfaces this can be left unchecked (off).


## **Connecting**

Press *Start* to connect to the radio. If you see the error below then the COM port is currently held open by another program.



Check that you have not started another radio control program. Other culprits are PDA and mobile phone connections. Even if you have disconnected a device from a COM port you must make sure that the software is no longer running.

One connected HRD reads the radio's frequency to ensure that the options you selected are correct. If you see the error below then HRD failed to read the radio's frequency:

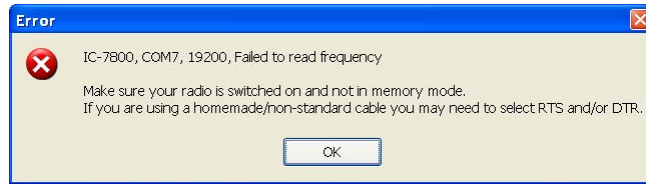

If HRD can read the frequency the Connect window is replaced with the main radio display – you are now using HRD!

If HRD cannot read the frequency then check:

- Correct COM port is selected,
- Speed on radio is the same as the speed selected in HRD,
- Your cable – you may have a NULL modem cable when a normal serial cable is needed,
- Cable is connected correctly to your PC (you may have more than one COM port),
- DTR / RTS are selected if required to power an active cable such as CT-62 or a cable from third-party provider.

If you still can't get started refer to:

- Annex: Command Tester on page 125, and
- Annex: Portmon on page 133.

---

## What's Next

A taste of what's to come later in this guide...

### Appearance

Set the appearance:

- From the *View* menu select *Colour Schemes*,
- Select *Customise Layout* and *Program Options* from the *Tools* menu.




# Radio Display

## Introduction

The HRD radio display has many, many features. This section attempts to describe everything you can do in this display.


HRD is designed to be intuitive; nevertheless even the author has problems remembering all the available options!

To aid in the clarity of the screenshots the LCD Scheme is used.

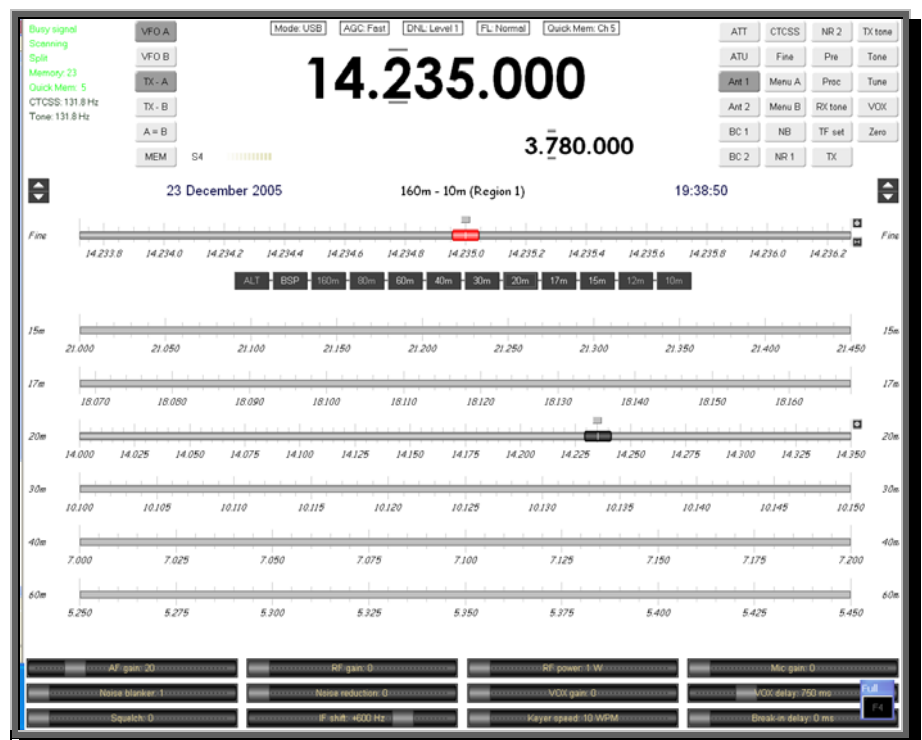

---

# Frequency Display

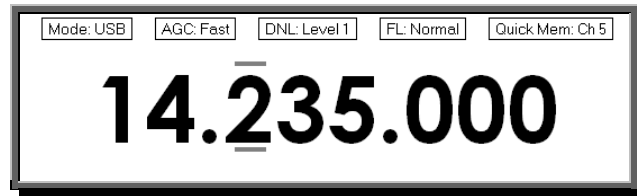

## Configuration

See Frequency on page 32.

## Dropdowns

If you have enabled dropdowns as part of the configuration just click on a dropdown and make a new selection.

## Mouse Wheel

When you rotate the mouse wheel in the frequency display the currently active digit is incremented / decremented depending on the scroll direction.

If you rotate while the cursor is over an inactive digit then the digit is activated.

## Up/Down

The up-arrow, down-arrow, - and + keys increment / decrement the active digit.


## Mouse-click

Select a digital by clicking over the digit. To increment / decrement click above / below the center of the digit and keep the mouse button pressed.

## Direct Entry

To enter values just press a numeric key (0-9). The active digital is updated and the next digit to the right is made active.

Press *Enter* to display the Enter Frequency window.

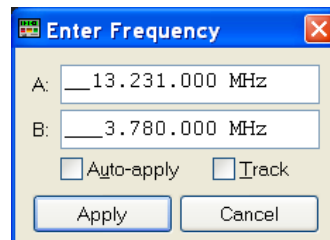

Enter the new frequency, and then press *Apply*.

If you check *Auto-apply* then the new frequency is applied every time you make a change.

If you check *Track* this window is updated with changes made to the frequency display – for example when you tune the radio manually.


## Griffin etc.

Support for third-party devices such as the Griffin Powermate is available – see Accelerators on page 37.


---


# Tuning Dial

## Fine Tuning



There are two fine tuning ranges – *Fine I* and *Fine II*. In the *Tuning* menu select *Show Fine II* to show the second range. (If you are only showing *Fine I* then the title is *Fine*.)


Set the range from the *Tuning* menu or by clicking the  button.

To change the mouse wheel step click the  button (also set with the Mouse Wheel pane of Program Options on page 43).

To change the frequency either:

- Drag the marker with the mouse (and keep on dragging – the bar will scroll to the left or right),
- Rotate the mouse wheel (press *Shift* to increase the mouse wheel step by a factor of 2, press *Ctrl* to increase by a factor of 5),
- Click in the tuning bar or on frequency text such as *14.235.0*.

## Main Tuning



The differences between a main tuning bar and a fine tuning bar are:

The range is fixed (defined by the gainst the list of definitions).





- Band Layouts – see page 49),
- The bar does not automatically scroll to the left or right.

## Band Selection

The Band Section buttons are shown between the Fine and Main layouts.



The buttons are:

- ALT,
- BSP,
- Band buttons – 160m, 80, ... 10m.

ALT – only displayed if you have two VFO's displayed (for example Kenwood TS-2000), switches between the main and alternate (second) VFO. When highlighted you are tuning the second VFO with the tuning dial.

BSP (bandspread) – when you press BSP a new layout is dynamically created. The current band is split into multiple segments, for example the 20m band (14 MHz – 14.350 MHz) can be split into 7 segments, each of 50 kHz.

To restore the previous layout press BSP and select *Off*.

The band buttons select the corresponding band; the last used frequency and mode for the band are restored.

## Display Scroll



If there is not enough room to display all the frequency ranges defined in the current band layout use this button to scroll the frequency ranges (bands) up or down.

## Band Selection

160m - 10m (Region 1)


The current band layout. Click here to select a different layout.




## Date & Time

25 December 2005 11:40

Click here to set the clock format.

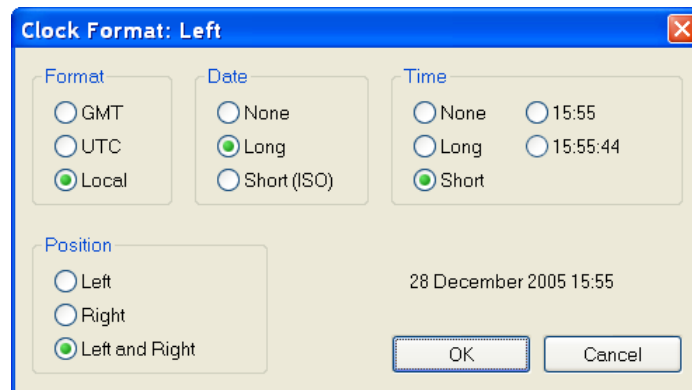


## Buttons



What would a radio be without buttons? Press a button to active the option. If it is a button where the option state can be read from the radio – for example the selected VFO – the button indicates whether the option is currently selected.

This should be obvious ☺ .

## Dropdowns



When to press a dropdown button a popup menu is displayed. Select an option or press escape. If possible the dropdown displays the current selected option.

Again, this should be obvious.

## Sliders



Select the sliders that are displayed with the Sliders: Layout pane of Customise Layout – see page 34.

Use the mouse to adjust a slider value.

In the *View* menu select whether sliders are displayed with the *Slider Controls* option.

# Customise Layout

---


## Introduction

Used to define the appearance of the radio display, *Customise Layout* is selected from the *Tools* menu, or by pressing the *Customise* button.



---

## Schemes

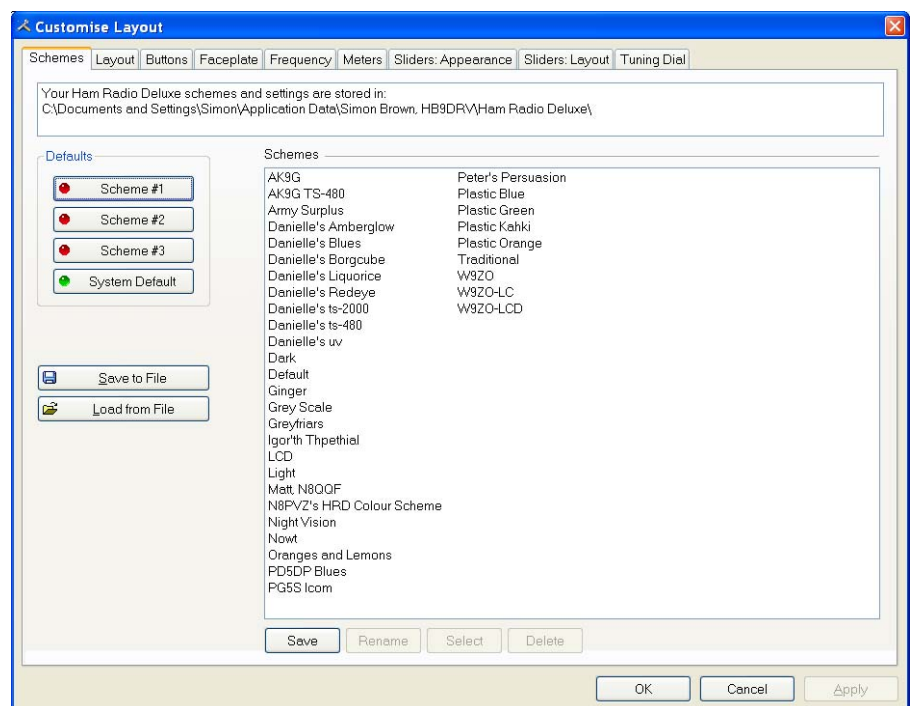

Schemes are pre-defined customizations created by author and by other HRD users.

There are four default schemes shipped with HRD: Scheme #1 - #3 and the System Default.

The HRD team and the HRD users have created the other schemes. Special thanks to Danielle in Northallerton, UK.


Select a default scheme by pressing the scheme button (or select an entry and press *Select*); select one of the other schemes by double-clicking on the entry in the *Schemes* list.

To save the current layout press *Save* – you will be prompted for a Scheme name.

Use *Rename* and *Delete* to organise the available schemes.

---

## Layout

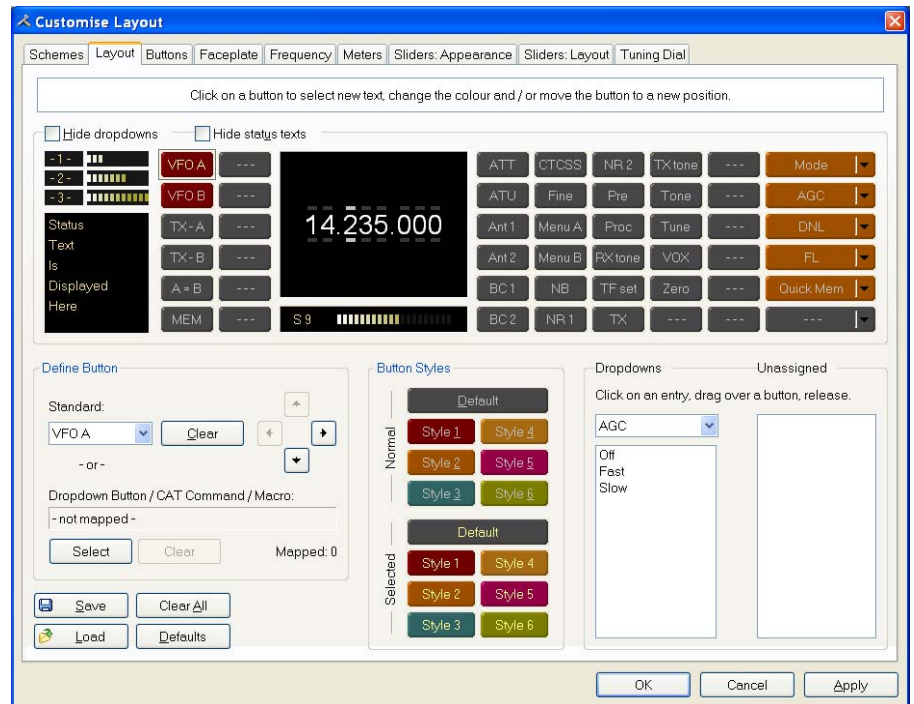

HRD is a data-driven program. For each radio there is a table of supported commands and associated button / dropdown / slider names. The layout order is more-or-less alphabetical.

An early complaint was that the buttons positions were not user-definable; as a result the Layout window was designed.


Don't be put off by the amount of information in this window – take it slowly and read the information here.

The layout definition is saved on a per-radio basis in the registry.

### Dropdown Button / CAT Command / Macros

You can create new buttons - for example, to create a USB button from the Mode dropdown:

- Select an empty button position – the selected entry will start to blink (you can reposition this button later),
- Press *Select* (above the *Save* and *Load* buttons),
- In the *Configure Button Mapping* window select Mode : USB and enter the text to appear on the new button, then press *OK*.

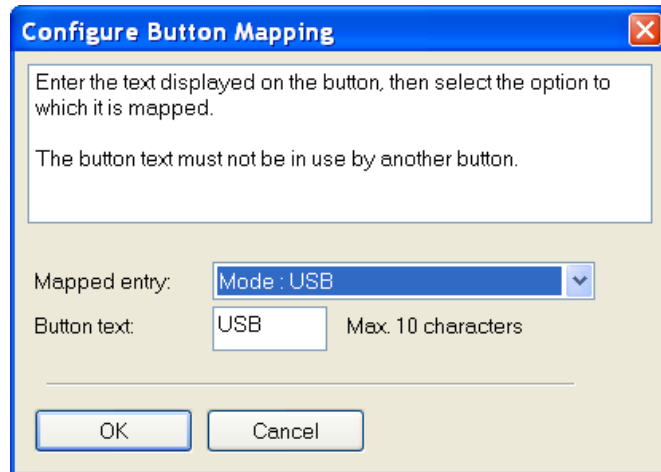

- The previously empty button position now has a new value – *USB!*

### Hiding

*Hide dropdowns* hides the dropdown buttons to the right of the layout window, releasing two columns where you can assign new button definitions.

*Hide status texts* hides the three top-left meters (-1-, -2-, -3-) and the status text area underneath, releasing two columns where you can assign new button definitions.

### Moving Entries

Move the selected entry by simply dragging it with the mouse or by using the four arrow-buttons.



### Removing Entries

To remove an entry either drag it into the *Unassigned* list or right-click on the button and select *Clear* from the popup menu.

### Dropdowns

Select the dropdown menu, and then simply drag an entry to an unused location in the display.

If you drag to a location that already has a definition the current definition is removed, if a standard button it is returned to the *unassigned* list.

### Unassigned

Entries in the *Unassigned* list are standard buttons that are not currently displayed. Simply drag an entry to an unused location in the display.

If you drag to a location that already has a definition the current definition is removed, if a standard button it is returned to the *Unassigned* list.

### Styles

In the Buttons pane (page 30) you define up to seven button styles, shown here in the Button Styles group.


To assign a style to a button either:

- Drag the style over the button, or
- Click a style to apply it to the currently selected (blinking) button.

### Save / Load

To distribute your layouts with other users of your radio model use the *Save* and *Load* buttons.

## Buttons

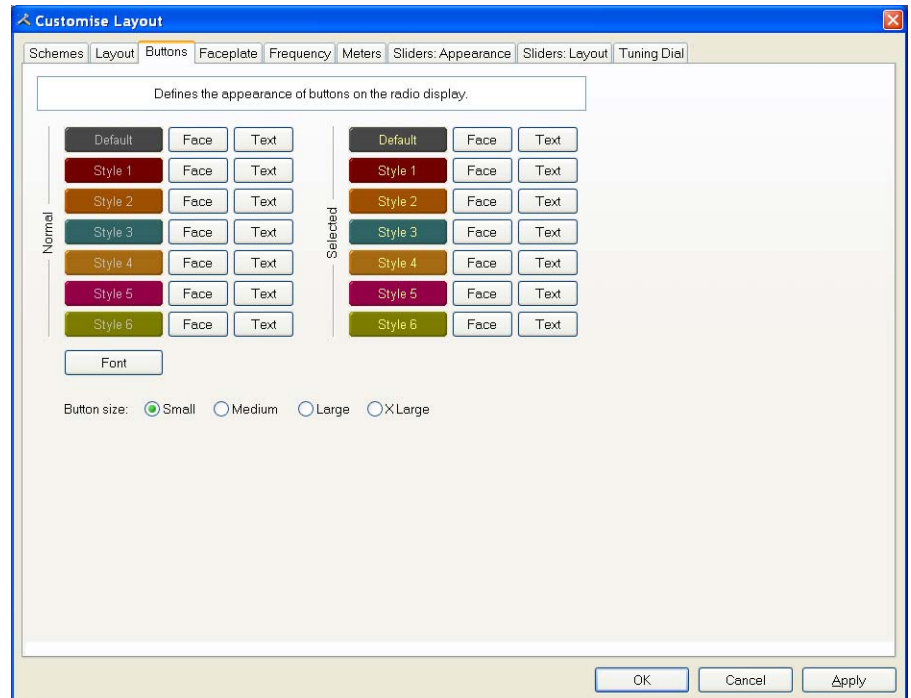

Define:

- Seven button colour combinations,
- The font, and
- The button size.


The default button size is small; this is so that users with low resolutions such as 800 x 600 still have a usable configuration.

There are no rules when using the button size; select the size which pleases you most.

For the technical readers the button size is tied to the font size of the radio display form (font is Microsoft Sans Serif, size is 8, 9, 10 or 12 point).

Changing the font size simply changes the font assigned to the form.

# Faceplate

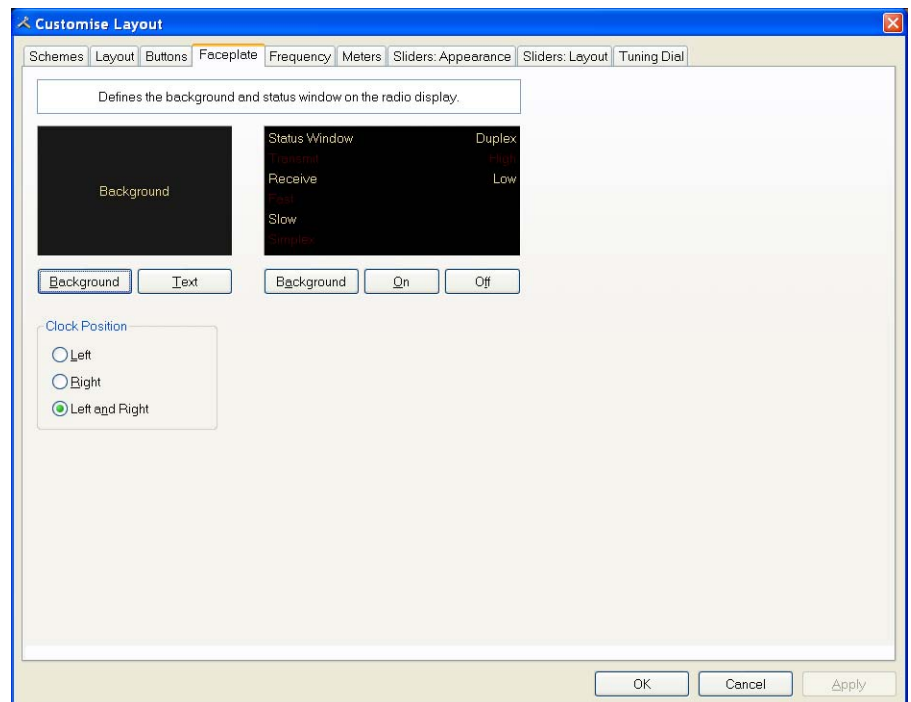

## Background

These colours are applied to the background area of the display and to the transmit meters (if any) such as PWR, SWR and ALC.

## Status Window


The status window displays information which you cannot normally change using buttons or sliders in HRD.

Typical examples are Scanning status, Split mode and Memory channels.

## Clock Position

The clock is displayed to the left, right or both sides of the band title.

# Frequency

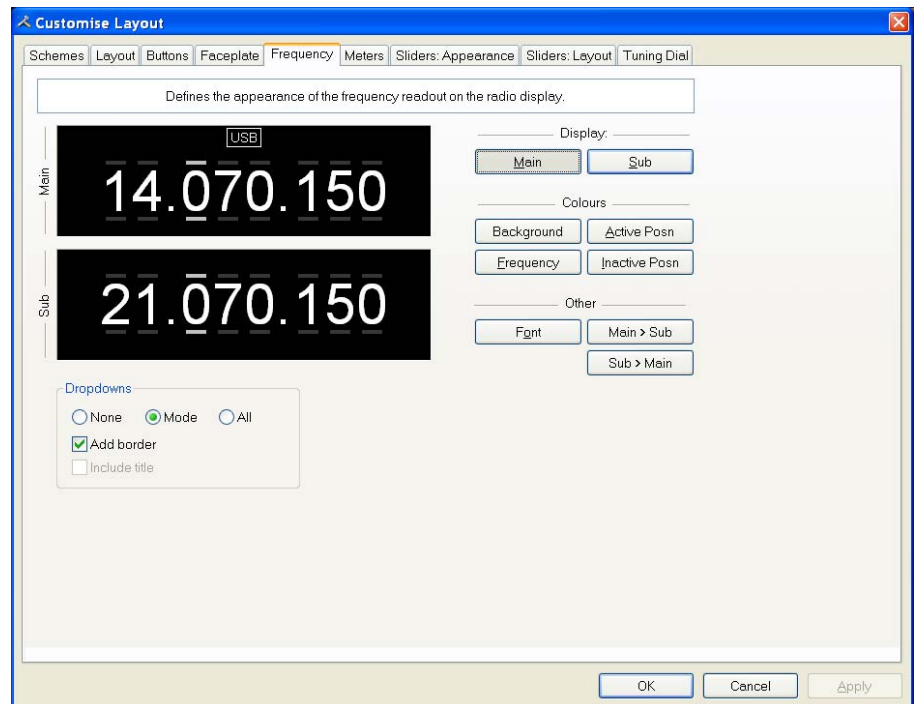

If your radio supports simultaneous access to two VFO's (Kenwood, some Yaesu) then HRD will display two VFO's, otherwise just one VFO is displayed.

First select the VFO you are updating – main or sub.

The colours you can set are:

- Background,
- Frequency – the digits,
- Active Posn – the bar above and below the current digit,
- Inactive posn – the bar above and below the other digit,

The Font can also be set, use the Main > Sub and Sub > Main buttons to copy settings between VFO's.

## Dropdowns

The dropdown buttons (Mode, Filter...) can be displayed at the top of the main frequency display.

Select:


- None (no dropdowns),
- Mode (only the mode dropdown) or
- All (all dropdowns).

If *Mode* or *All* is selected you can check *Add Border* to add a border around the text.

If *All* is selected you can check *Include Title* to add the Dropdown button's title (if there is room).



# Meters

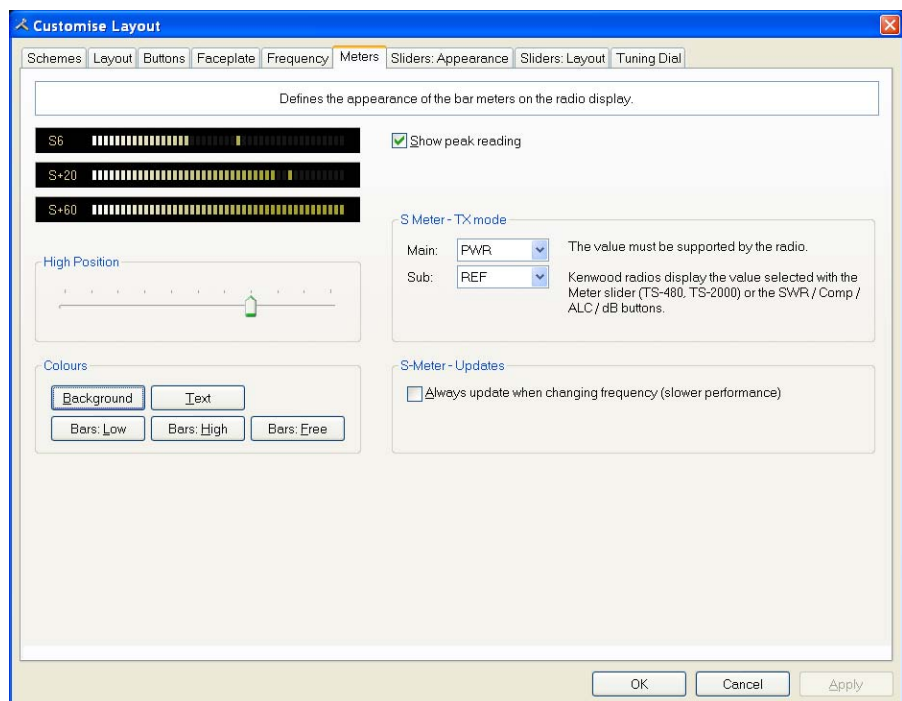

The design aim of the bar meters was heavily influenced by my fine Sony stereo, still giving fine service here in the HRD R&R suite after some 15 years of abuse.

The *Background* and *Text* colours should be obvious.

There are three graduation colours:


- Bars: Low – the first bar colour,
- Bars: High – the colour at the position set by the High Position slider, and
- Bars: Free – the colour for the free (empty) bars.

If you check *Show peak reading* the recent peak value is displayed.

When HRD is in TX mode the S Meter value is replaced by the value selected in the *Main* and *Sub* dropdowns, the value you select *must be displayed by HRD in the upper right hand corner of the display*. For Kenwood radios the value to be displayed is selected with the meter slider or the individual buttons (SWR / Comp / ALC / dB).

If you check the *Always update...* option then the S Meter is updated when you change frequency – this results in slower performance.


# Sliders: Appearance

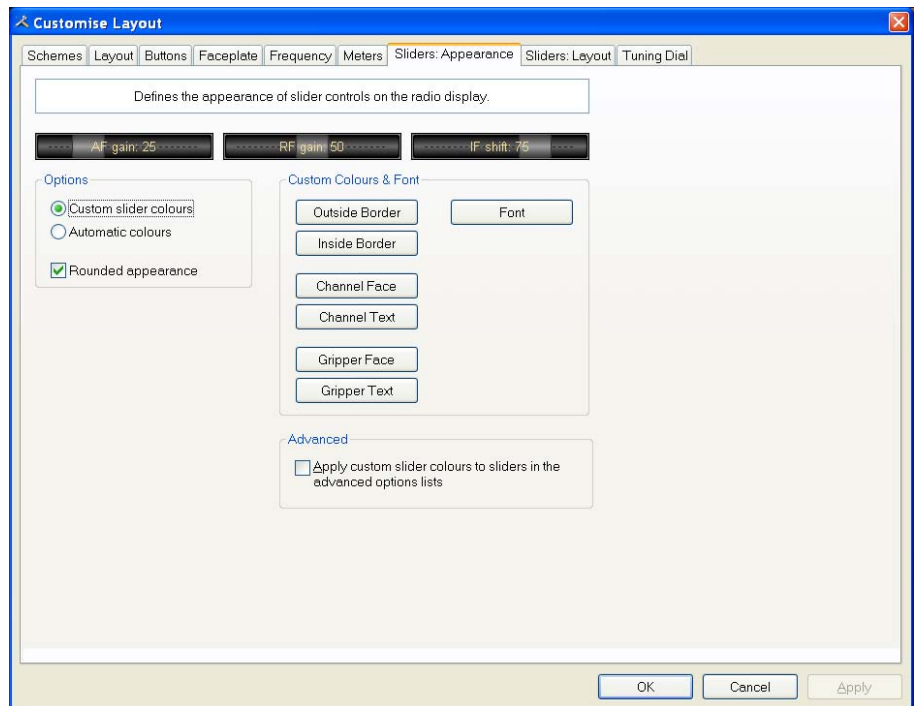

If supported by your radio, sliders are displayed at the bottom of the display. Here you define the appearance of the sliders.


These colours are optionally applied to the sliders in the *Advanced* selection windows (select *Advanced* from the *View* menu).

# Sliders: Layout

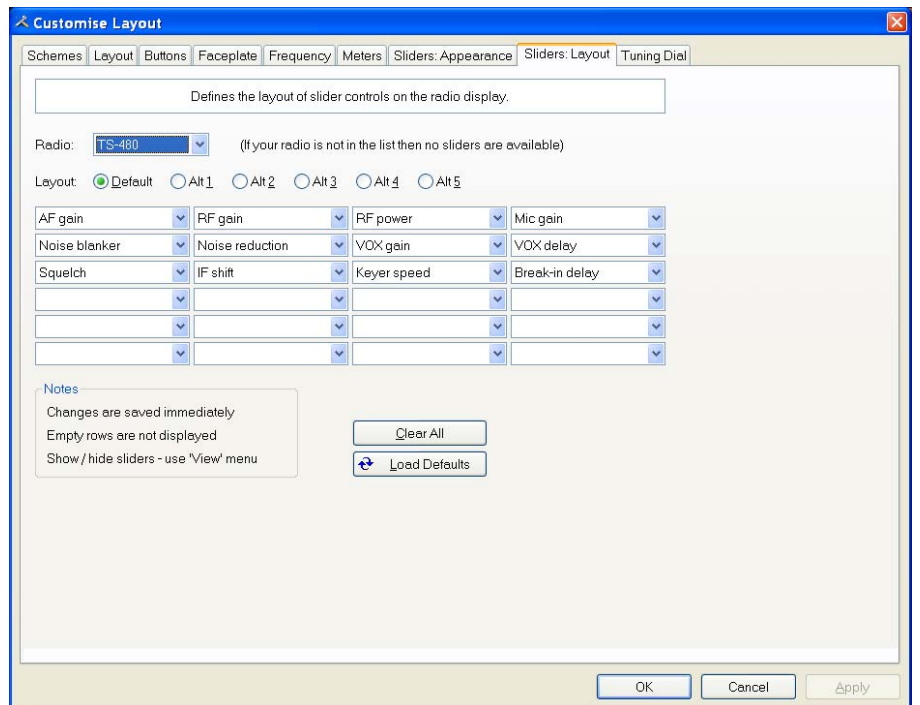

Here you select the sliders to be displayed. Define up to 6 layouts, for example one layout for SSB and another for CW

# Tuning Dial

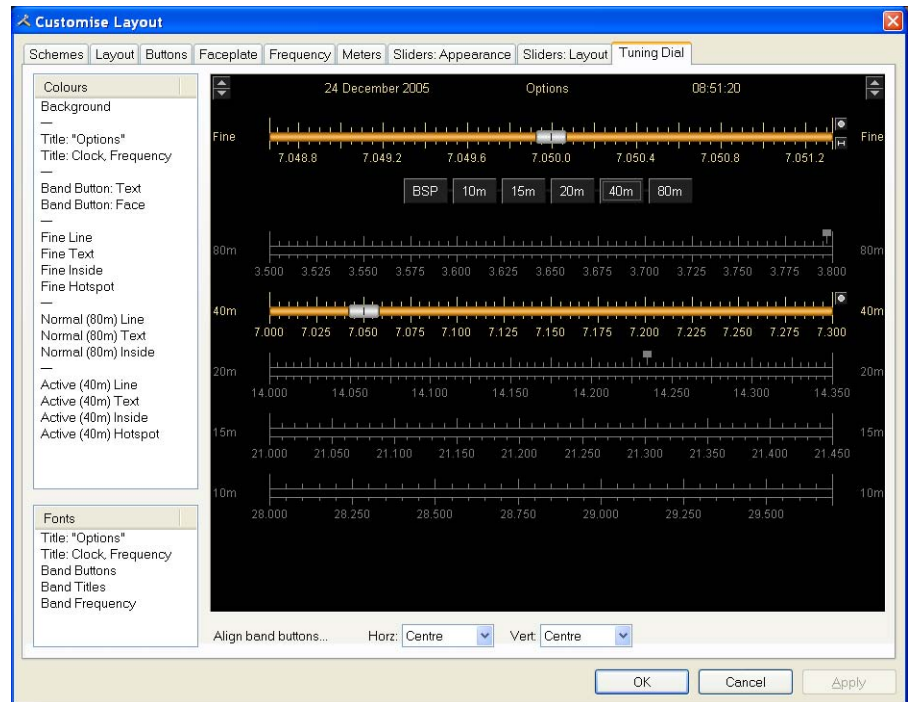

Here you define the colours, fonts and band button positions.



# Program Options

---


## Introduction

Used to define various HRD features, *Program Options* is selected from the *Tools* menu, or by pressing the *Options* button.




---

## Accelerators

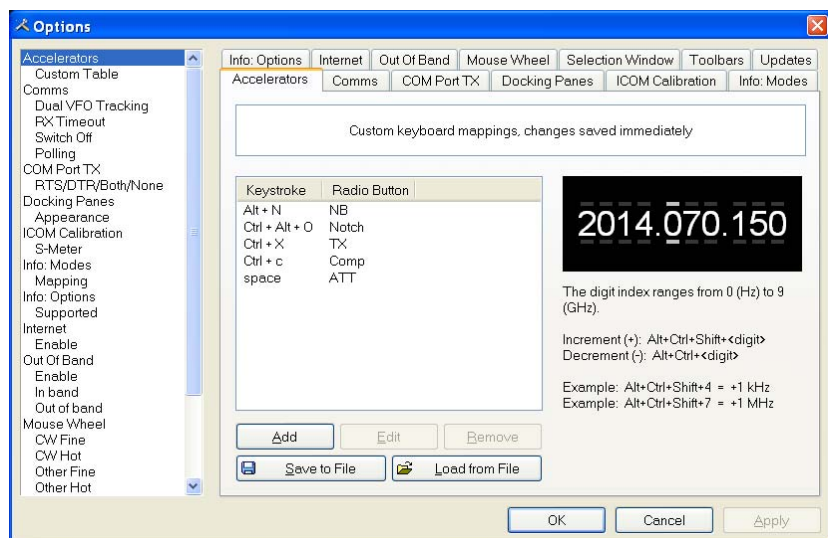

Define accelerators for use with the Keyboard or with programmable interfaces such as the Griffin Powermate.


When you press *Add* the definition window is displayed.

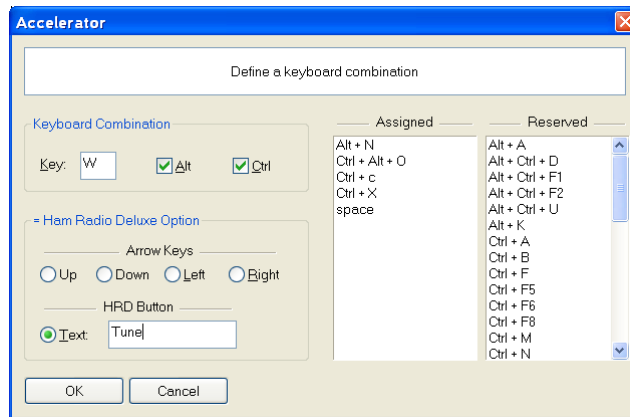

Here Ctrl+Alt+W is assigned to the *Tune* button. Keyboard combinations are assigned to display buttons and arrow keys.

The HRD menu has pre-assigned accelerators; these cannot be redefined.

## Comms

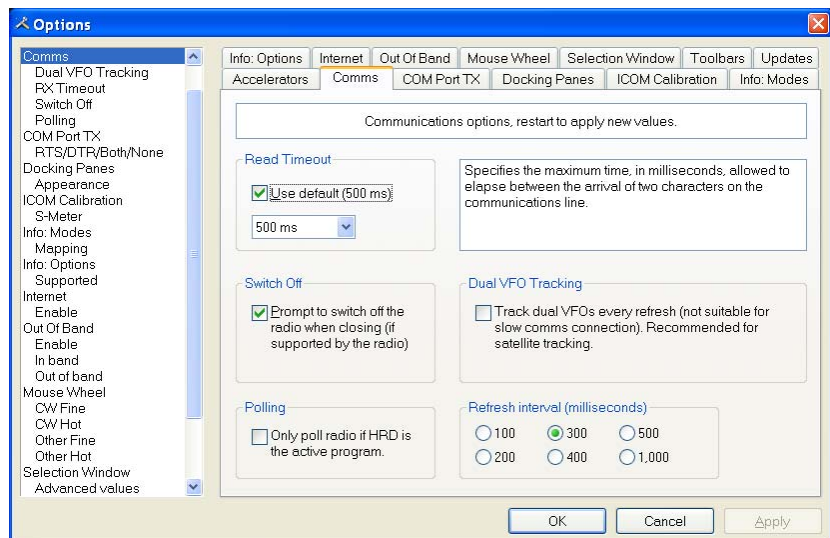


Normally you will not have to change the default settings.

- Read timeout – serial port timeout.
- Switch off – some radios such as the FT-817 can be powered down using a CAT command. If this option is selected you are prompted to switch off the radio.
- Polling – to reduce CPU load for slower systems.
- Dual VFO tracking – if selected both VFO's are tracked on every refresh. Only of use with Satellite Tracking (page 97).
- Refresh interval – the interval between consecutive refreshes of the display.

---

## COM Port TX

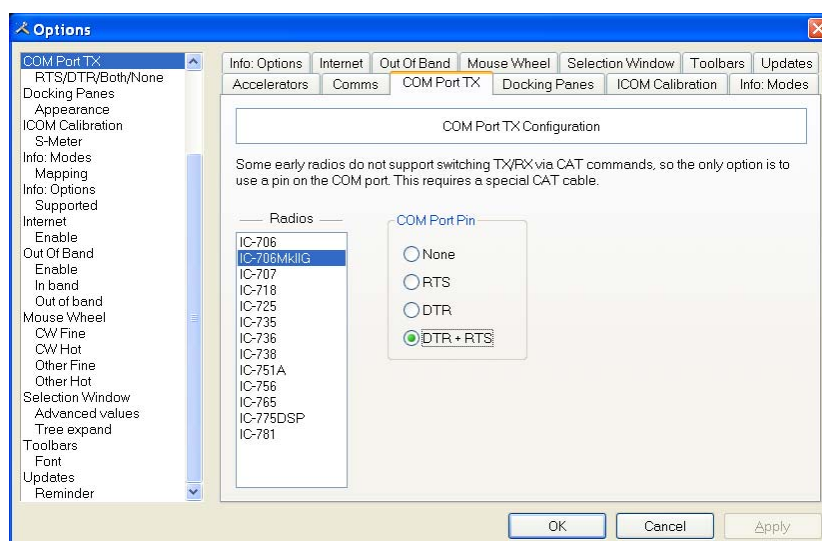


Some early ICOM radios do not support switching between TX and RX using CAT commands. The only way to enable computer controlled TX/RX this is by toggling a COM port pin.

You require a special CAT cable if you select this option.

---

## Docking Panes

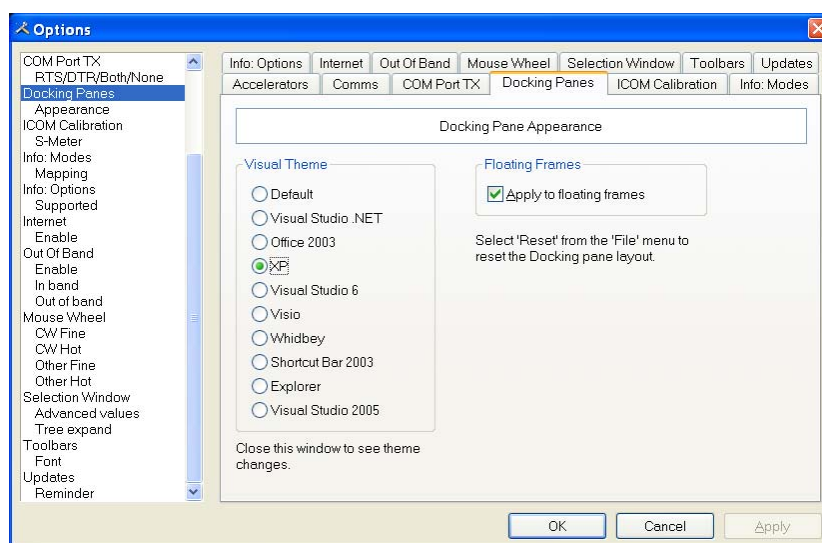


HRD uses the excellent programming library from [Codejock Software](http://www.codejock.com) to support an advanced docking pane option.

Docking panes are used for optional windows such as: *Bandscope*, *Calendar*, *DX Cluster*, *Logbook*, *Selection*, *Shortwave Database* and *WinKey*.

Select whichever visual theme you want – XP is an acceptable default.

You can also use this theme when a docking frame is floating (not docked).

# ICOM Calibration

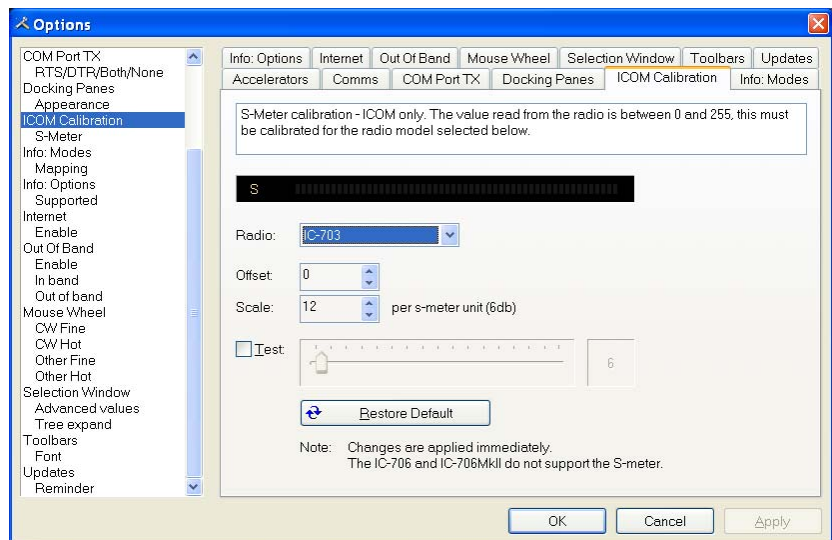


ICOM radios return a S Meter value between 0 and 255, normally 0 is S0, 12 is S1 and so on.

As a S Meter unit is 6 dB the algorithm applied is to divide the returned value by two to get dB, then divide dB by 6 to get S units.

Some radios such as the IC-706 have a different logic – use the Offset and Scale values to adjust the returned values so that the S Meter in HRD corresponds to the S Meter on your radio.


# Info: Modes

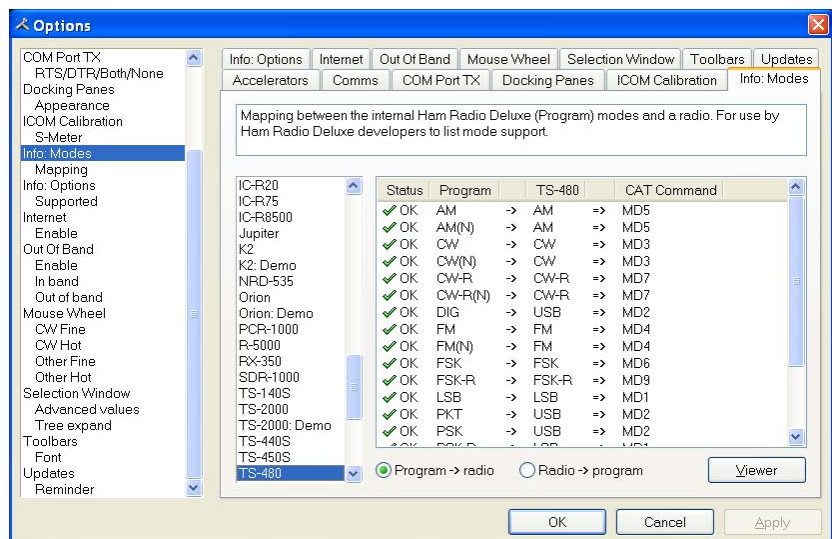

Mainly for use by the HRD programming team, all modes for each radio are listed. For each mode the mapping to the internal HRD mode is shown.



# Info: Options

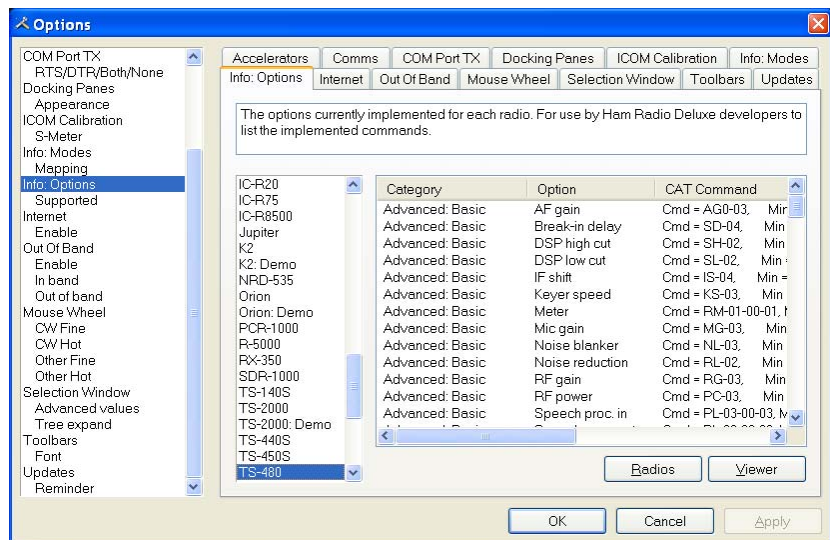


Mainly for use by the HRD programming team, all commands are listed for each radio.

Press *Radio* for a list of all supported radios.


To display the commands:

1. Select a radio,
2. Press Viewer.

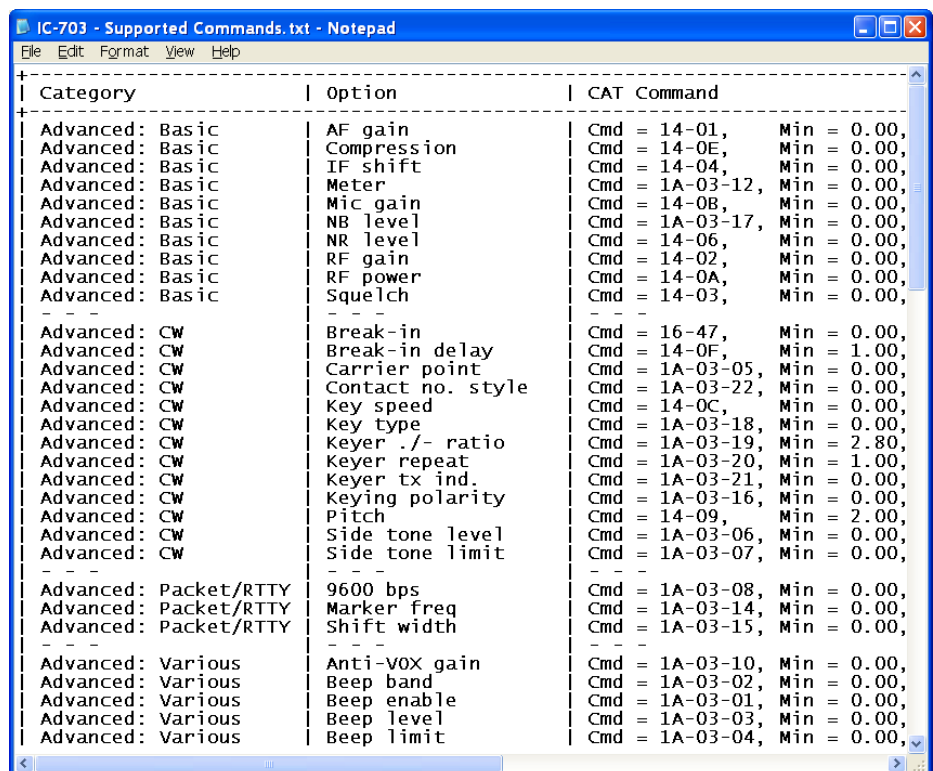

---


## Internet

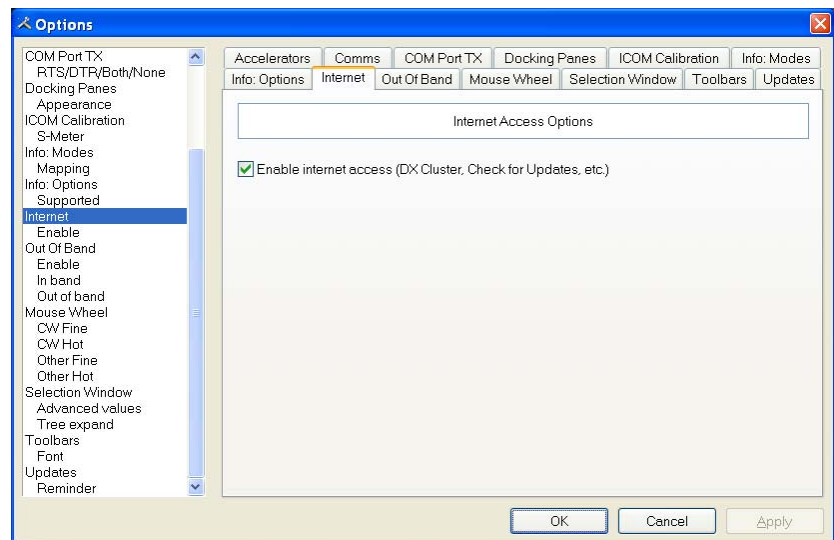

HRD is able to detect whether you have an Internet connection with `InternetGetConnectedState()`. Uncheck this option if you do not want Internet access.


---

## Out Of Band

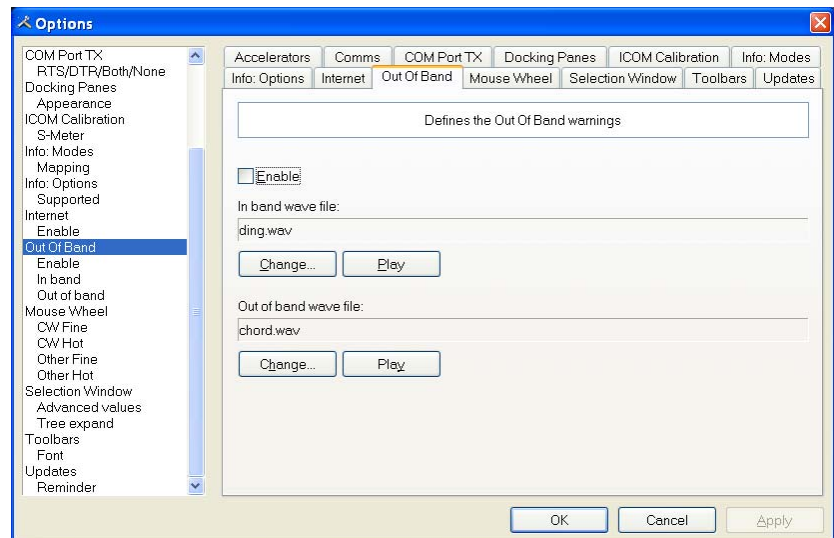


Configure the optional sound files played when you tune in / out of band.

# Mouse Wheel

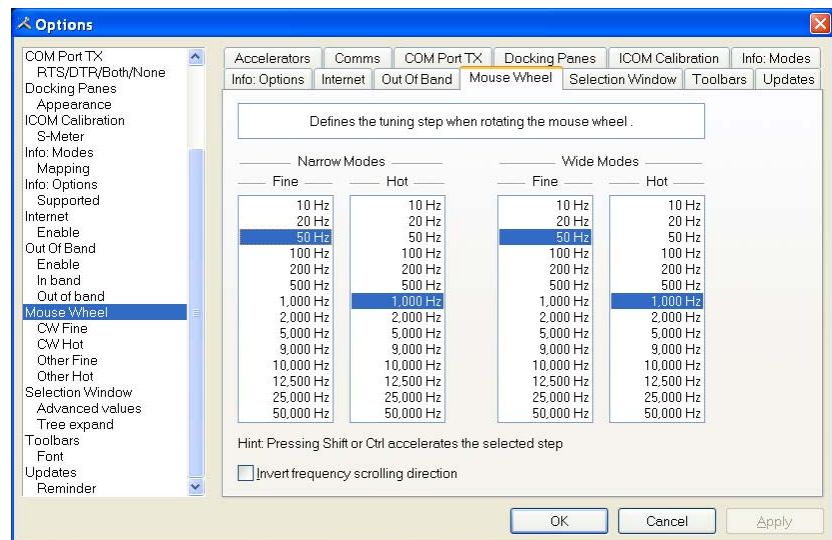

Define the tuning step when rotating the mouse wheel over the active tuning bar.

# Selection Window

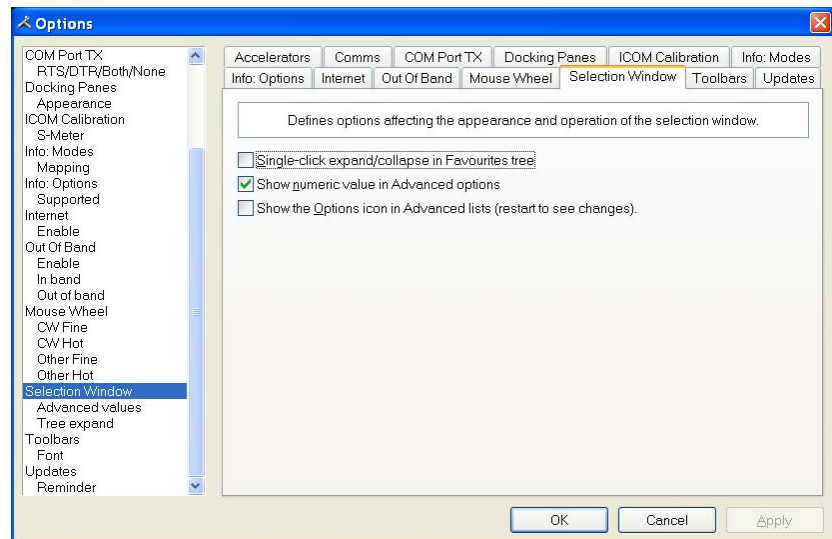

The appearance and operation of the selection window.


Single-click – normally the Favourites tree folders are opened / closed with a double-click. Check this option to enable single-click operation.

Show numeric value – the Select Windows's Advanced slider values are optionally superimposed on the slider.

Show the Options icon – historical support for the version 2 Advanced slider look and feel.

---

# Toolbars

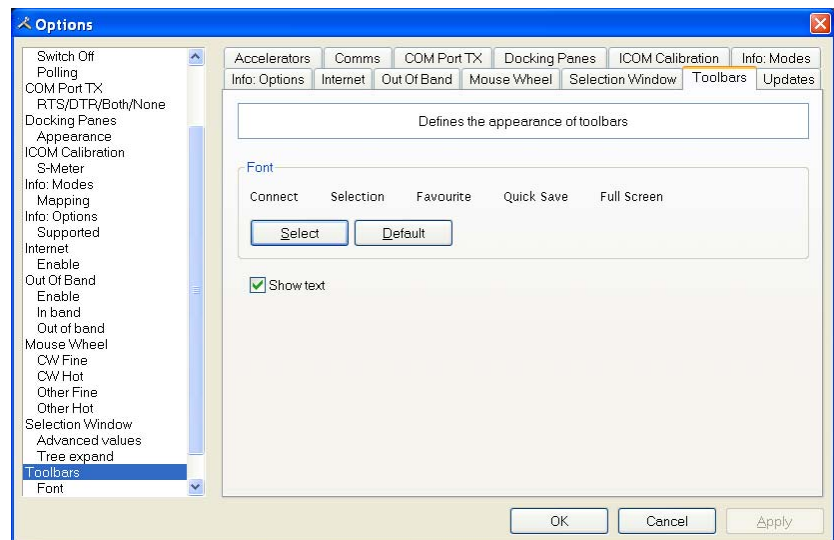


Select the toolbar font and whether text is displayed in toolbars.

The default (suggest) font is Lucida Sans 7 point.

---

# Updates

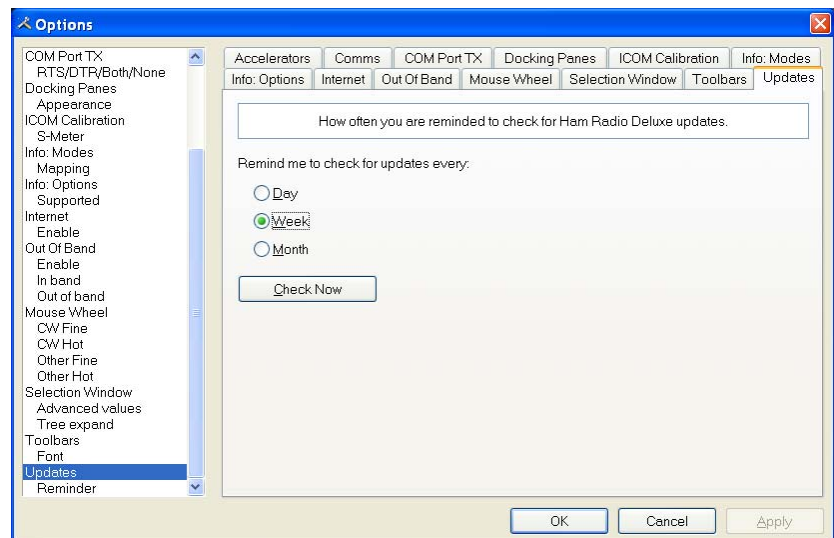

Select how frequently HRD reminds you to check for new updates.

# Audio

---

## Introduction

HRD has a built-in audio grabber and audio playback. The long-term aim is to automatically add audio clips into the logfile.

---


## Audio Grabber

The audio grabber stores incoming audio in MP3 files using the MP3 tags to store information about the radio settings (or any other information you feel to be important).

An alternative to MP3 would be Windows Media format (WMA) but the programming of WMA files is rather complex.

To display the audio grabber select *Audio Grabber* from the *Tools* menu.

### Record

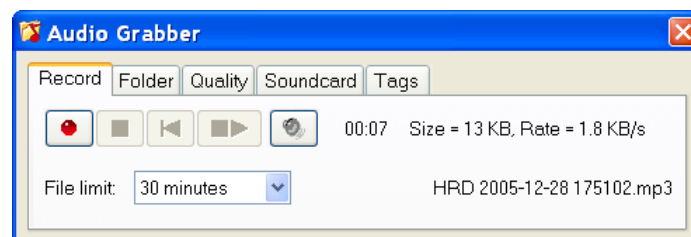


Here you have the standard recording buttons. From left to right:

- Record,
- Stop,
- Reset current recoding,
- Restart (close current file first),
- Browse for MP3 files.


You also set a file limit – a downside of MP3 is that the tags are written at the end of the file when it is closed, so to avoid losing information in the event of an unexpected event it is best to use more, smaller files.

## Folder

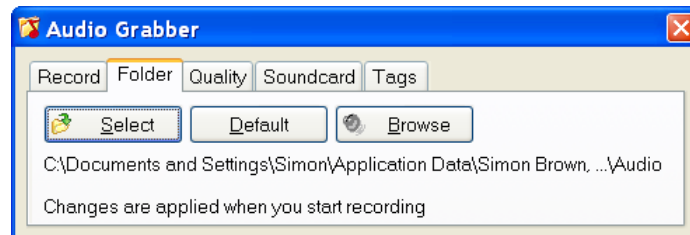


Here you select the folder where the MP3 files are stored.

## Quality

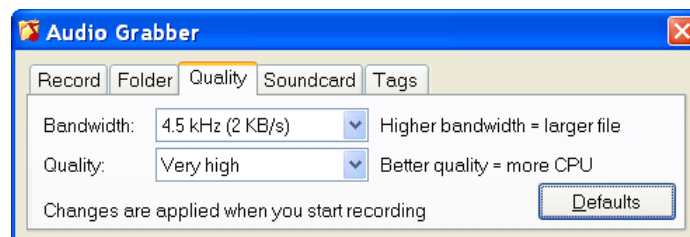


Here you select the bandwidth and quality. Modern computers have more than enough CPU power to support a very high quality. A bandwidth of 4.5 kHz is usually acceptable unless you are recording a WFM broadcast.

## Soundcard

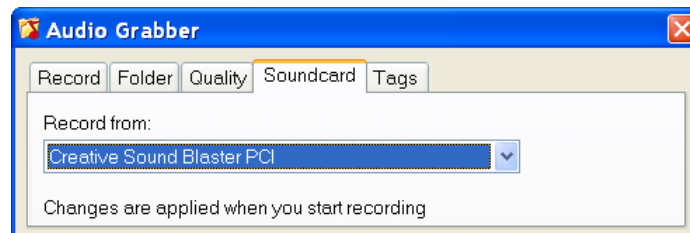

Select the soundcard that you are recording from.

## Tags

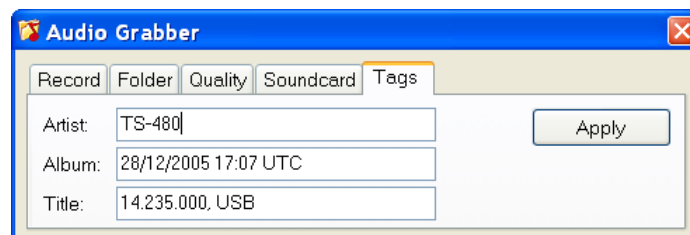



Here you see the values stored in the MP3 tags. To change the values just add the new text and then press *Apply*.


---


## Audio Browser

Use the audio browser to playback MP3 files.

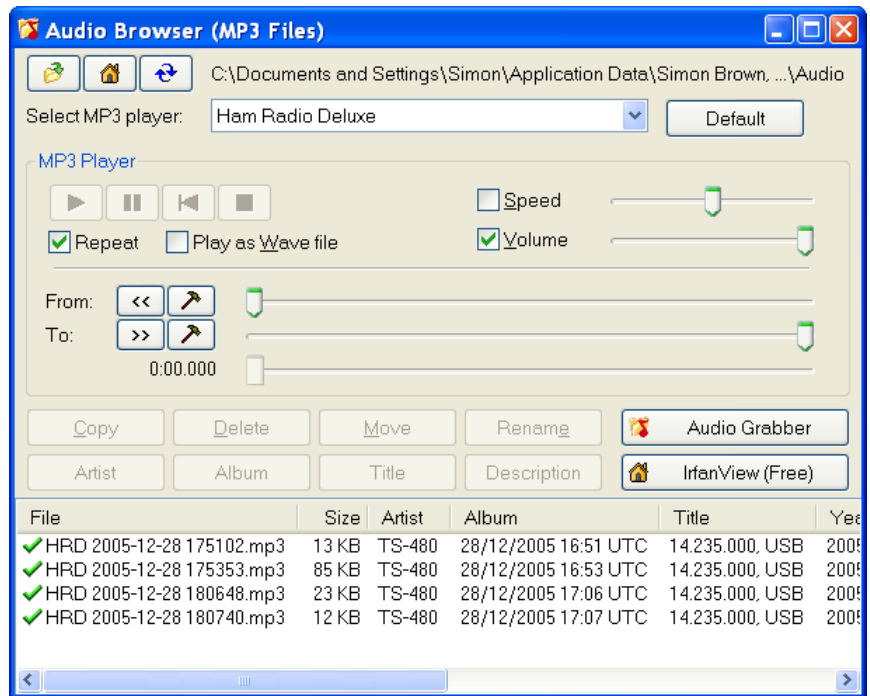

 Select the folder to browse

 Select default folder


 Refresh the current folder

Select MP3 player – a basic MP3 player is built into HRD, however you can select an alternate player such as the excellent Windows Media Player. Press *Default* to select the default player.

Peter PH1PH came across [IrfanView](#) – an excellent utility.

### MP3 Player Options

Select a file to play from the list at the bottom of the window.


 Play currently selected file


 Pause

 Start again


 Stop


#### From

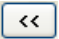 Start at beginning of file

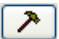 Set 'From' to the current position

#### To

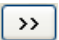 To end of file

 Set 'To' to the current position

Use the *From* and *To* slider positions to select the part of the file to repeated over and over and over again. This is useful for determining exactly what the station was sending.

### **Other Options**

The other options are:

- Copy – copy the selected files to another folder.
- Delete – delete the selected files.
- Move – move the selected files to another folder.
- Rename – rename the selected file.
- Artis / Album / Title / Description – change the MP3 tags.



# Auxiliary Switching

---

## Introduction

A standard PC comes equipped with an 8-bit parallel port that can be used to switch auxiliary equipment such as antennas, bandpass filters and power amplifiers.


Ham Radio Deluxe supports the parallel port via fully configurable manager and monitor displays.

Typical uses of this option are to switch antennas, either automatically as the frequency changes, or by selecting an option from the Parallel Port pane of the selection window.

---

## Technology

The parallel port sends 8 bits at a time. The layout of the parallel port pins is shown below.



The data pins are shown in red; D0 is pin 2, D7 is pin 9.

To indicate that a bit has a value of 1, a charge of 5 volts is sent through the correct pin. No charge on a pin indicates a value of 0. This is a simple but highly effective way to transmit digital information over an analog cable in real-time.

---

## Manager

The manager window is invoked from the *Tools > Parallel Port* menu.

### Definitions

Each definition consists of:


- [X] Enabled selection – if not checked then the definition is ignored when Ham Radio Deluxe detects a new frequency. The definition is still shown in the selection window if this option is enabled.
- Title – a description of the antenna or component that will be switched when the entry is selected.

- From – the lower end of the frequency range.
- To – the upper end of the frequency range.
- Port – the LPT port to be switched by the definition.
- D0-D7 – the parallel port data bit settings, each bit is either 1 (on) or 0 (off). D0 is pin 2, D7 is pin 9.

## Port Address

The default port addresses for LPT1, LPT2 and LPT3 are 0378, 0278 and 03BC respectively. If your computer has a different configuration just select the address that corresponds to the port.

You will find the port address via the *Device Manager* settings display located in the *System* control panel applet.

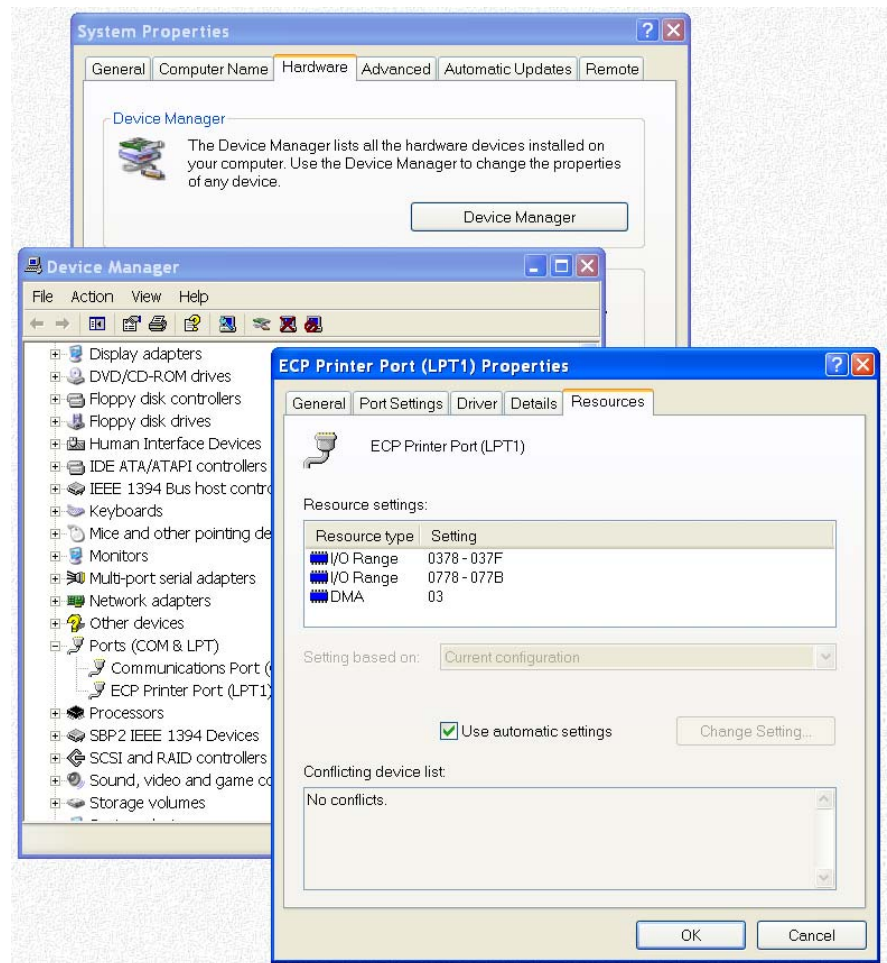

In the Windows XP example below the base address is 0378.

## Various

The options are:

- Auto-switch: as the frequency displayed by Ham Radio Deluxe changes a lookup is made against the parallel port definitions and the parallel port switched to the configuration for the first definition in the list that matches the new frequency.

- Selection window: displays a Parallel Port pane in the main HRD selection window. See Selection Window on page 51.

---

## Monitor

The monitor window is started from the *Tools > Parallel Port* menu. The monitor:


- shows the current state of the data pins for a selected parallel port,
- allows you to select a definition, and
- toggle the data pins directly.

The Definition field shows the definition that matches the current pin selection (if any).

---

## Selection Window

To display the selection window select the selection window option in the Parallel Port Manager.

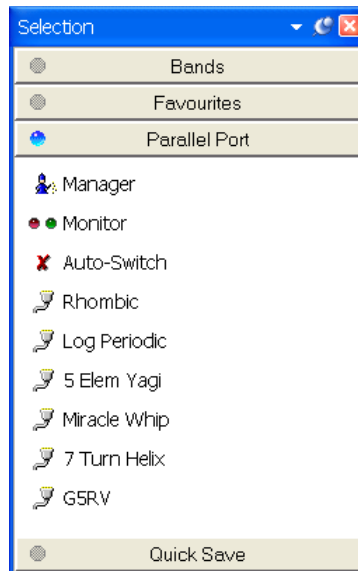

The options are:

- Manager – starts the Parallel Port Manager.
- Monitor – starts the Parallel Port Monitor.
- Auto-switch – if enabled (tick) then a match is made with the first enabled definition when the frequency changes. If not enabled (cross) then a match is not made.
- Definitions – click on a definition to apply the definition to the port.

The icon indicates whether a definition that has been enabled or disabled. Disabled definitions can be selected in this window; they are only ignored when matching a new frequency against the list of definitions.



# Band Layouts

---

## Introduction

A necessary feature of a fully customizable radio program such as HRD is the definition of custom band layouts.


The IARU regions have own band plans; there is no doubt that these will change in the future.

Consider also the traditionalist who has never owned a microphone in his life and is only interested in the CW portions of the bands – he wants his own band layouts.

---

## Manager


To start the Manager select *Manager* from the *Bands* menu.

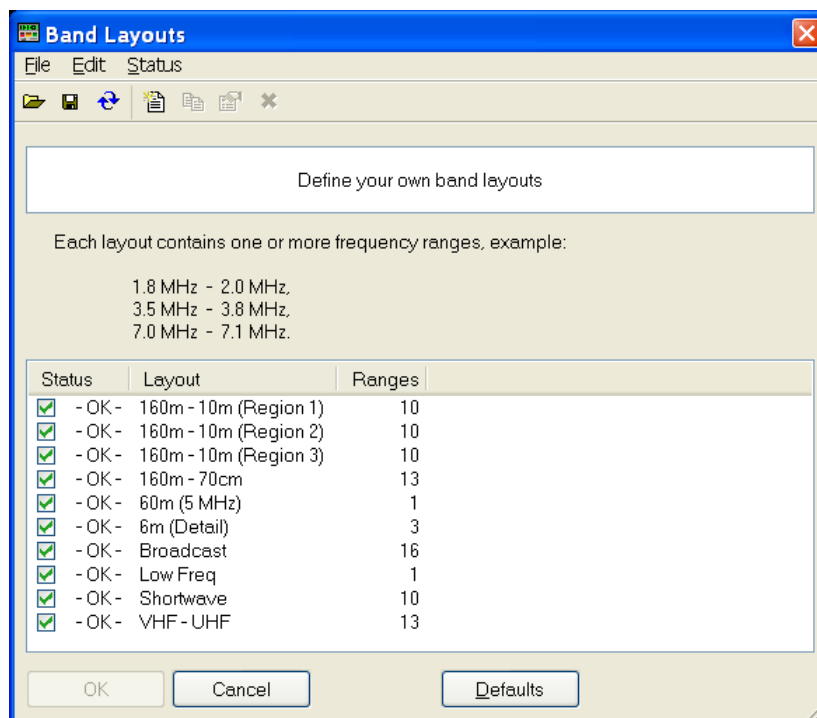

Here you see the existing definitions. In the *Edit* menu you have the expected *New*, *Copy*, *Modify* and *Delete* options.

# Adding A Definition


In this example a band layout is created for our CW enthusiast. Select *New* from the *Edit* menu to create a new definition using the *Band Layout Editor*.

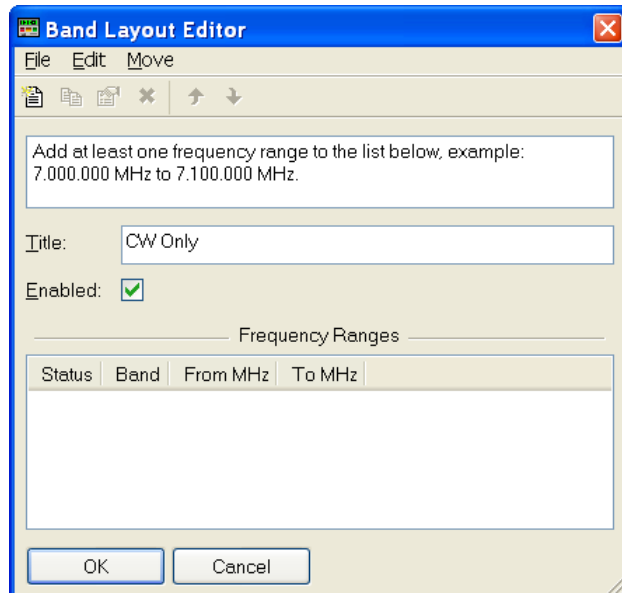

In the *Title* field enter *CW Only*.

From the *Edit* menu select *New* to define a new frequency range.

- In the *Band* field enter *160m*
- In the *From* field enter 1.800.000
- In the *To* field enter 1.830.000
- Ensure *Enable* is checked
- Press *OK*

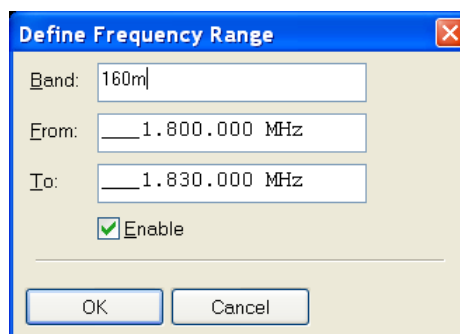




When you press OK the frequency range is added to the band layout.

Repeat for 80m and 40m:

- 80m, 3.5MHz to 3.55MHz,
- 40m, 7.0MHz to 7.05MHz.

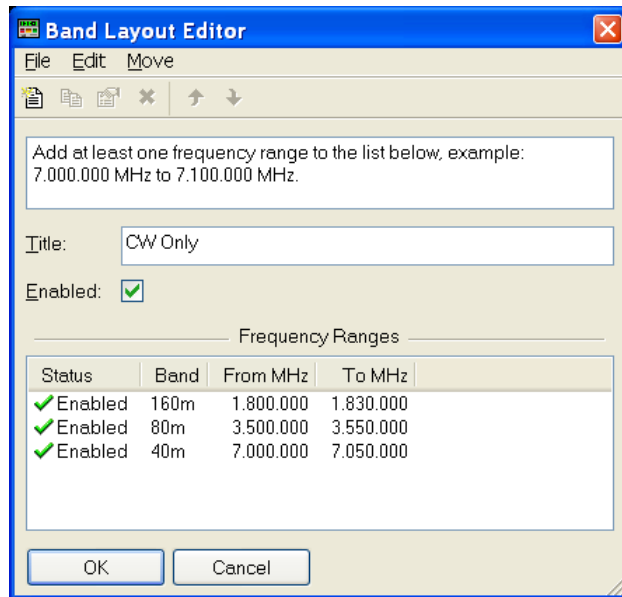The band layout now looks like this:



To rearrange the order of the frequency ranges just select a range and use the *Move* menu options or the Move buttons  .

When you have finished your new layout press *OK*. The *CW Only* definition is added to the band layouts. In the Band Layouts window press *OK* to save the definitions and close the window.

---

## Copying A Definition

To copy an existing band layout:

- Start the Manager,
- Select the entry to be copied,
- Select *Copy* from the *Edit* menu,
- Enter the new title,
- Change the frequency ranges are appropriate,
- Press *OK*.

---

## Selecting

To select a band layout either:

1. Open the *Bands* pane in the Selection window (select *Display* from the *Bands* menu) and select an entry in the list, or
2. Click on the Band Title *160m – 10m (Region 1)* in the radio display and select a new layout from the popup window.

### 160m - 10m (Region 1)

The screenshot shows a software window titled "160m - 10m (Region 1)". Inside, there is a list box titled "Bands" with a close button (X) in the top right corner. The list contains the following items:

- 160m - 10m (Region 1)
- 160m - 10m (Region 2)
- 160m - 10m (Region 3)
- 160m - 70cm
- 60m (5 MHz)
- 6m (Detail)
- Broadcast
- Low Freq
- Shortwave
- VHF - UHF
- CW Only

Below the list is a button labeled "Manager". The background of the window features a frequency scale with several tick marks and labels: "14.", "40.2", "24.930", "24.950", "21.200", and "21.250".



# DDE Support

---

## Introduction

HRD uses dynamic data exchange (DDE) for inter-process communication.


DDE allows two or more applications running simultaneously to exchange data and commands.

See also 3<sup>rd</sup>-Party Programs on page 121.

---

## Available Support

Select *DDE Monitor* from the *Tools* menu to display the supported DDE items.

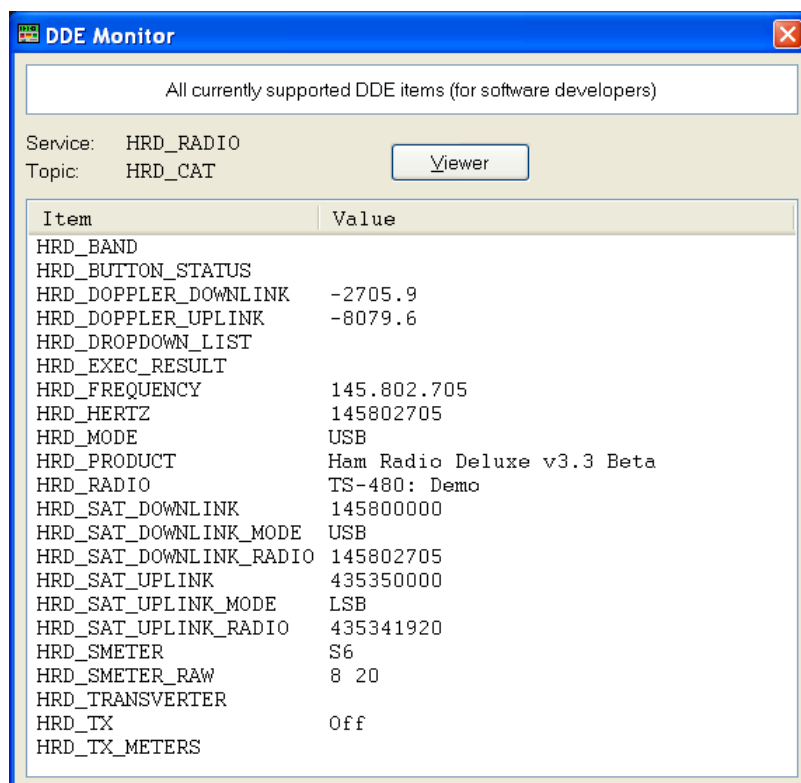

---

## Commands

The commands below are supported by HRD.

## Add ADIF Record

ADIF <data>

Adds a record to the logbook; the record is supplied in ADIF format. Used by PSK31 Deluxe.

## Refresh

REFR button\_status

Refreshes all buttons.

REFR dropdown\_list

Refreshes all dropdown.

## Set Button

BUTN button\_title=value

Sets a button state. For normal buttons the value is either *on* or *off*.

If title starts with @ then it's a dropdown, the value must be a dropdown value.

## Set Dropdown

DROP button\_title=value

Selects a dropdown value.

## Set Frequency

FREQ <hertz>

Sets the frequency to the value supplied in Hertz.

## Set Mode

MODE <mode>

Sets the mode to the supplied value.

## Top Window

TOPW

Makes the HRD the top-most window in the Z-order, in other words brings HRD to the front of your monitor.

# DX Cluster

---

## Introduction

A DX Cluster is a means for Amateur (Ham) Radio operators to tell each other, in real-time, about DX stations (other interesting or rare Amateur Radio stations all over the world).

(From <http://www.dxcluster.org/> by Dirk Koopman G1TLH)

One station is set up with Packet Cluster and is linked to one or more other stations who have installed the software. These nodes when connected are called a cluster. Clusters are connected to clusters, expanding the network. Individual users connect to the nodes on a frequency different from what the node stations are linked on. Users are capable of announcing DX spots and related announcements, send personal talk messages, send and receive mail messages, search and retrieve archived data, and access data from information databases among its many features.

(From <http://www.dxcluster.org/> by Chuck K6PBT)

HRD supports:

- [OH2AQ](#) web-based cluster (the original and most widely used),
- [HRD's](#) own web-based cluster,
- Direct connections to a DX Spider node using a DX cluster client (which in turn uses the telnet protocol).

The OH2AQ and HRD clusters are available using just your web browser.

# OH2AQ

**DX Summit**  
Wherever you are

**NO FRAMES**

Spot Database Search

**DX SPOTS**  
25, 50 HF, 50 VHF  
HF/CW, HF/PHONE  
VHF/CW, VHF/PHONE  
250, 1,000  
or 10,000 pieces.  
Most Wanted  
SEND your own!

**ANNOUNCEMENTS**  
25, 250, 1,000  
or 10,000 pieces  
SEND your own!

**WWW's**  
25, 250, 1,000  
or 10,000 pieces

**CUSTOM SPOTS**  
137kHz, 1.8MHz,  
3.5MHz, 7MHz, 10MHz,  
14MHz, 18MHz,  
21MHz, 24MHz,  
28MHz, 50MHz,  
70MHz, 144MHz,  
430MHz, 1.2GHz,  
10GHz,  
Beacon, Digital, IOTA,  
QRP, Satellite, Mobile

W9CA	24895.0	FJ2/WB9Z	still here Jerry?	2042	22	Dec
N9IW	24895.1	FJ2/WB9Z	calling cq	2009	22	Dec
N09Z	24895.0	FJ2/WB9Z		2001	22	Dec
N9IW	24950.0	FJ2/WB9Z	jerry tnx for 12m	1956	22	Dec
K7JE	24950.0	FJ2/WB9Z	95 plus 10 into AZ	1956	22	Dec
W6VA	24950.0	FJ2/WB9Z		1954	22	Dec
K5ZG	24895.0	TI8CBT		1951	22	Dec
DF4FL	24967.0	EA8/OZ5BF		1212	22	Dec
W6TA	24950.0	N7OD	TEST!!	1857	21	Dec
3F3D3C-@	24895.1	RN6HZ	CQ BIG SIGNAL	0853	21	Dec
RN6HZ	24895.0	RN6HZ	CQ test prop	0836	21	Dec
WP4NIX	24935.0	VE7NS	59 na-036	2136	20	Dec
WP4NIX	24935.0	VE7NS	59 NA-036	2012	20	Dec
K4KAL-@	24935.0	VE7NS	Strong in GA.	2019	20	Dec
W5RY	24935.0	VE7NS		2006	20	Dec
KA2FIR	24930.0	YV5B/B		1912	20	Dec
KA2FIR	24930.0	ZS6DN/B		1910	20	Dec
DL7YS	24940.0	DL7JRD	cq on beacon, fb idea	1008	19	Dec
I25EKV	24930.0	ZS6DN/B	599	1006	19	Dec
LU3HY	24950.0	ZD7VC	59 in LU	1418	18	Dec
IW1QJ	24950.0	ZD7VC	S9+ on my R8, strong and Easy	1415	18	Dec
DL9NDC	24950.0	ZD7VC	IH74 55 - 59 Bruce in JN59	1406	18	Dec
DL5FU	24895.0	Z2/UA4WHX	fb sigs nw	1406	18	Dec
WI2T	24895.1	Z2/UA4WHX		1404	18	Dec
TI8CBT	24895.2	Z2/UA4WHX	Pse Beam To Costa Rica	1403	18	Dec

**DX SUMMIT IS SPONSORED BY**

**OH2AQ - OH0AAQ**  
CU in the Contest!

**Kolumbus**

27 Aug ja3ggi (15) I= 93, A= 12, K= 2, R= 57 No storms=) No storms  
27 Aug k3ske (12) I= 93, A= 12, K= 2, NO STORMS ; NO STORMS  
27 Aug dl7afv (11) I= 93, A= 12, K= 2, NO STORMS=) NO STORMS  
26 Aug ja3ggi (21) I= 93, A= 12, K= 2, R= 76 No storms=) No storms  
26 Aug ja3ggi (18) I= 93, A= 12, K= 2, R= 76 No storms=) No storms

# HRD

http://dxcluster.ham-radio.ch - Ham Radio Deluxe - DX Cluster Analysis - Microsoft Internet Explorer

File Edit View Favorites Tools Help

**Top 50**    **24 MHz**    **UTC**    **Spotter**    **Comment**

<a href="#">P32/WB9Z</a>	24895.0	22 Dec 20:42	W9CA	still here Jerry?
<a href="#">P32/WB9Z</a>	24895.1	22 Dec 20:09	N9IW	calling cq
<a href="#">P32/WB9Z</a>	24895.0	22 Dec 20:01	N09Z	
<a href="#">P32/WB9Z</a>	24950.0	22 Dec 19:56	N9IW	jerry tnx for 12m
<a href="#">P32/WB9Z</a>	24950.0	22 Dec 19:56	K7JE	95 plus 10 into AZ
<a href="#">P32/WB9Z</a>	24950.0	22 Dec 19:54	W6VA	
<a href="#">TI8CBT</a>	24895.0	22 Dec 19:51	K5ZG	
<a href="#">EA8/OZ5BF</a>	24967.0	22 Dec 12:12	DF4FL	
<a href="#">N7OD</a>	24950.0	21 Dec 18:57	W6TA	TEST!!
<a href="#">RN6HZ</a>	24895.0	21 Dec 08:36	RN6HZ	CQ test prop
<a href="#">VE7NS</a>	24935.0	20 Dec 21:36	WP4NIX	59 na-036
<a href="#">VE7NS</a>	24935.0	20 Dec 20:12	WP4NIX	59 NA-036
<a href="#">VE7NS</a>	24935.0	20 Dec 20:19	K4KAL	Strong in GA.
<a href="#">VE7NS</a>	24935.0	20 Dec 20:06	W5RY	
<a href="#">YV5B/B</a>	24930.0	20 Dec 19:12	KA2FIR	
<a href="#">ZS6DN/B</a>	24930.0	20 Dec 19:10	KA2FIR	
<a href="#">DL7JRD</a>	24940.0	19 Dec 10:08	DL7YS	cq on beacon, fb idea
<a href="#">ZS6DN/B</a>	24930.0	19 Dec 10:06	I25EKV	599
<a href="#">ZD7VC</a>	24950.0	18 Dec 14:18	LU3HY	59 in LU
<a href="#">ZD7VC</a>	24950.0	18 Dec 14:15	IW1QJ	S9+ on my R8, strong and Easy
<a href="#">ZD7VC</a>	24950.0	18 Dec 14:06	DL9NDC	IH74 55 - 59 Bruce in JN59
<a href="#">Z2/UA4WHX</a>	24895.0	18 Dec 14:06	DL5FU	fb sigs nw
<a href="#">Z2/UA4WHX</a>	24895.1	18 Dec 14:04	WI2T	
<a href="#">Z2/UA4WHX</a>	24895.2	18 Dec 14:03	TI8CBT	Pse Beam To Costa Rica
<a href="#">Z2/UA4WHX</a>	24894.9	18 Dec 14:10	YU1JF	simplex
<a href="#">Z2/UA4WHX</a>	24894.9	18 Dec 14:10	EA5DYB	
<a href="#">UA4WHX</a>	24895.0	18 Dec 14:10	EA5DYB	
<a href="#">Z2/UA4WHX</a>	24895.0	18 Dec 13:59	I25EKV	Wkd Iso
<a href="#">Z2/UA4WHX</a>	24895.0	18 Dec 13:56	ON5JY	pse vlad 17m cw
<a href="#">ZD7VC</a>	24950.0	18 Dec 13:55	HA1RW	rare opening but chatting style
<a href="#">Z2/UA4WHX</a>	24894.9	18 Dec 13:54	OK2PAY	BACK CW...
<a href="#">Z2/UA4WHX</a>	24940.0	18 Dec 13:49	IT9FGA	CQ CQ
<a href="#">Z2</a>	24940.0	18 Dec 13:50	SP4Z	heavy QSB on 12m from NEOFEU
<a href="#">ZD7VC</a>	24950.0	18 Dec 13:48	DF2UU	cq
<a href="#">Z2/UA4WHX</a>	24940.0	18 Dec 13:48	I25EKV	ISO Few Takers
<a href="#">Z2/UA4WHX</a>	24940.0	18 Dec 13:46	OE1DKC	
<a href="#">Z2/UA4WHX</a>	24940.1	18 Dec 13:41	GB7CGL	CQ now vy easy

**Top 50**    **Top 250**  
\* 30s refresh \*    \* 180s refresh \*

ALL    ALL

HF    HF

1.37 MHz    1.37 MHz  
1.8 MHz    1.8 MHz  
3.5 MHz    3.5 MHz  
7 MHz    7 MHz  
10 MHz    10 MHz  
14 MHz    14 MHz  
18 MHz    18 MHz  
21 MHz    21 MHz  
24 MHz    24 MHz  
28 MHz    28 MHz

VHF    VHF

50 MHz    50 MHz  
70 MHz    70 MHz  
144 MHz    144 MHz  
220 MHz    220 MHz  
430 MHz    430 MHz  
1.2 GHz    1.2 GHz  
2.3 GHz    2.3 GHz  
3.4 GHz    3.4 GHz  
5.6 GHz    5.6 GHz  
10 GHz    10 GHz  
24 GHz    24 GHz  
47 GHz    47 GHz

Announce    Announce  
WCV    WCV  
WMV    WMV

## Starting

Select *DX Cluster* from the *Tools* menu.

DX	Freq	UTC	Spotter	Comment
A71BX/P	14022.0	23 Dec 09:47	4Z5ML	Qatar: CQ
G0CGL	10109.6	23 Dec 09:47	JJ2LPV	England:
GØ3YDX	10106.5	23 Dec 09:43	DC9ZP	Wales:
EA1VHF/B	144404.4	23 Dec 09:44	G4RRA	Spain: IN53RE<TR>IC
GW3YDX	10106.3	23 Dec 09:42	JJ2LPV	Wales:
VR2MY	18132.0	23 Dec 09:42	LX1AX	Hong Kong: 58-9
XU7TZG	18128.0	23 Dec 09:40	DC9ZP	Cambodia: Sri Call
A43AXK	14005.4	23 Dec 09:41	F8DGY	Oman:

When you click on an entry the frequency is sent to the HRD display.

## Configuration

Press  to open the Configuration window.

### Cluster Source

There are three possible sources for DX spots:

- OH2AQ – the original and most widely used web-based cluster. The spots are read by parsing data from the pages on the OH2AQ site at <http://oh2aq.kolumbus.com/dxs/>.
- Ham Radio Deluxe – a web-based cluster with data downloadable in CSV format from <http://dxcluster.ham-radio.ch/>. These web pages were made available by the HRD team as the OH2AQ cluster can be overloaded at times, especially at the weekend and during contests.
- Custom – using the DX Cluster Client built into HRD. Here you connect to any DX cluster node.

### OH2AQ / Ham Radio Deluxe

Using these web-based clusters is the easiest way to get started. All you need is an Internet connection.

OH2AQ supports the *Spot* option; the Ham Radio Deluxe cluster offers a faster response when OH2AQ is overloaded.

### Custom – DX Cluster Client

This option is only supported on Windows NT/2K/XP. It is not supported in Windows 98/ME/SE.

In the DX Cluster Client pane you connect to a DX Spider cluster, for example GB7MBC in sunny Morecambe or HB9DRV in snowy Laax.

```

Connecting to gb7mbc.spoo.org port 8000...
Connected

+-----+
+ Warning: Computer Misuse Act (1990) UK applies +
+ This system may only be accessed by Radio Amateurs using their real +
+ callsigns and in accordance with their jurisdiction's licensing +
+ conditions. All connections to this system are recorded. +
+-----+

login: gd4eli

*** Connected to GB7MBC

Hello Simon, this is GB7MBC in Morecambe, Lancashire
running DXSpider V1.52 build 58.404
#
# Welcome to GB7MBC, the North West DX-Cluster in I084NB
# Your SysOps are Ian, GOVGS and Linda GOYLM - 01524 421164
#
# To get more information please type MOTD
# To read our usage policy please type POLICY
Linda and Ian would like to wish all of you a very Merry Christmas
and a Happy and Peaceful New Year. Many thanks for your support
this year.
Cluster: 306 nodes, 18 local / 2574 total users Max users 2574 Uptime 0 02:03
GD4ELI de GB7MBC 23-Dec-2005 1008Z dxspider >
DX de IK1XVO: 14202.9 A43XA special call 1009Z JN35
DX de F8CKS: 7086.0 F5PRR/P dmf55012 moulin de VILLI 1007Z
DX de 9A2F: 18160.0 HZ11K Manfred cq 1009Z JN86
DX de DM2AU0: 18083.1 4S7NE nelson 1011Z
DX de VE1TK: 3799.7 LA6WEA cqdx 1009Z

```


Here GD4ELI has logged on to GB7MBC. DX spots are displayed in this window as they are received and are sent to the DX Cluster window for immediate display.

DX	Freq	UTC	Spotter	Comment
A43XA	14202.9	1009	IK1XVO	Oman: special call
F5PRR/P	7086.0	1007	F8CKS	France: dmf55012 moulin de V
HZ11K	18160.0	1009	9A2F	Saudi Arabia: Manfred cq
4S7NE	18083.1	1011	DM2AU0	Sri Lanka: nelson
LA6WEA	3799.7	1009	VE1TK	Norway: cqdx
007UZ	10138.5	1011	007UZ	Belgium: CQ OLIVIA
UA9FGR/MM	14177.0	1011	G6IQJL	Asiatic Russia: Ken, rough S
HA3UU	144370.0	1011	OE3DXA	Hungary: cq 1st
007UZ	10138.5	1011	007UZ	Belgium: CQ OLIVIA

The advantage here is that you can apply any filtering supported by the DX Spider node you connect to. If your interest is European 144MHz then you don't want to see 144MHz spots from the rest of the world.

## Options


Press ► to enable regular updates; the update interval is set by pressing ⌘ (not applicable is using a custom DX cluster). Press ↻ to refresh the display.

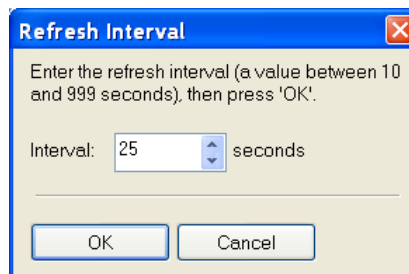


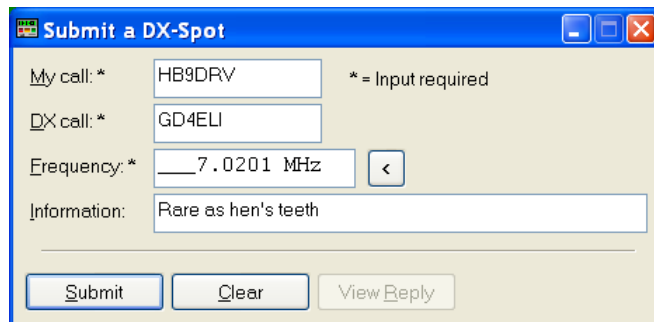
Press aA to change the font size.

Select an entry in the display, then press QRZ to perform a lookup of the station from the [QRZ website](#).



Press  to display the homepage for the selected source (not available if using a custom DX cluster).

Press  to submit a spot (not available is using the HRD source).







# Favourites

---

## Inspiration


Obviously Internet Explorer had an influence here – as most computer users have experience with web browsers a conscious decision was made to use familiar concepts.

Favourite definitions are selected from the *Favourites* pane in the Selection window.

---

## Manager

Start the manager from the Favourites menu or the Favourites pane in the Selection window. It is designed to be easy to use – let's see.

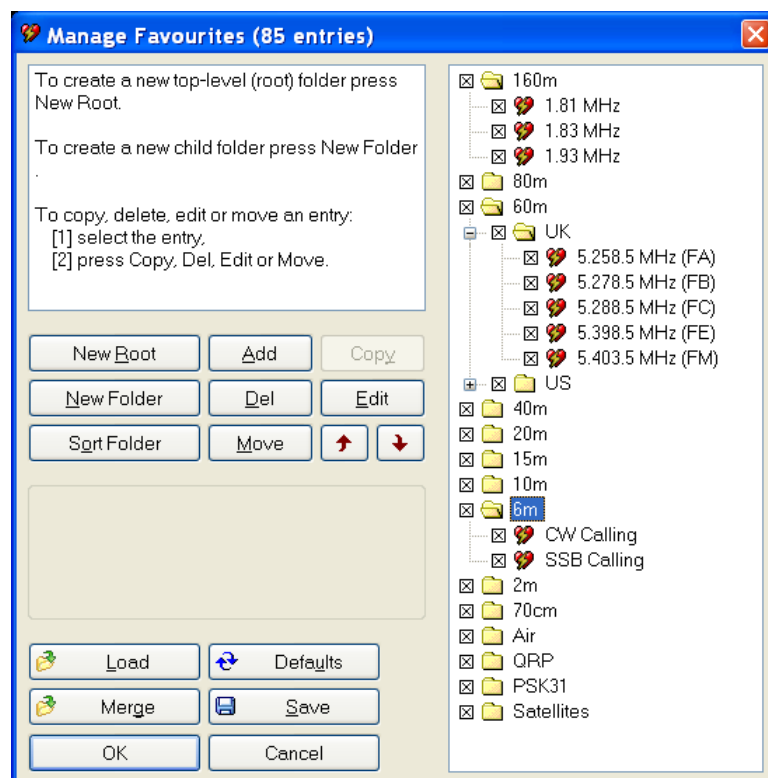


New Root – create a new top-level (root) folder. Folders are not saved if they are empty (no child folders or definitions).

New Folder – create a new folder as a child of the currently selected folder.

Sort Folder – sort the entries in the currently selected folder:

- By title,
- By ascending frequency, or
- By descending frequency.

Add – add a new definition.

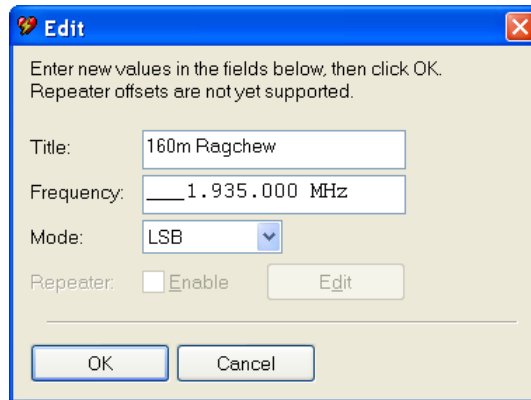


Enter the title, frequency and mode, and then press *OK*. The new definition is added to the current folder.

You can also select *Add* from the *Favourites* menu to add a new definition.

Del – delete the current folder or definition (depending on which you have selected).

Move – move an entry to another folder (alternatively drag entries between folders with your mouse).

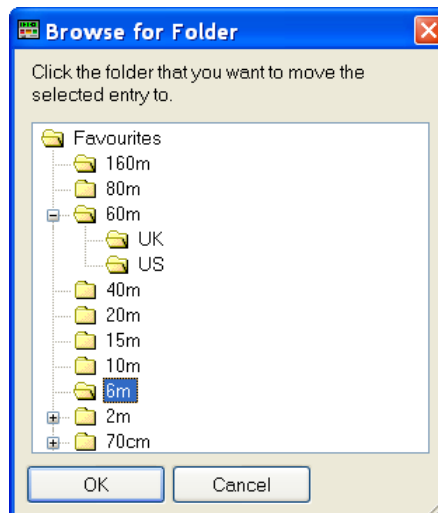

Select the new folder, then press *OK*.

Copy – make a copy of an existing definition.

Edit – edit the selected folder / definition.

Arrows – rearrange the selected folder / definition.

Load – load a new set of definitions from a file previously created using HRD; all current definitions are discarded.

Merge - merge definitions from a file previously created using HRD.


Defaults – restore the default list (hard-coded into HRD).

Save – save current definitions to a file.

---

## Markers

To display markers in the HRD display select *Show Markers* from the *Favourites* menu. The marker size is selected from the *Marker Size* option in the *Favourites* menu.

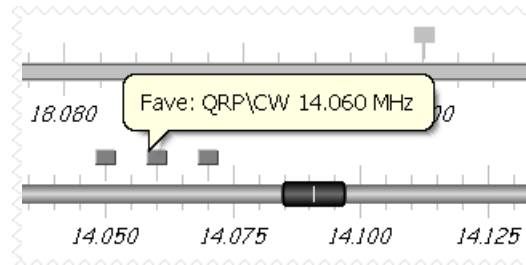

The popup text is displayed as you move the mouse pointer over a marker. The text is constructed from the favourite title and frequency.



# Logbook

---

## Introduction

The logbook was originally planned to be a simple replacement for the standard paper logbooks that one can purchase from all major radio societies. This idea didn't last long as the user requests piled in; as a result a more sophisticated logbook was implemented.

### Database

The database engine originally used was DAO; this was replaced in early 2006 with ODBC, as DAO is not supported on 64-bit Windows systems.

The driver used is the *Microsoft Access Driver (\*.mdb)* ODBC driver. If you do not have the *Microsoft Access Driver (\*.mdb)* ODBC driver on your system then download the latest Jet 4.0 files from [www.microsoft.com](http://www.microsoft.com).

See also:

*How to obtain the latest service pack for the Microsoft Jet 4.0 Database Engine*  
<http://support.microsoft.com/default.aspx?kbid=239114>.

Refer to Annex: Logbook Database on page 141 for details of the database design.

### Starting

There are two logbook windows:

1. Main,
2. Small.


The main display is a standard full-blown logbook; the small display has a fixed set of fields and a simple QSO entry area.

---





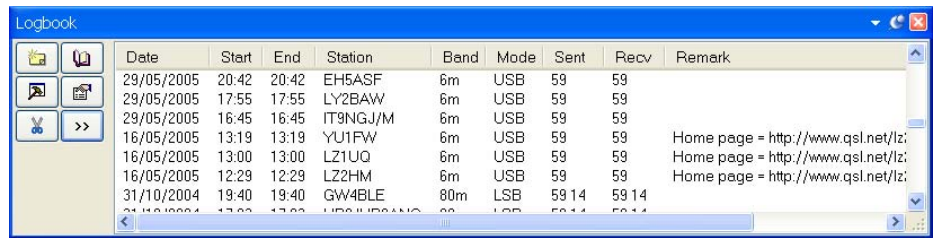


## Small Display

As you see in the picture below, the small display is very simple.


The window can be docked to the top or bottom of the main HRD display and used at the same time as the radio display.



The display lists the 100 most recent QSO's. The options are:



-  Add an entry using the advanced logbook entry window.
-  Show main logbook window.
-  Edit selected entry.
-  Logbook options.
-  Delete the selected entries.
-  Show or  Hide the input fields.


## Input Fields

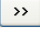When you press  the input fields are displayed.



Just enter the QSO information, then press  .

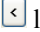
Pressing  loads the current time into the appropriate field. Pressing  displays the options window where you select whether the Frequency and Mode fields track the values shown in the radio display.

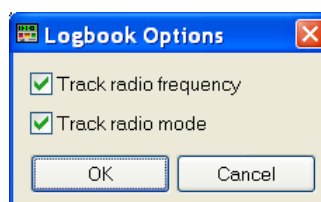


---


## Main Display

The main display has a more traditional logbook approach.

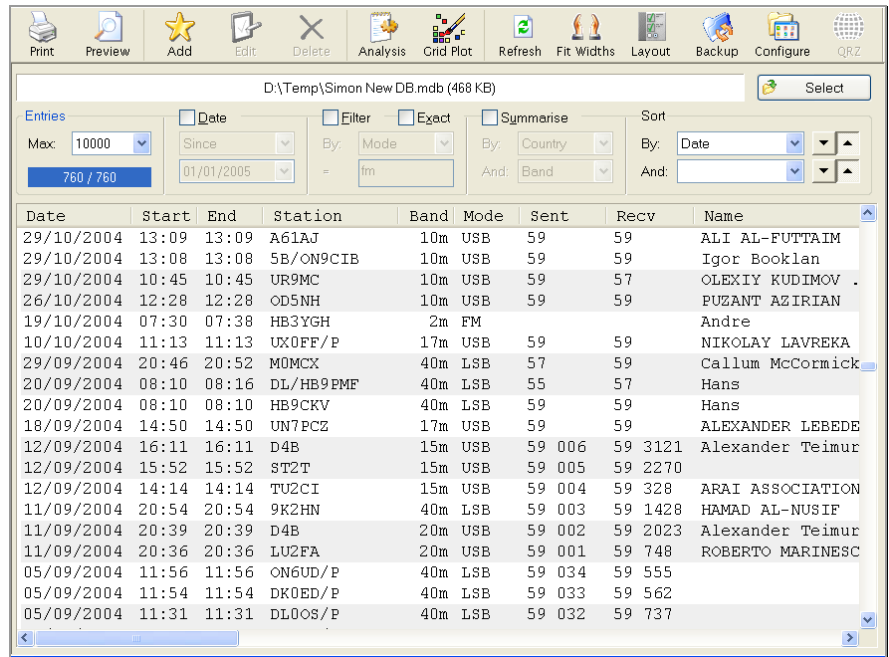


When you start HRD a default logbook is created in the default files folder, see Files on page 139.

## Options



Select the database – if the file you select does not exist then a new database is created.



Select the entries that are displayed.

*Entries* – the maximum displayed in the main list. The fewer you display the faster they are loaded. The maximum you can display is 25,000 – if you have more than 25,000 entries in your database then only the first 25,000 that match the selection criteria are displayed.

*Date* – display entries since this date. Typically you will only display entries from the last few days.

*Filter* – filter by any field (except dates) – for example mode or callsign. Check *Exact* for an exact match.

*Summarise* – display the first entry that matches the selection. For example, if you select Country and Band you see the first entry for each country and band.












*Sort* – select the sort criteria (alternatively click the column headers).



Print the logbook. Select *Print Setup* from the *File* menu to select paper size, layout, etc. Use Print preview first to see what it will look like.



Print preview – see what your logbook looks like before you print it. Print preview can be very CPU intensive with a large logbook (25,000 or more entries) so be prepared to wait a few seconds before it starts drawing.

-  Add a new entry.
-  Edit the currently selected entry.
-  Delete the selected entries.
-  Start the logbook analyser.
-  Plot selected entries using Mapper. To be plotted an entry must have a valid locator.
-  Reload the database and refresh the display.
-  Auto fit the column widths to their contents.
-  Define column layout.
-  Backup the database.
-  Database configuration.
-  Lookup station using [QRZ.com](http://QRZ.com).

## Configuration

Here you control many aspects of the logbook.

### **Files**

The database file size and location.

The folder where backups are stored when you press the *Backup* button.

### **Appearance**

Adjust the appearance of the display to suit your own taste.

### **My Station**

Optional information about your station – equipment and location.

### **Various**

Remark: Locator (small display)

---


## Problems

### **Performance**

If you find that the database is exceptionally slow make sure that ODBC tracing is switched off.

From the *Start* menu select *Settings / Control Panel / Administrative Tools / ODBC Data Source Administrator* select *Tracing*. Here you stop tracing (if started).



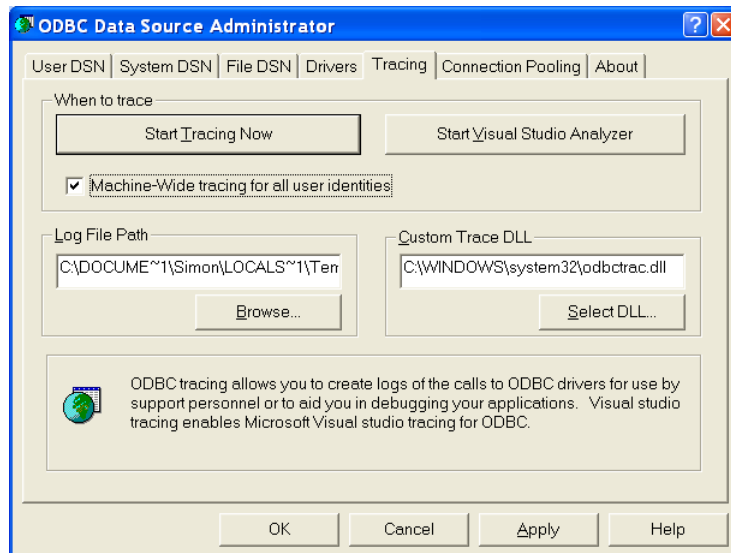

## Errors

If you get problems using the Logbook – for example a window such as:



then follow the steps below to generate a trace file which provides all information required to diagnose the problem.

1. Close HRD.
2. From the *Start* menu select *Settings / Control Panel / Administrative Tools / ODBC Data Source Administrator* select *Tracing*.
3. Press *Start Tracing Now*.
4. Start HRD, open the Logbook, and perform the steps necessary to generate the error.
5. Stop tracing.
6. Save the logfile to a ZIP archive and forward to the HRD developers.



# K1EL WinKey


---

## Introduction

“WinKey brings high functionality, fully featured Morse keying to logging applications. Although designed for Windows-based software implementation, WinKey can add value to all logging programs regardless of operating system or platform. Can also be used as a stand-alone keyer.”

Source: <http://www.k1el.com/>

A lot of the description of the WinKey support is taken from the WinKey documentation, copyright K1EL.

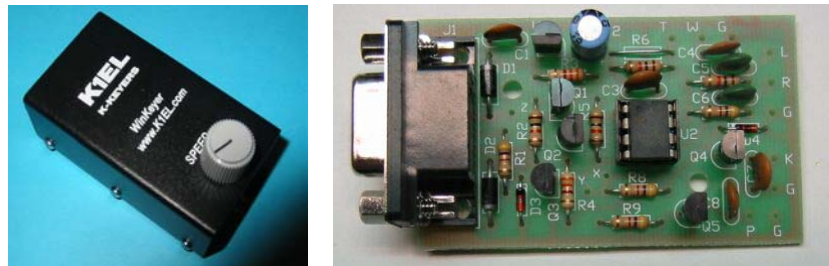

(Photos from <http://www.k1el.com/>)


K1EL's WinKey is an excellent computer controllable keyer solution. It supports everything a CW enthusiast could want. Many computer programs support WinKey; here is a description of the HRD support.

You will need a standard 9-pin serial cable (not NULL-modem).

---

## Main Window

Select *K1EL WinKey* from the *Tools* menu, the *WinKey* window is displayed.

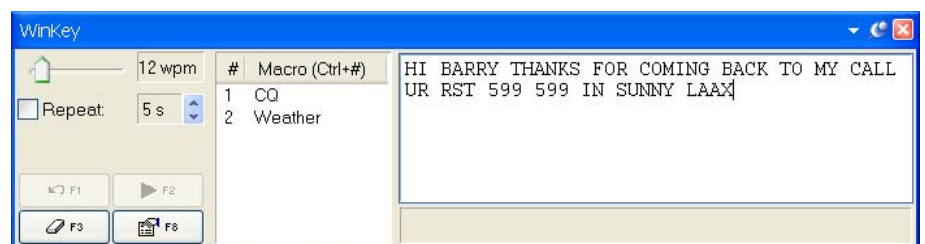


Here the user is sending text at 12 wpm – the speed is adjusted with the slider in the top-left. If *Repeat* is checked the text is retransmitted after a user-configurable value between 2 to 60 seconds, in this example 5 seconds.

Text is entered using the keyboard; only the allowable CW characters can be entered.

Macros are selected by double-clicking on an entry in the macros list or by using an accelerator key combination such as *Ctrl+1*.

Press F2 to start sending.

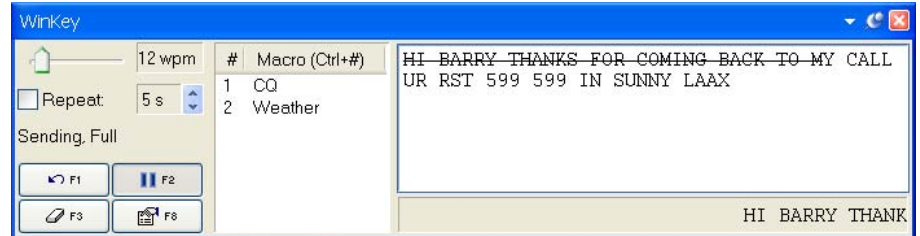

Characters sent to the keyer are marked with the ~~strikethrough~~ effect. Characters sent by the keyer to the radio are displayed at the bottom of the window.


Press F1 to mark sent text as unsent, F3 to erase the contents of the window.

---

## Options

Press the *Options* button (F8) to display the *Options* window. As an intelligent owner of the WinKey you will have studied the available literature, so some of the information here should be obvious. But in case you have forgotten something...

## Keyer

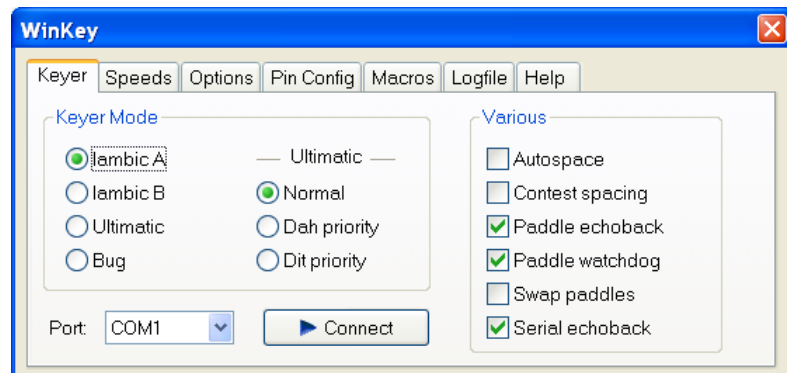

Select the type of keyer and the COM port to which the keyer is connected.

When you press *Connect* the keyer is initialized and an echo-back test performed. The test must succeed for the connection to stay open. This ensures that you have not accidentally connected to another device such as a rotator, which may have a fit if driven by the WinKey protocol!

A sample log for a successful connect:

Time	Text
09:58:02	Connecting to COM1
09:58:02	Setting buffer sizes to 2048, 2048
09:58:02	Setting speed to 1200,n,8,1
09:58:02	Setting timeouts
09:58:02	Setting DTR, clearing RTS
09:58:04	Echoback test, sent "HRD BY HB9DRV", received "HRD BY HB9DRV"
09:58:04	Firmware revision 10
09:58:04	Starting read thread

### **Autospace**

If you pause for more than one dit time between a dit or dah WinKey will interpret this as a letter-space and will not send the next dit or dah until full letter-space time has been met.

The normal letter-space is 3 dit spaces. WinKey has a paddle event memory so that you can enter dits or dahs during the inter-letter space and WinKey will send them as they were entered. With a little practice, autospace will help you to send near perfect Morse.

### **Contest Spacing**

Reduces the wordspace time by one dit. Instead of 7 dits per wordspace, contest spacing selects six dits per wordspace.

### **Paddle Echoback**

When enabled all characters entered on the paddles will be echoed back to the host. From the host perspective paddle echo and serial echo are the same, in either case the letter sent in Morse by WinKey is echoed back to the host. The echo occurs after the letter has been completely sent.

### **Paddle Watchdog**

The paddle watchdog counter disables the key output after 128 consecutive dits or dahs. This is to guard against the paddles being accidentally keyed continuously.


### **Swap Paddles**

Allows right- and left-handed operators to share the same keyer.

### **Serial Echoback**

Echo back is a feature that is included to allow a host application to stay exactly in sync with Morse letters sent. When this mode is enabled all data taken out of the serial buffer is sent to the host after it has been sent in Morse. This allows the host to reconcile differences in timing introduced by WinKey's internal 32-byte serial buffer. Note that only letters, and not buffered commands with their parameters or wordspaces, are echoed back to the host.

## Speeds

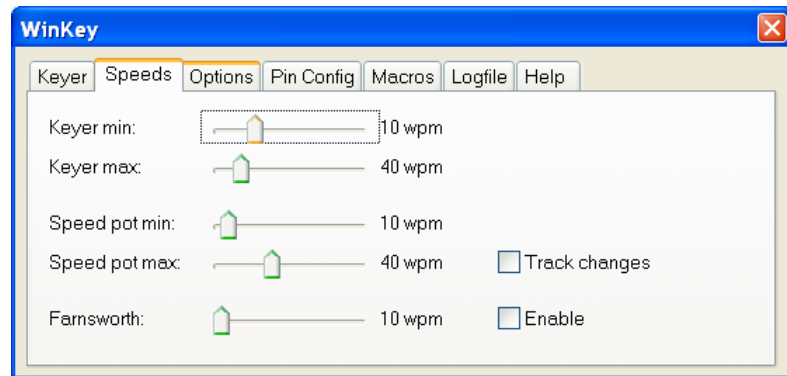


With Keyer min and Keyer max you set the range available in the WinKey main window.

Similarly with Speed pot min and Speed pot max you set the range available with the potentiometer mounted on the top of the WinKey enclosure.

Farnsworth speed is the speed at which characters are actually sent.

## Options

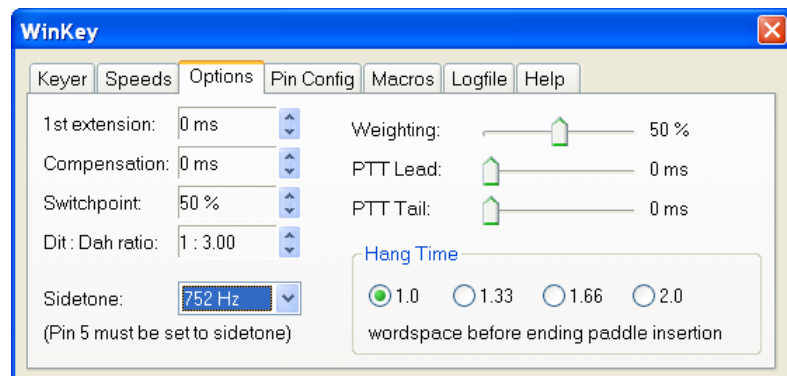

These options define the shape of the transmitted signal.

### Ist Extension

This addresses a problem often encountered when keying older transceivers that have a slow break-in response. Due to a slow receive to transmit changeover time, the first dit or dah of a letter sequence can be chopped and reduced in length. Adding a fixed amount to the first element of a sequence can compensate for this. For example, an R would be sent with the first dit elongated but the subsequent dah-dit sent normally. The compensation amount is transceiver dependent and is generally independent of sending speed. Note though that this is usually only a noticeable problem at higher CW speeds >25 WPM.

### Compensation

This allows a fixed amount to be added to the length of all dits and dahs. QSK keying on modern transceivers can cause shortening of the dit and dah elements that is especially noticeable at high speeds. WinKey allows the length of the dit and dah elements to be increased uniformly to compensate for this. The adjustments are made in units of one-millisecond steps. The maximum adjustment is 250 msecs.

Key compensation is very similar to Weighting in that any adjustment added to the dits and dahs is subtracted from the spacing so the speed is not changed. The difference between weighting and compensation is that compensation is independent of speed, so if 10 msec of key compensation is selected 10 msec

will be always be added regardless of speed. So be careful at high speeds and large values of key compensation, you may end up with no inter-element space.

### **Switchpoint**

Controls when WinKey will start looking for a new paddle press after sensing the current one. If there is not enough delay the keyer will send unwanted dits or dahs, if there is too much delay it bogs you down because you can't get ahead of the keyer. The default value is one dit time (50) and is adjustable in percent of a dit time. Faster operators report a setting somewhat less than default is more pleasing. If the paddle sensitivity is set to zero, dit and dah paddle memory is disabled. The delay is calculated with this formula:

$$\text{DELAY\_TIME} = (\text{SWITCHPOINT} * \text{DIT\_TIME}) / 50$$

where SWITCHPOINT is a value between 10 and 90.

### **Dit : Dah Ratio**

Allows WinKey to deviate from the standard 1:3 ratio of dit/dah. The formula to determine dah/dit ratio is:

$$\text{DAH/DIT} = 3 * (\text{nn}/50)$$

A value of 50 selects 1:3, a value of 33 would select 1:2, and a value of 66 would select 1:4. This causes an intentional distortion of the Morse waveform. Some ops use this option to make their CW sound less 'machine like'.

### **Weighting**

This command allows a proportional amount to be either added or subtracted from the length of all dits and dahs sent. A value of 50 selects no weighting adjustment. Values less than 50 reduce weighting and values greater than 50 increase weighting. Note that weighting does not affect sending speed because any increase in keyed time is subtracted from spacing time. A reduction in weighting results in a thinner sounding keying; increased weighting results in a heavier sound. Since weighting tracks speed, a given weighting will sound the same at all speeds.

### **PPT Lead / PTT Tail**

WinKey provides a transmitter PTT output that can be used to switch a transmitter or linear amplifier over to transmit mode in advance of actual CW keying. You have control over the time delay between when PTT is asserted and when CW keying will start, this is lead-in. You also have control over how long the transmitter will stay in transmit after keying has stopped; this is the tail delay.


Note: PTT pin 5 can be reconfigured as a sidetone output, see Sidetone Frequency option.

### **Sidetone**

Pin 5 can be configured to output a square wave sidetone by using the *Set Pin 5 Mode* option. When sidetone is enabled, pin 5 functions as a sidetone square wave output. The PTT delays still work as described by the Set PTT Lead/Tail Command, but a PTT output is not available.


Available sidetone frequencies are: 3759 Hz, 1879 Hz, 1252 Hz, 940 Hz, 752 Hz, 625 Hz, 535 Hz, 469 Hz, 417 Hz, 3765 Hz.

## Pin Config

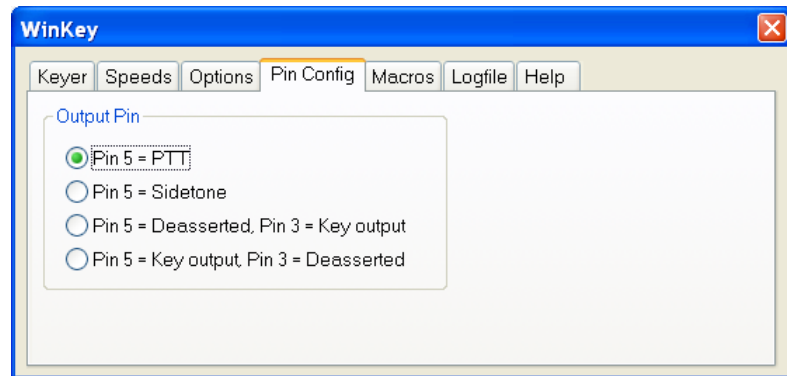


Determines how the output pins are mapped.

## Macros

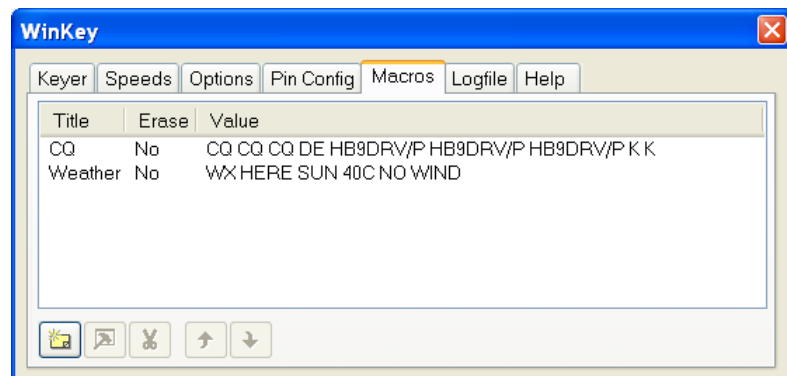

Define an unlimited number of macros that can be selected in the WinKey main window.


## Logfile

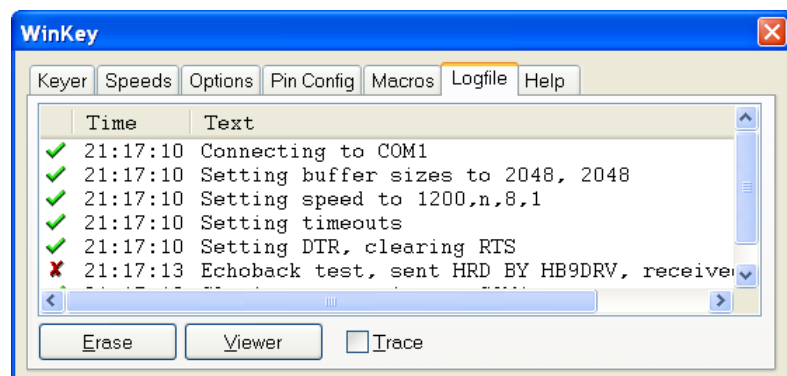

To help diagnose problems use the Logfile window. The Viewer option displays the contents of the window in your default text file (.txt) editor. If you check Trace then all traffic over the COM port is logged.



## Help

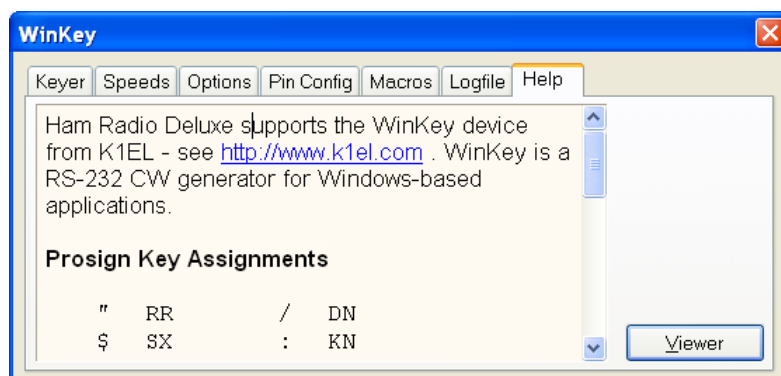

Some basic help text; specifically the Prosign key assignments.

### Prosign Assignments

"	RR	/	DN
\$	SX	:	KN
'	WG	;	AA
(	KN	<	AR
)	KK	=	BT
+	AR	>	SK
-	DU	@	AC



# Macros

---

## Introduction

HRD supports two types of custom definitions:

- CAT commands, and
- Combinations of standard HRD input fields.

Macros are selected from the *Macros* pane in the Selection window.

---


## CAT Commands

A CAT command macro is a command that you define yourself, containing one CAT commands as describer in your radio's handbook. The commands you enter must be supported by your radio.

Use CAT commands to add support not provided by the HRD interface.

### Manager

Either press *Manager* in the *Macros > CAT Commands* pane or select *CAT Command Manager* from the Macros menu.

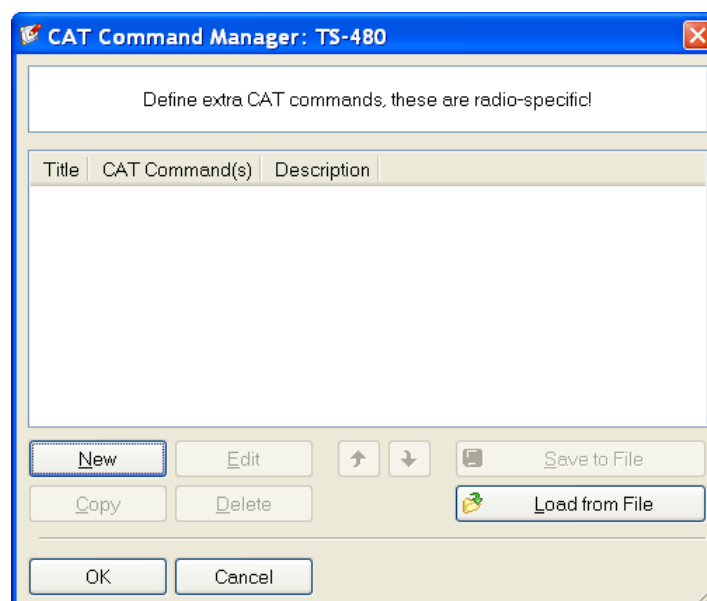

Press *New* to create a new command definition.


In this example a Kenwood command is defined for the TS-480. The mode is set to USB and the frequency to 50.150 MHz.

In the *Title* field enter '50.150 MHz USB'.

In the *CAT Command* field enter:

```
# Set mode to USB.  
MD2  
# Set frequency to 50.150 MHz  
FA00050150000
```

In the *Description* field enter 'Change frequency to 50.150 MHz, mode to USB'.

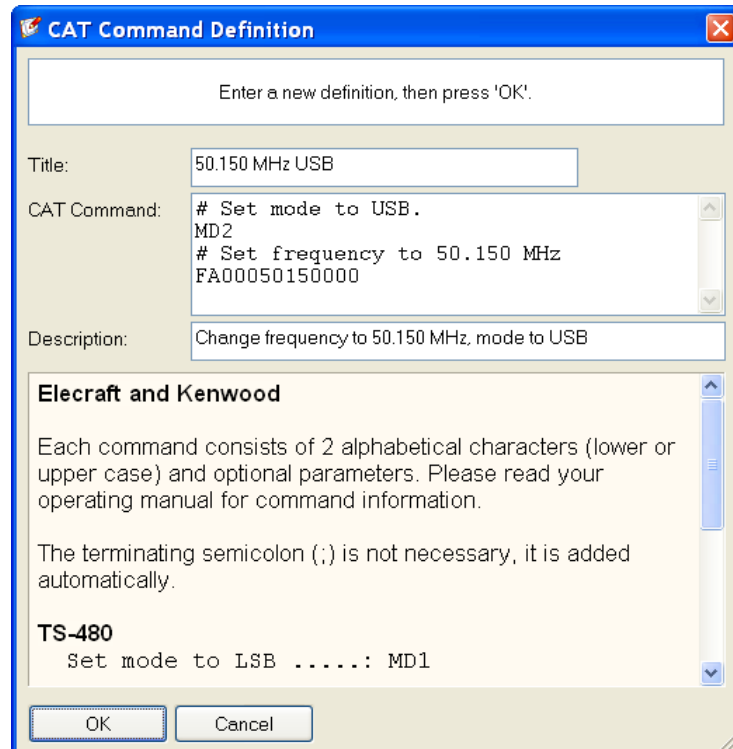

Now press *OK*. The new definition is added to the list in the *Manager* window.

## Protocols

### *Elecraft and Kenwood*

Each command consists of 2 alphabetical characters (lower or upper case) and optional parameters. Please read your operating manual for command information.

The terminating semicolon (;) is not necessary, it is added automatically.

#### **TS-480**

```
Set mode to LSB .....: MD1  
Set mode to USB .....: MD2  
Set AF gain to 0 .....: AG0000  
Set AF gain to 100 ...: AG0100  
Select VFO-B .....: FT1
```

You can define more than one command; to do this start each command on a new line.

#### Special Commands

```
Comment .....: # Some interesting text.  
Pause of 250 ms ...: @ 250
```

## **ICOM**

ICOM radios use the CI-V format to communicate with the radio. Please read your operating manual for command information.

Each entry defined here consists of:

- [1] command,
- [2] optional sub-command and
- [3] optional data.

You must add a - between each byte (each byte is two hexadecimal characters).

### **IC-7800**

```
Set mode to LSB .....: 06-00  
Set mode to USB .....: 06-01  
Set AF to 0 .....: 14-01-00  
Select preamp 2 .....: 16-02-02  
MOD I/P (data off) MIC ...: 1A-05-00-31-00  
MOD I/P (data off) SPDIF ..: 1A-05-00-31-07
```

You can define more than one command; to do this start each command on a new line.

### **Special Commands**

```
Comment .....: # Some interesting text.  
Pause of 250 ms ...: @ 250
```

## **Ten-Tec**

In general Ten-Tec commands are two character commands followed by data and a carriage return <cr> or <0x0d>. Do NOT add the carriage return - this is added automatically.

Some data must be sent in binary format, hexadecimal is used to represent binary data. To set Split mode on for the Argonaut the documented command is \*O<0x01><0x0d> which is entered here as \*Ox01, that is \*O (Split mode) + x (switch to binary) + 01 (Split On). The carriage return <0x0d> is not added.

Please read your operating manual for command information.

When you enter x the format switches to binary mode - two hexadecimal characters per byte. Only enter x once, even if entering more than one byte of data.

### **Argonaut**

```
Set mode to LSB .....: *M2  
Set mode to USB .....: *M1  
Set split mode on ...: *Ox01  
Set split mode off ..: *Ox00
```

### **Jupiter**

```
Set mode to LSB .....: *M2  
Set mode to USB .....: *M1  
Set AF gain to 32 ...: *Ux20  
Set filter to 450Hz ..: *Wx1D
```

You can define more than one command; to do this start each command on a new line.

### Special Commands

```
Comment .....: # Some interesting text.  
Pause of 250 ms ...: @ 250
```

### Yaesu

Starting with the FTDX-9000 Yaesu has changed the CAT protocol to one very similar to that used by Kenwood. So if you are fortunate enough to have the FTDX-9000 please use the Kenwood commands – see Elecraft and Kenwood on page 84.

Each Yaesu command consists of five bytes. The bytes are defined *in the order in which they are sent to the radio*. You must add a - between each byte.

Each command consists of four bytes of data and an OpCode. The order in which P1-P4 are shown in your operating manual does not matter here - there are difference between Yaesu radios, just remember that the bytes are defined *in the order in which they are sent to the radio*. Please read your operating manual for command information.

#### FT-817

```
Set mode to LSB ...: 00-00-00-00-07  
Set mode to USB ...: 01-00-00-00-07  
Split on .....: 00-00-00-00-02
```

#### FT-100MP

```
Set mode to LSB ...: 00-00-00-00-0C  
Set mode to USB ...: 00-00-00-01-0C  
Split on .....: 00-00-00-01-01
```

You can define more than one command; to do this start each command on a new line.

### Special Commands

```
Comment .....: # Some interesting text.  
Pause of 250 ms ...: @ 250
```

---

## Input Fields

Input field macros are combinations of fields on the HRD radio display. Users of Microsoft Office will be familiar with the concept supported here.


### Manager

Select *Macros Manager* from the *Macros* menu, and then press *New* to create a new macro. This macro will switch your radio to 50.150 MHz in USB.

First we will set the mode to USB:

- In the *Title* field enter '50.150 MHz USB'.
- In the *Group* field enter 'Macros: Simple'.
- In the *Description* field enter 'Change frequency to 50.150 MHz, mode to USB'.


- Press *Add* to select Dropdown Button Mode: USB

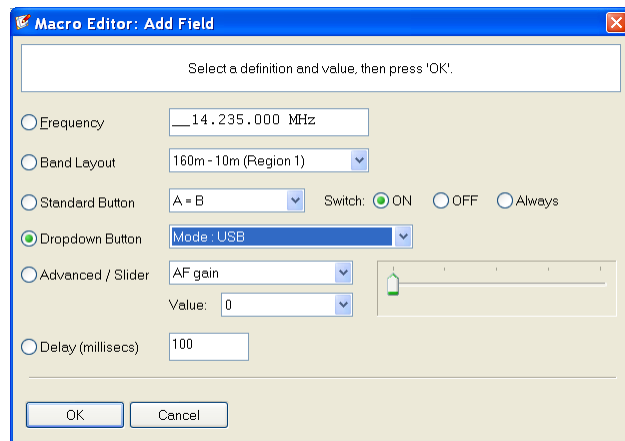

- Press *OK*.

Now set the frequency to 50.150.000:

- Press *Add* to select Frequency 50.150.000 MHz.

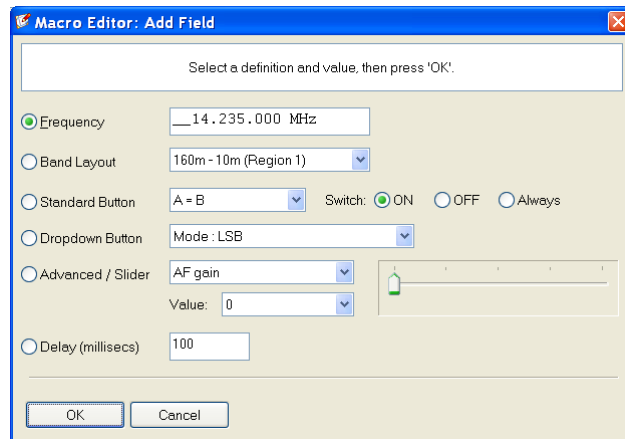


- Press *OK*.


Your definition now contains two entries:

Enable	Type	Title	Value
<input checked="" type="checkbox"/>	Dropdown Button	Mode : USB	
<input checked="" type="checkbox"/>	Frequency		14.235.000

Press *Save*, this returns you to the *Macros Manager*.

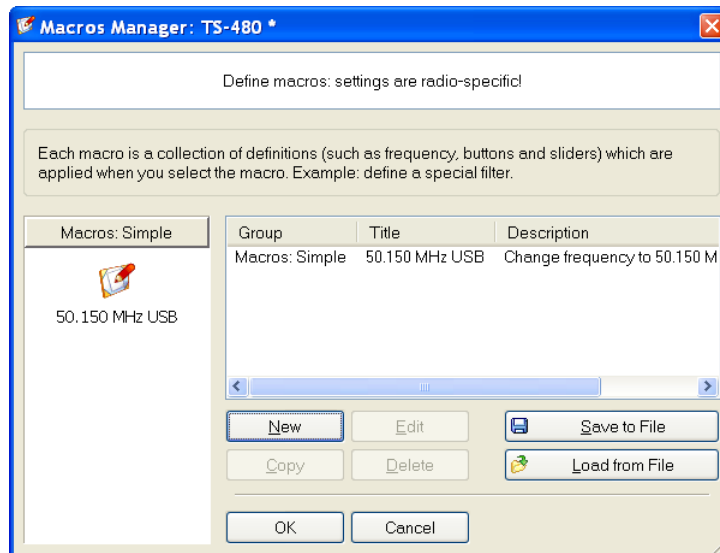

Press *OK*. The window closes; the *Macros* sub-pane *Macros: Simple* now contains your new macro.

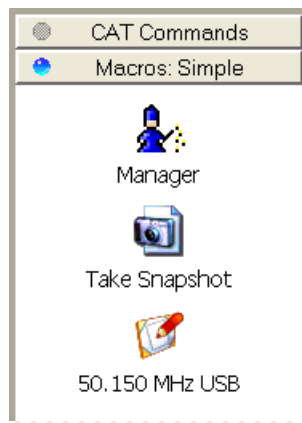

## Snapshots

The snapshot button creates a definition that contains the state of all input fields. This is an easy way of preserving a known state of your radio once you have set it up exactly the way you want.



# Quick Save

---

## Introduction

This is a simple way of marking a frequency as being interesting – you are monitoring three QSO's with a single radio and you want to quickly switch between the frequencies – for example during a 6m sporadic-E opening.

Each definition consists of the frequency in Hertz and mode; definitions are saved in the registry.

To switch between Quick Save definitions use the accelerator key combinations for the *Quick Save* menu options *Next* (*Ctrl+F5*) and *Previous* (*Ctrl+F6*).

---

## Add Entry

Select *Add* from the *Quick Save* menu or just click the *Quick Save* button.




Quick Save

An entry is added to the Quick Save pane in the Selection window.

---

## Markers

To display markers in the HRD display select *Show Markers* from the *Quick Save* menu. The marker size is selected from the *Marker Size* option in the *Quick Save* menu.

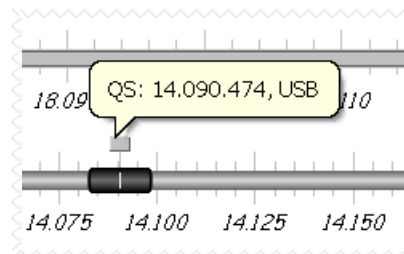

The popup text is displayed as you move the mouse pointer over a marker. The text is constructed from the frequency and mode.



# Remote Server

---

## Introduction

The HRD Remote Server enables a connection between Ham Radio Deluxe and a radio connected to a remote computer that can be contacted via TCP/IP.

## Requirements

The remote computer must be running Windows NT – that is NT 4.0, 2000, 2003 or XP. Windows 95, 98 and various flavours thereof are not supported.

## Technology

A Windows service is installed on the remote service. This listens on a port (usually 7805) for incoming connections from Ham Radio Deluxe (the client).

For more technical information see Annex: Remote Server on page 135.


---

## Installing

The HRD Remote Server files are:


- HRDRemoteSvr.exe – the executable,
- HRDRemoteSvr.cfg – configuration file, and
- HRDRemoteSvr README.txt – essential reading.

To install the service select *Remote Service* from the *Tools> Programs* menu.

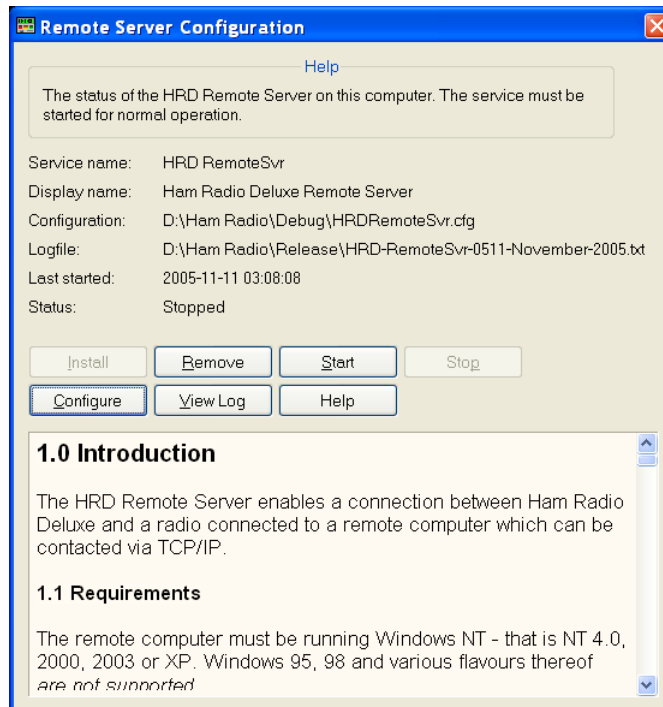

Press *Install* to install the service, and then press *Start* to start the service.

You can start the Windows *Services* applet (Start – Settings – Control Panel – Administrative Tools – Services) to modify the properties of the service, for example disabling automatic startup.

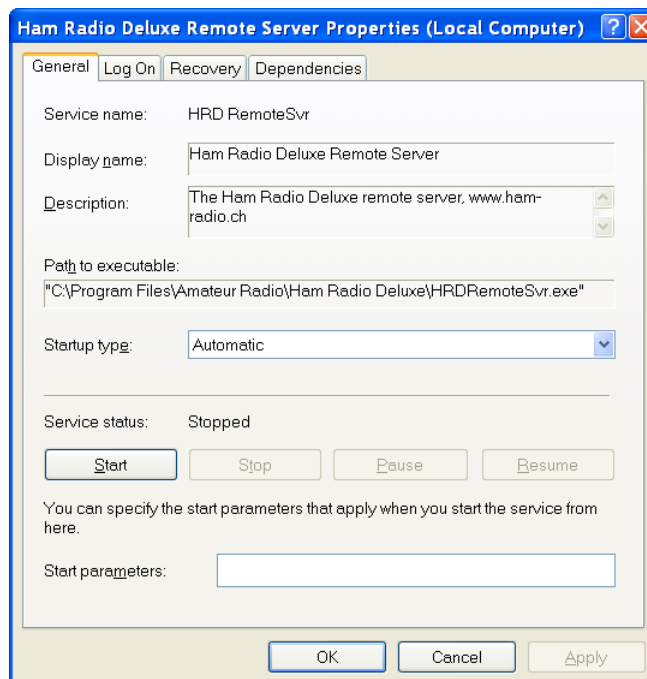

## Configuring

Press *Configure* to edit *HRDRemoteSvr.cfg* which contains the service configuration.

```

#
# Ham Radio Deluxe Remote Access Server
# -----
#
# Copyright (c) 2005 by Simon Brown, HB9DRV.
#
# Note: this only runs on windows NT/2K/XP. It does not run
# on windows 95/98/ME/SE.
#
# This file defines the configuration of the Remote Access Server.
# The format of each entry is TOKEN = VALUE.
#
# Supported tokens
# -----
#
# COM
# PORT
# USER1 to USER20
# WELCOME
#
#
# A comma-separated list of COM ports that are returned. If not defined then
# the server returns a list of all COM ports available on the computer.
#
#COM = COM1,COM2,COM3,COM4
#COM = COM1
#
#
# The TCP/IP port on which the server listens for connections. If not defined
# then the default value of 7805 is used. Select any port number you want which
# is not in use by other programs.
#
PORT = 7805
#
#
# Username/passwords, these are case-insensitive. Spaces are removed
# from the beginning and end of the username and password.
#
# The format is USERx = username,password,options where options is a
# list of case-insensitive tokens separated by spaces (not commas).
#
# The supported options are:
#
# NO_MACROS
# NO_TX
#
# For example: USER1 = Simon,SnowTime,no_tx no_macros
# Disables the TX and TUNE buttons and all Macros on the user's instance of HRD.
# (The user could enable TX via a Macro or CAT command.)
#
USER1 = Simon,SnowTime
USER2 = Peter,Uberwald
USER20 = Donald,California,no_macros no_tx
#
#
# optional welcome text, displayed on the remote user's computer. Note that
# \n is replaced with a newline. Enter up to 511 characters on a single line.
#
# Remove this line if you do not want a welcome message.
#
WELCOME = welcome to the HRD Remote Access Server.\n\nPlease don't break anything!

```

The contents of this file should be obvious. After changing the configuration you should restart the service.

## Restricting TX

One special note – to restrict a user’s ability to switch the radio to transmit there are now optional tokens added with the username and password to disable access to the TX and any Tune buttons.

In addition you will want to disable macros as a knowledgeable user can define a CAT command to enable TX.


---

## Connecting

To connect to the remote server enter values as normal when starting HRD but select the Remote port, then press Connect.




When you press *Connect* the Remote Connection window is displayed.

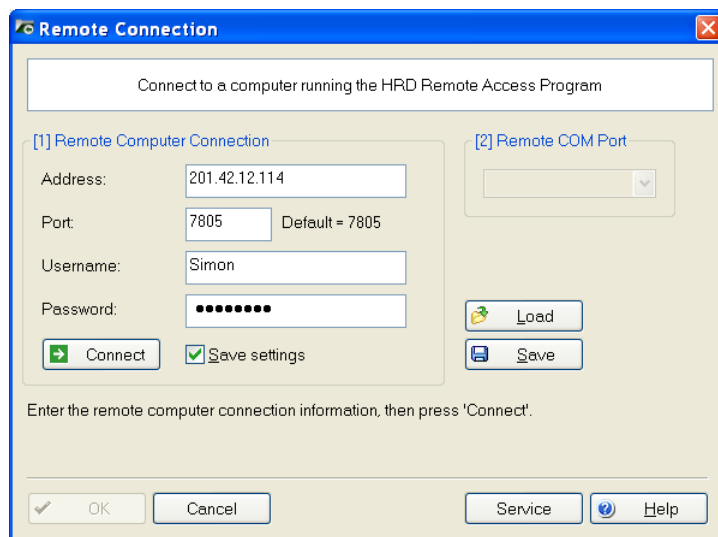


Enter connection information:


- Address: the remote computer address in either numeric or alphabetic form – for example 195.154.179.101 or www.simon-home.ch .
- Port: the port assigned to the remote service, usually 7805.
- Username: a valid username defined in the configuration file. This is case-insensitive.
- Password: the password corresponding to the username. This is case-insensitive.
- To save these values make sure the *Save settings* option is checked X.



Load connection information from a file.




Save connection information to a file.



Press *Connect*. If the connection is successful the text


*Username/password authenticated. Select a remote COM port, then press 'OK'*

is displayed.

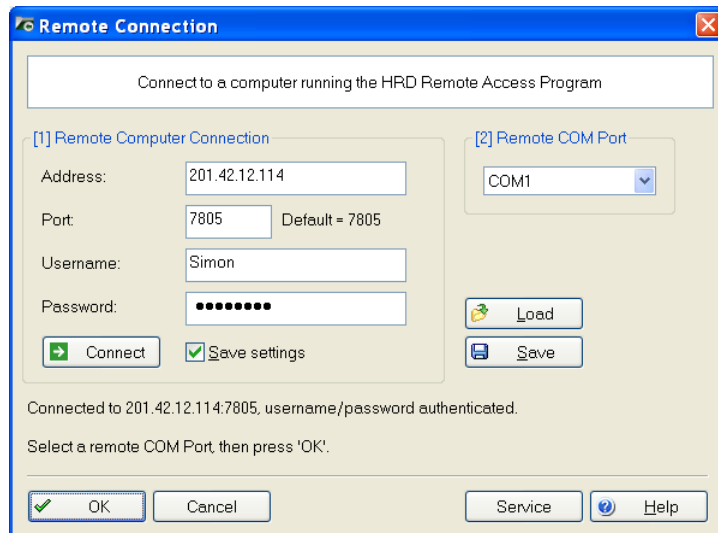


Now select the COM port, and then press OK to connect to the remote COM port and start the HRD radio display.

When the connection with the radio has been confirmed a *Remote Connection* display window shows you the data throughput and average round-trip time.

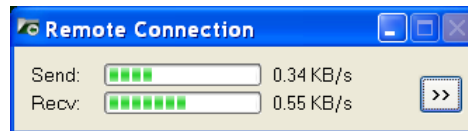

## Remote Connection

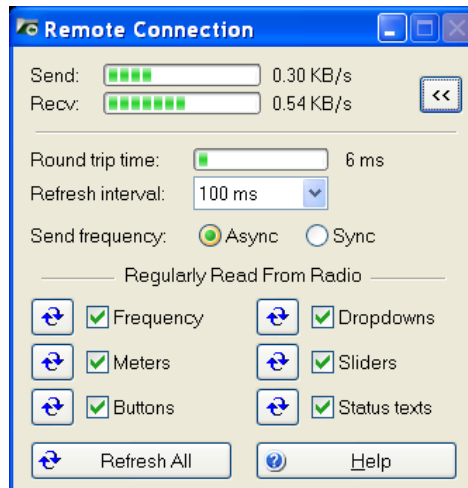

Use the *Remote Connection* window to show the status of the remote connection.

- Round-trip time: the time required to send a message from HRD to the remote server and get a response. This will be very similar to the value shown when you use Ping to interrogate a remote host. Typically values of 50 milliseconds or less are very usable.
- Refresh interval: the interval between refreshes of the selected Regularly Read options.
- Send frequency: when the frequency is updated over a link with a high round trip time (> 100ms) the performance will be less than optimal with Sync selected so if the round trip is high select Async, otherwise just select Sync. The disadvantage of using Async is an

'elastic band' effect while tuning by dragging HRD's small tuning marker.

- Regularly Read: the options that are regularly updated. If you are using a fast link - for example to a local station with a low round-trip time then you can safely select all options. The disadvantage of selecting options such as Buttons, Dropdowns, Sliders and Status Texts is that it may take a second or two before HRD detects that you are changing the frequency by dragging the tuning marker and the current refresh operation cannot be interrupted.

## Slow Link

If you have a slow link - a round-trip time  $> 100$  ms - then select only Meters. As this is a remote station it is unlikely that anyone else will be adjusting the radio's controls so you will not need to refresh buttons and dropdowns as you would with a locally connected radio.

The disadvantage of not selecting Buttons and Dropdowns is that inter-button dependencies will not be shown - for example you may have 4 AGC buttons Off, Fast, Medium and Slow, only one of which will be active at any one time. If Buttons is not enabled for regular refreshes then pressing Fast will not update the other AGC buttons. In this case you must press the small refresh button to the right of the Buttons check box.

To refresh all display options click *Refresh All*.



# Rotator

---

## Introduction




What better way to spend money than on a nice set of antennas for your Satellite Tracking array, or how about a nice 4-element yagi for 80m?

Whichever solution you chose HRD has the support you need.

---

## Main Window


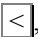
To open the rotator window select *Rotator* from the *Tools* menu.

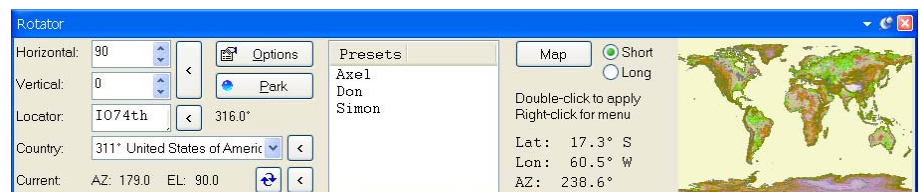

HRD supports both azimuth-only as well as Azimuth-Elevation rotators such as the excellent AlfaSPID.

To get started press Options (page 998).

To change the current bearing either:

- Enter the new bearing in the Horizontal field and press 
- Enter the locator of the station and press 

- Select a country from the Country dropdown list and press .
- Select a preset, or
- Double-click on the world map.

Press *Park* to park the rotator.


To select a new bitmap for the World map press *Map*. Currently only BMP files are supported; in a future release other formats and a better resolution will be added.

To switch between short path and long path use the two radio buttons *Short* and *Long*.

## Options

Here you configure the rotator you are using.

### Connect

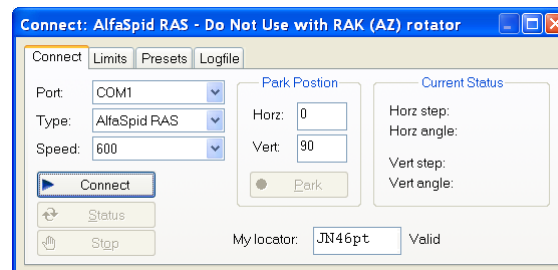

To connect to a rotator:

- Select the COM port,
- The rotator type,
- The connection speed,
- Press *Connect*.


Look in the Logfile (page 99) if you have problems connecting.

Enter the park position for the rotator – nice shortcut especially if using a satellite array.

Enter your locator so that HRD can compute bearings from your station.


The most recently returned status is displayed in the Current Status area. The current status is read when you connect to the rotator controller.

### Limits

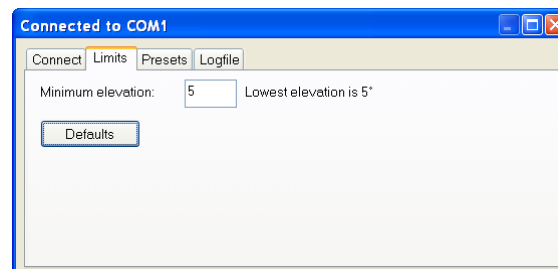

For rotators with elevation support – enter the minimum elevation. If you look at the picture on page 97 you see that there is no point in using an elevation lower than 5 degrees.


## Presets

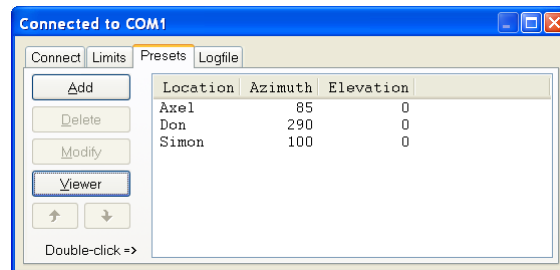

Enter preset bearings for your friends, DX-expeditions or just anywhere of interest. As you change this list the main window's preset list is updated.

Double-click on entries to apply immediately.

## Logfile

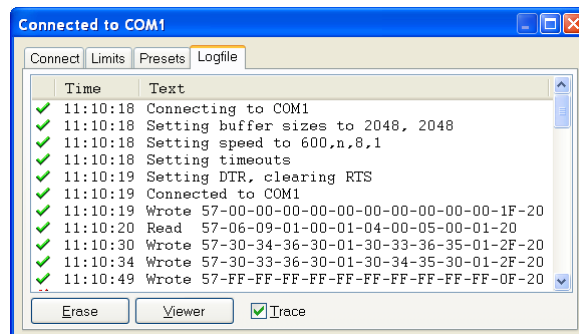

The logfile is an invaluable aid for you and software developers when diagnosing a problem. You see all traffic over the COM port.

In this example a connection is made with an AlfaSPID rotator.



# Satellite Tracking

---

## Introduction

If you are new to satellite tracking visit <http://www.amsat.org/> maintained by The Radio Amateur Satellite Corporation (AMSAT) for excellent articles written for new satellite users.

HRD's Satellite Tracking support would not be possible without the help of [David Taylor](#) and his open source satellite-tracking library.

After using David's code to get started I wrote my own library, shipped as a DLL with HRD and based on NORAD SGP4/SDP4 Implementations by Michael F. Henry. Full source is available on request.

---

The most important rule: it's the frequency on the satellite that is important, not the frequency on your radio. This is the most common mistake made when using a satellite.

---


If you are using two radios for satellite tracking – one for transmit, the other for receive – read this section first, then refer to **Error! Reference source not found.** on page **Error! Bookmark not defined.**

Dual radio support is arguably the most flexible way to work with satellites.

---

## Satellites

The software requires information about the satellites you will be tracking, this information is known as Keplerian elements. Johannes Kepler (1571 – 1630) discovered the three laws of planetary motion in 1609 and 1619 – a remarkable feat!

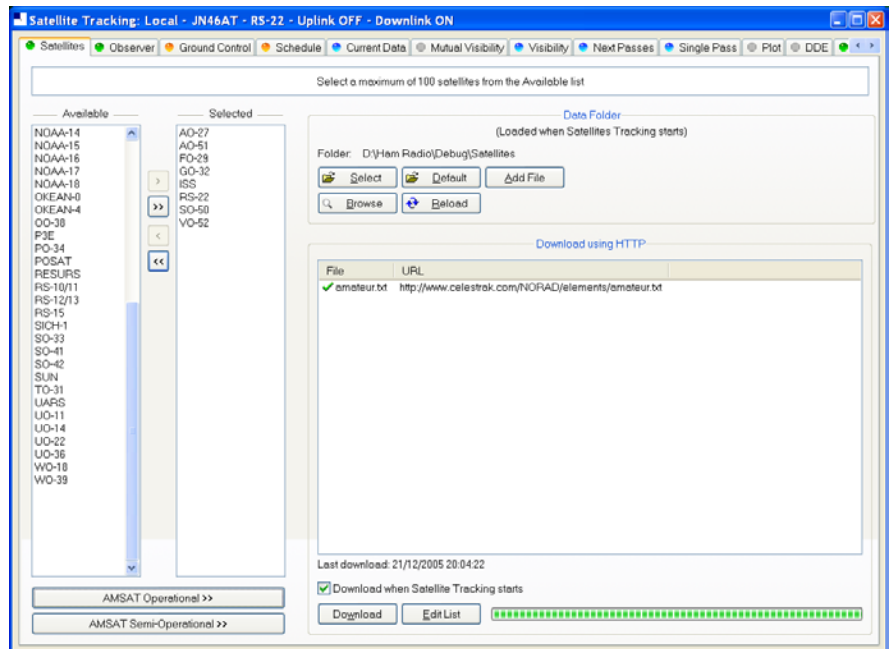

The satellites window lists the files containing the Keplerian elements used to plot the position of satellites and compute the correct frequencies for the uplink and downlink.

The default folder is *Satellites* located below the folder where you have installed HRD - for example:

*C:\Program Files\Amateur Radio\Ham Radio Deluxe\Satellites.*

To change the folder just press *Select*.

It is recommended that you update the data files in the *Satellites* folder when you start using Ham Radio Deluxe as the files shipped in the kits will be out of date by the time you start to use them. These files should ideally be refreshed every few days.

If you check the '*Download when Satellite Tracking starts*' option then the files are downloaded every time you start satellite tracking.

To download the latest Kepler data files press *Download*. The files are downloaded to the folder containing your satellite data.

To edit the list of files press *Edit List*. The file is *HRD Satellite List.txt* in the folder *Satellites* folder.

Example:

```

#++
#
# The entries below are downloaded using the Satellites page
# in the Satellites data option. Data is saved in .txt files.
#
# Entries must start with http://
#
# Ham Radio Deluxe only supports the two-line format, for example:
#
# AO-40
# 1 26609U 00072B 03309.95521145 -.00000007 00000-0 00000+0 0 3675
# 2 26609 9.9303 22.9678 7977178 228.8131 28.6254 1.25597973 13867
#--
#####
#
# When you change this list you should delete old files which are #
# no longer being used. #
# #
#####

#
# From AMSAT (recommended for Amateur radio satellites).
#
# http://www.amsat.org/amsat/ftp/keps/current/nasabare.txt

#
# From Celestrak
#
# Remove the # comment to add these.
#
# http://www.celestrak.com/NORAD/elements/amateur.txt
# http://www.celestrak.com/NORAD/elements/goes.txt
# http://www.celestrak.com/NORAD/elements/stations.txt
# http://www.celestrak.com/NORAD/elements/visual.txt
# http://www.celestrak.com/NORAD/elements/weather.txt
#

```

New satellite data files can be downloaded from the Internet, for example from <http://www.amsat.org/> or from <http://www.celestrak.com/> maintained by T.S. Kelso.

The only supported file format is two-line element sets, for example:

```

AO-7
1 07530U 74089B 03265.96753648 -.00000029 00000-0 10000-3 0 2356
2 07530 101.7328 311.4393 0012255 21.1784 338.9793 12.53565904320301
AO-10
1 14129U 83058B 03265.06525444 -.00000148 00000-0 10000-3 0 9658
2 14129 26.3223 129.7582 5974698 27.0721 354.5394 2.05868478124501

```

The verbose format is not supported.


The bare NASA format elements from <http://www.amsat.org/> contain all satellites of interest to radio amateurs.

Alternatively if you look at <http://www.celestrak.com/NORAD/elements/> you will see many files that can be downloaded. Just download these files and save them in the Satellites folder selected previously. For more information about the contents of these files browse <http://www.celestrak.com/>.

All text files in the Data Folder are loaded into Ham Radio Deluxe, so you should delete old files if you no longer need them.

Select up to 100 entries from the *Available* list by either double-clicking on individual entries or by highlighting one or more entries and pressing > . By pressing >> all entries (up to a maximum of 100) are moved to the *Selected* list.

# Observer

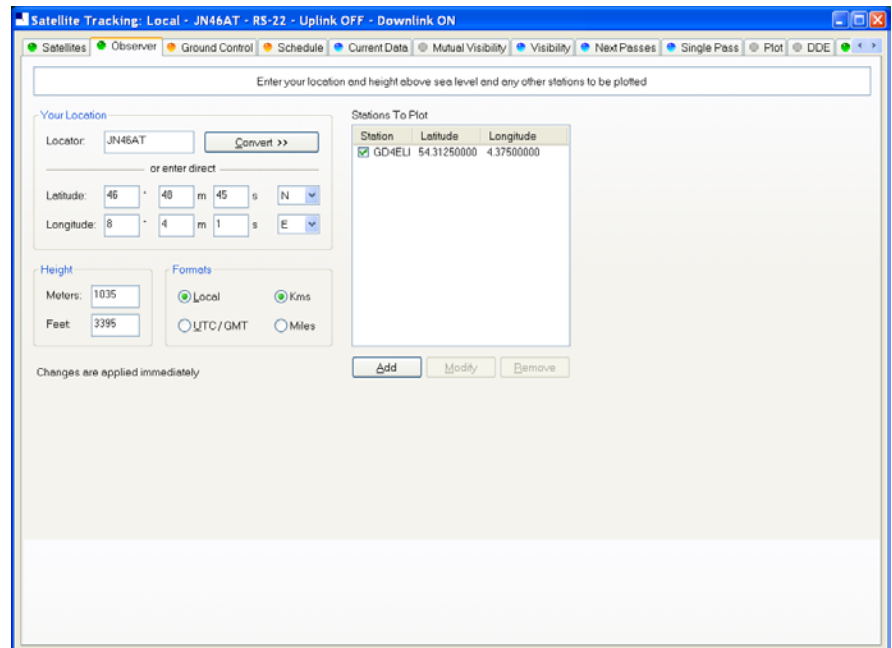

In the *Observer* window you enter your location and height above sea level in meters or feet (for users more familiar with imperial measurements: 1 metre is 3.3 feet). You also enter an optional list of stations that are plotted on the world maps. Only the checked [X] entries are plotted.

Enter your location either:


- By entering your Maidenhead Locator in the Locator field and the pressing *Convert >>* or
- By entering the Latitude and Longitude directly.

You also select the preferred time format; either Local (default) or UTC. Distance is displayed in either kilometers or miles.

You must press *Apply* to update the satellite settings.



# Ground Control

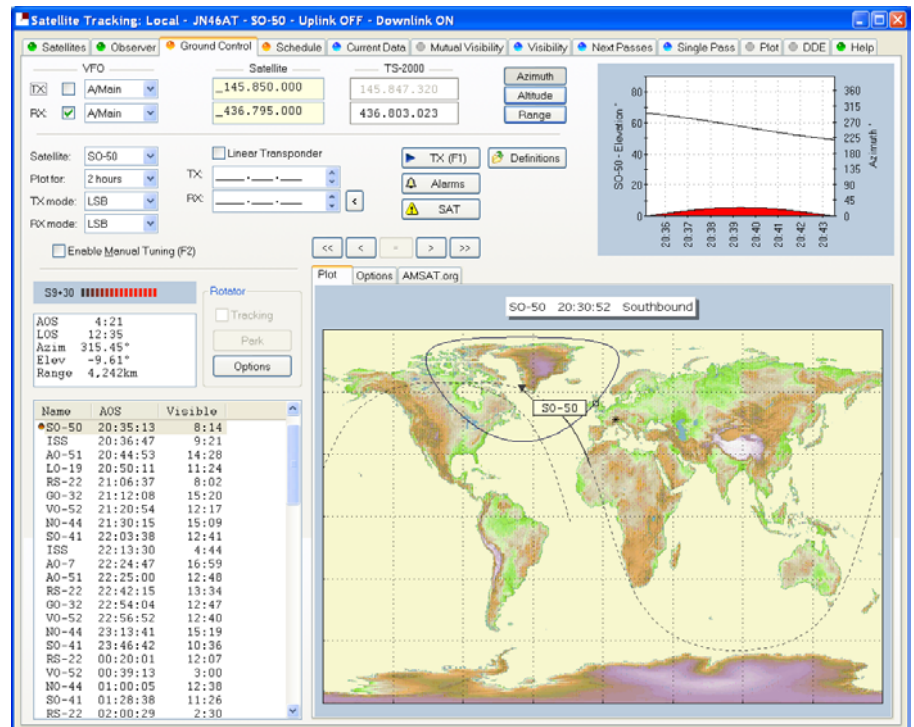

This window is used to adjust your radio's TX (uplink) and RX (downlink) frequency to compensate for the Doppler effect (the apparent shift in frequency of a wave due to the relative motion of source and observer). Doppler shift is calculated in accordance with Kepler's laws.


- Enter the satellite uplink (your TX) frequency in the Satellite TX field.
- Enter the satellite downlink (your RX) frequency in the Satellite RX field.
- Select the VFO you will use for TX and RX (see rest of this section).
- If you are using a transverter select the Options tab and enter the transverter offsets.

When you are tuning remember that the important frequency is the satellite frequency, not the frequency on your radio. The frequency on your radio is the satellite frequency corrected for Doppler shift.

## Tabs

### Plot

A plot of the selected satellite's position and footprint. Use the plot offset buttons << < = > >> to offset the plot time.

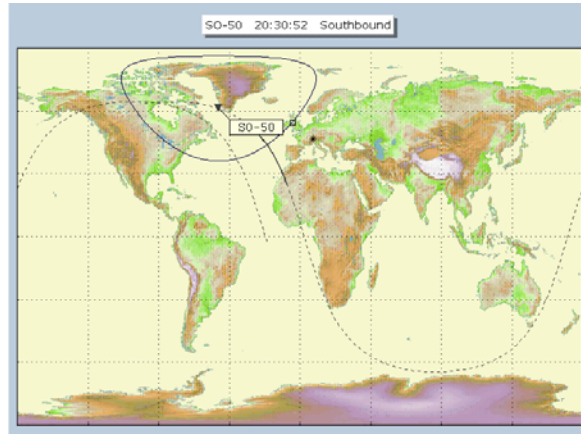

## Options

Infrequently used options are located here to avoid cluttering up the display.

TX:

RX:

TX:

RX:

- Swaps TX and RX frequencies.
- Copies TX frequency to the RX.
- Copies RX frequency to the TX.
- Displays pass details using the default text editor, useful for programming memories in a handheld UHF/VHF transceiver.

For example:

SO-50

TX: \_145.850.000  
RX: \_436.795.000


Date / time	Azim	Elev	Receive	Transmit
wed 11-Jan-2006 07:38:00	109.4	-0.2	436.796.788	145.849.402
wed 11-Jan-2006 07:38:30	105.3	0.1	436.796.169	145.849.609
wed 11-Jan-2006 07:39:00	101.3	0.3	436.795.532	145.849.822
wed 11-Jan-2006 07:39:30	97.1	0.3	436.794.888	145.850.037
wed 11-Jan-2006 07:40:00	93.0	0.2	436.794.243	145.850.252
wed 11-Jan-2006 07:40:30	89.0	0.0	436.793.609	145.850.464
wed 11-Jan-2006 07:41:00	85.0	-0.3	436.792.992	145.850.670

- Reloads the latest Kepler data – see Satellites on page 101.
- Doppler – the current frequency correction.
- Transverter – if you are using a transverter enter the correct offsets here and check TX and RX as appropriate.

## AMSAT.org

The satellite's page in AMSAT.org (if available). Note: not all satellites are supported yet.

This is a useful way of getting information about satellites modes and frequencies.

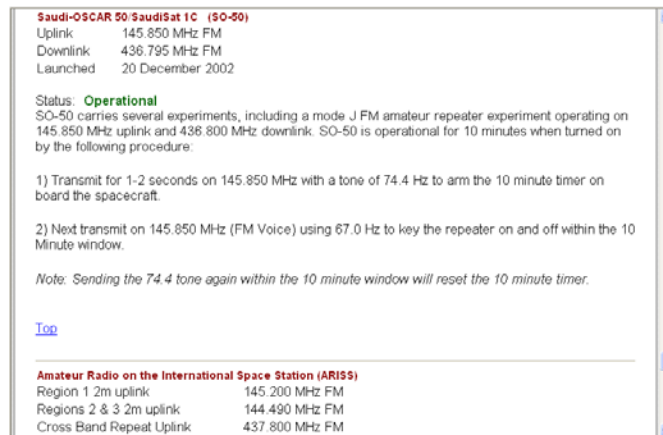

## Kenwood TS-2000

The computer can only update both main and sub frequencies either:

- In receive mode, or
- In transmit mode with SAT selected.

A special solution is required when the uplink (TX) and downlink (RX) frequencies are in the same band. When you start the TS-2000 you have an extra TX VFO option *Sub+XIT* which is only used for same band split operation (see below). When selected the Sub VFO is used for transmitting, Doppler correction is applied by adjusting the XIT value.

### Cross Band

In normal cross-band satellite mode (for example transmit on 70cms and receive on 2m) select:

- TX VFO      B/Sub (the TS-2000 always uses the Sub VFO for TX),
- RX VFO      A/Main,
- SAT            on,
- Split          off.

The TS-2000 must be in satellite mode so that the computer can update the TX frequency.

Be careful with the TS-2000's *TF SET* button, each time you press *TF-SET* the uplink (TX) frequency and the downlink (RX) frequency are swapped. So if the frequencies in HRD are the opposite of those shown on the radio just press *TF SET* once.

### Same Band (Split)

An example is talking to the astronauts on the ISS where the TX frequency is 145.200.000 MHz and the RX frequency is 145.800.00 MHz. You cannot use SAT mode as this is only used for cross-band operation, so you use *Split* mode.

- TX VFO      Sub+XIT,
- RX VFO      Main,
- SAT            off,
- Split          on.

XIT will be switched on as soon as you check TX [X] updates. If you switch it off then HRD will switch it on again.

The RX (main) frequency on the TS-2000 is set to the correct RX frequency (satellite + Doppler correction).

The TX (sub) frequency on the TS-2000 is set to the TX satellite frequency; the Doppler correction is applied by adjusting the XIT value. When you transmit the TS-2000 displays the TX (sub) frequency +/- XIT so the frequency displayed on the TS-2000 is the correct frequency (satellite + Doppler correction).

When you start transmitting you may hear beeps from the radio - it takes HRD a few seconds before it detects that you are transmitting. When HRD detects transmit mode it stops updating the RX (main) frequency until you return to receive as the frequency cannot be updated by the computer while transmitting with SAT off.

## **Yaesu**

### ***FT-847***

You must select *SAT* mode on the FT-847 so that Ham Radio Deluxe can read and set both the TX and RX frequencies. It is not possible to determine the state of the FT-847's *SAT* button so you must press the *SAT* button in HRD so that it shows SAT as being enabled.

In normal cross-band satellite mode (for example transmit on 70cms and receive on 2m) select:

- TX VFO     B/Sub,
- RX VFO     A/Main,
- SAT         on,
- Split       off,
- Tracking    off (you do not need to enable tracking, the computer does everything for you, also the tuning response with HRD is much faster with tracking off). To switch tracking off press the A > B button underneath Track.

The FT-847 must be in satellite mode so that the computer can update the TX frequency.

When in SAT mode the FT-847 takes a long time to respond to 'Read Frequency' requests - especially if tracking is on, as a result when you tune the FT-847 with the radio's tuning dial the displayed frequency will not update very quickly.

### ***Other***

The transmit frequency of some Yaesu radios such as the FT-817 and FT-857 cannot be changed while in transmit mode, so it is not possible to apply Doppler correction while transmitting. If you think your Yaesu radio can be updated while transmitting please contact the author.

## **ICOM**

### ***IC-910H***

In normal cross-band satellite mode (for example transmit on 70cms and receive on 2m) select:

- TX VFO     Sub,

- RX VFO    Main,
- SAT        on.

The IC-910H must be in satellite mode so that the TX uses the Sub frequency. If the bands on the radio are the same as HRD but reversed press *M/S* to switch the Main and Sub frequencies.

Because the IC-910H cannot display the same band on both Main and Sub HRD cannot update the frequencies unless the correct bands are select using the radio controls.

In same-band mode:

- TX VFO    Main,
- RX VFO    Main,
- SAT        off.

A few notes:

1. The TX mode is not updated from the radio.
2. The software has to switch between Main and Sub so that the Sub VFO is updated, it is not possible to detect the radio's current Main / Sub selection so the radio operates in main mode all the time. If you press Sub on the radio you will see that radio switch back to Main as soon as the Sub frequency is updated.

## Single VFO Radios

If you are using a single VFO radio such as the FT-817 then you use the same VFO for TX and RX. Use the TX (F1) button to switch between TX and RX. When you switch to TX the transmit frequency is loaded into the radio before it switches to transmit, when you return to receive the receive frequency is loaded into the radio after it switches to receive.

So the rule is: always use the TX (F1) button to switch between transmit and receive.

## Linear Transponders

Check [X] the Linear Transponder Tracking option if you are using a linear transponder such as HAMSAT / VUSAT / VO-52. These satellites receive a specific range of frequencies (typically 40 - 100 kHz) in one band, convert them to another band and amplify the converted signal for transmission back to your planet. The converted signal is inverted - LSB becomes USB etc. - this is known as an inverting transponder.

Do not use the satellite tracking built into your radio - let HRD do the work for you (for example on the FT-847 this is the Tracking option). To set up the linear transponder frequencies:

- TX center    The center frequency of the uplink (TX) band. For example on VO-52 the uplink band is 435.220-435.280 MHz (LSB/CW) so the center frequency is 435.250.000 MHz.
- RX center    The center frequency of the downlink (RX) band. For example on VO-52 the downlink band is 145.870-145.930 MHz (USB/CW) so the center frequency is 145.900.000 MHz.

As you tune your RX frequency the TX frequency will be correctly adjusted by applying [1] offsets from the center frequencies and then [2] Doppler correction.

To adjust your transmit signal so that it matches the receive frequency use the spin button to the right of the TX center field. It will be necessary to adjust the

transmit signal as your radio(s) may not be correctly aligned, also the linear transponder in the satellite may also not be correctly aligned.

The tracking option in a radio cannot correctly compensate for Doppler, this is one reason why many QSO's drift gently across the linear transponder's available bandwidth. Only correct computer control will ensure that two or more stations stay on the same frequency while the satellite passes overhead. When using the linear transponder option HRD will correctly control your radio's frequencies so that they are both compensated for Doppler shift.

## Frequency Resolution

The frequency resolution is set to 1 Hz for:


- All ICOM,
- All Elecraft,
- All FlexRadio,
- All Kenwood .

All other radios are set to 10 Hz. If you have a radio that supports 1 Hz resolution and is not in the above list please contact the author.

## Options


Option	Description
VFO	The VFO used for the uplink (TX) and downlink (RX). If checked [X] the selected VFO is updated regularly as the satellite frequency is corrected for Doppler shift.
Satellite	The satellite frequency. Click the Open button to select a new frequency from a popup window containing the Favourites definitions or enter the new frequency.
Transverter	If you are using a transverter enter your transverter's intermediate frequency here and check the [X] box. If you are not using a transverter either leave this field empty or do not check the [X] box. The radio frequency is calculated as: Satellite - Transverter + Doppler shift.
Radio	The radio frequency as computed by HRD taking Doppler shift into account.
Satellite	Select the current satellite from a dropdown list that contains the entries selected earlier in the Satellites window.
Plot for	Determines the amount of information that is plotted over the surface of the planet for the current satellite.
TX > RX	Copy the Uplink satellite frequency to the Downlink satellite frequency.
RX > TX	Copy the Downlink satellite frequency to the Uplink satellite frequency.
TX <> RX	Exchange the Uplink and Downlink satellite frequencies.

# Schedule

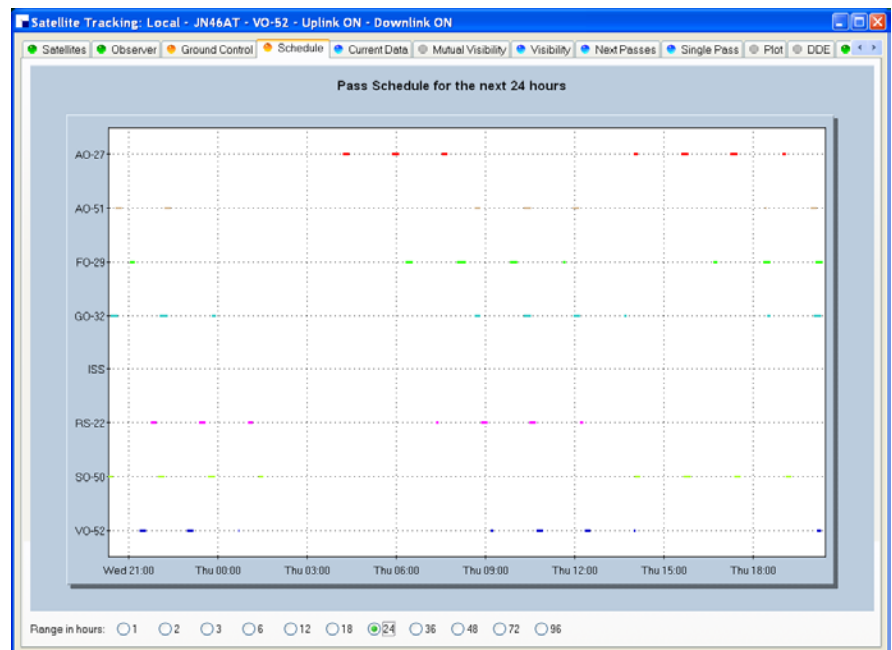

This window shows the pass schedule for the satellites selected in the Satellites window.


# Current Data

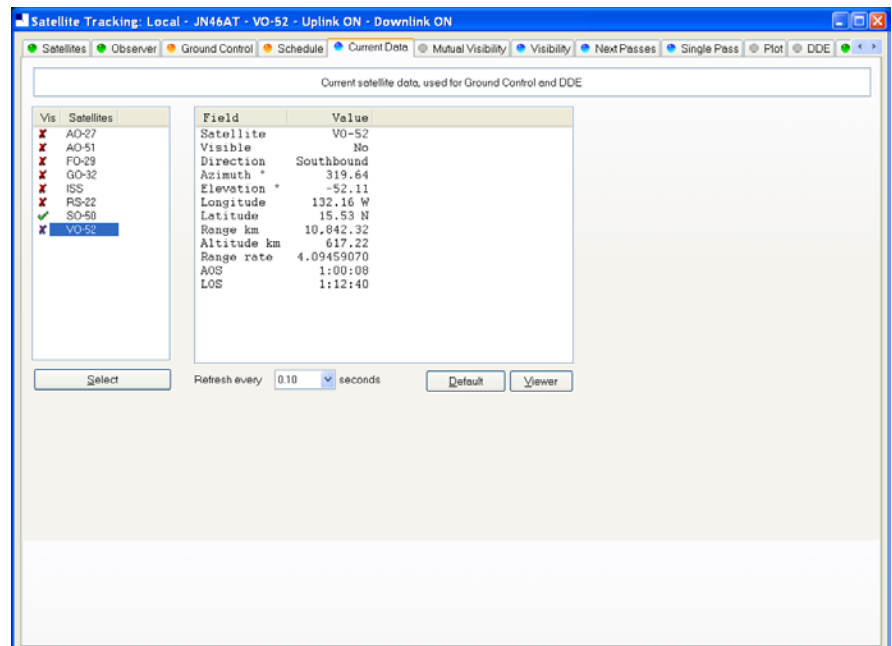

This window shows all computed information for a selected satellite. This window provides the data for the *Ground Control* and *DDE* windows.

Press *Viewer* to display the data with the default text file viewer, usually Notepad.

# Mutual Visibility

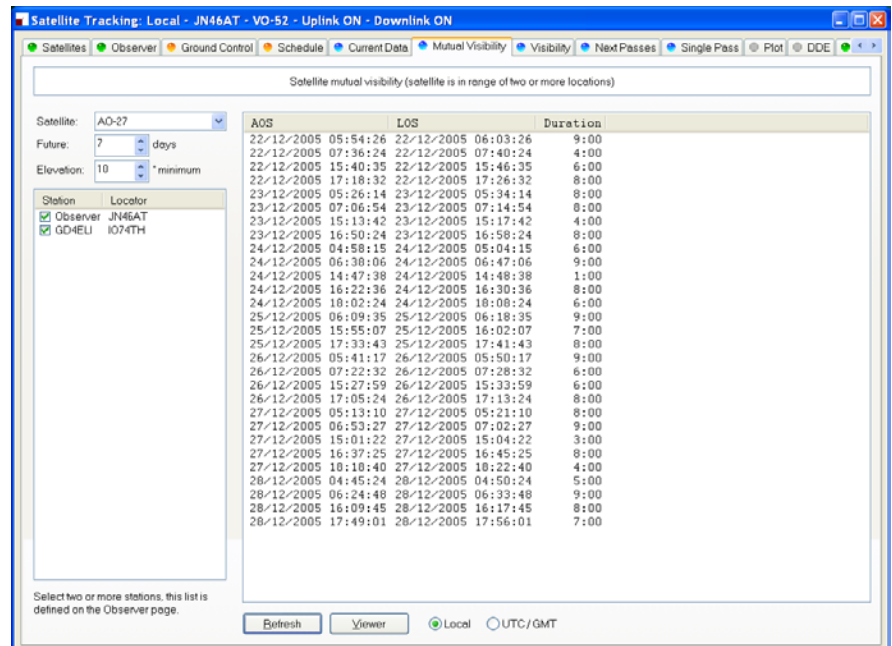

The mutual visibility window answers the question 'when is a satellite simultaneously visible from two or more locations'.

The information is determined up to 99 days in the future for any stations from the list defined in the *Observer* page.

The satellite is considered to be visible if the elevation is the same as or greater than the selected value.

Use the *Viewer* option to display the data in Notepad, for example:


```
Satellite .....: AO-27
Future .....: 7 days
Min elevation ...: 10
Time format ....: Local
```

```
+-----+
| Station | Locator |
+-----+
| observer | JN46AT |
| GD4ELI  | IO74TH |
+-----+
```

AOS	LOS	Duration
22/12/2005 05:54:26	22/12/2005 06:03:26	9:00
22/12/2005 07:36:24	22/12/2005 07:40:24	4:00
22/12/2005 15:40:35	22/12/2005 15:46:35	6:00
22/12/2005 17:18:32	22/12/2005 17:26:32	8:00
23/12/2005 05:26:14	23/12/2005 05:34:14	8:00
23/12/2005 07:06:54	23/12/2005 07:14:54	8:00
23/12/2005 15:13:42	23/12/2005 15:17:42	4:00
23/12/2005 16:50:24	23/12/2005 16:58:24	8:00
24/12/2005 04:58:15	24/12/2005 05:04:15	6:00
24/12/2005 06:38:06	24/12/2005 06:47:06	9:00
24/12/2005 14:47:38	24/12/2005 14:48:38	1:00
24/12/2005 16:22:36	24/12/2005 16:30:36	8:00
24/12/2005 18:02:24	24/12/2005 18:08:24	6:00
25/12/2005 06:09:35	25/12/2005 06:18:35	9:00
25/12/2005 15:55:07	25/12/2005 16:02:07	7:00
25/12/2005 17:33:43	25/12/2005 17:41:43	8:00
26/12/2005 05:41:17	26/12/2005 05:50:17	9:00
26/12/2005 07:22:32	26/12/2005 07:28:32	6:00
26/12/2005 15:27:59	26/12/2005 15:33:59	6:00
26/12/2005 17:05:24	26/12/2005 17:13:24	8:00
27/12/2005 05:13:10	27/12/2005 05:21:10	8:00
27/12/2005 06:53:27	27/12/2005 07:02:27	9:00
27/12/2005 15:01:22	27/12/2005 15:04:22	3:00
27/12/2005 16:37:25	27/12/2005 16:45:25	8:00
27/12/2005 18:18:40	27/12/2005 18:22:40	4:00
28/12/2005 04:45:24	28/12/2005 04:50:24	5:00
28/12/2005 06:24:48	28/12/2005 06:33:48	9:00
28/12/2005 16:09:45	28/12/2005 16:17:45	8:00
28/12/2005 17:49:01	28/12/2005 17:56:01	7:00



# Visibility

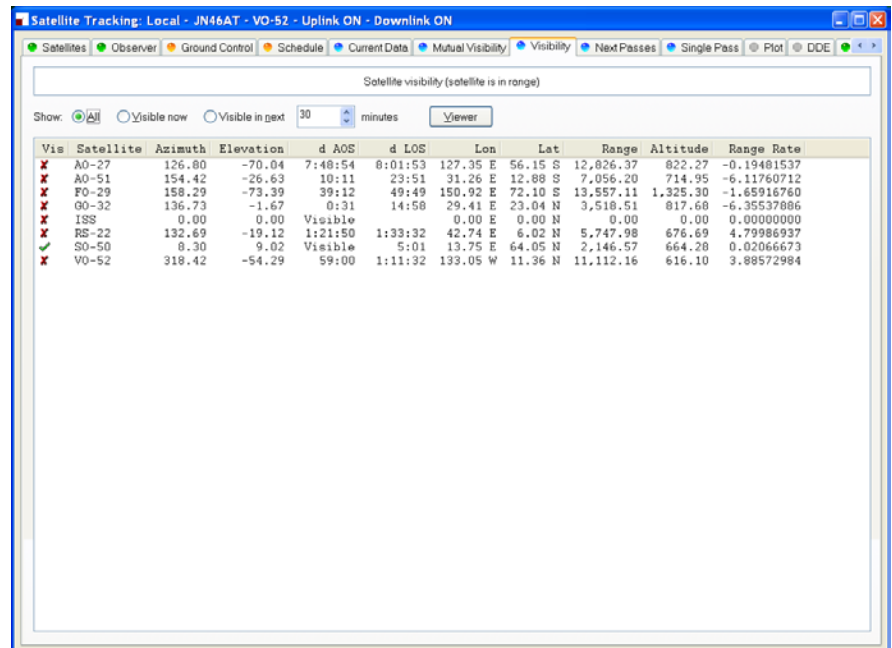

The visibility window gives you an overview of the satellites you have selected in the Satellites window.


Select the satellites that are displayed:

- All - displays all satellites,
- Visible now - displays only the satellites which are currently visible,
- Visible in next... - displays the satellites visible at any time in the time period you select, for example the next 60 minutes.

For each entry in this display the columns are:

Column	Description
Vis	Whether the satellite is currently visible.
Satellite	The name of the satellite.
Azimuth	The azimuth of a satellite is the angle between the vertical plane containing it and the plane of the meridian. It is customary to reckon the azimuth of a line from the south point of the horizon around by the west from 0[deg] to 360[deg].
Elevation	The angular distance above the horizon.
AOS	Acquisition of signal is the elapsed time at which the satellite becomes visible and a signal can theoretically be heard. If empty then the satellite is already visible.
LOS	Loss of signal is the elapsed time after which the satellite is no longer visible and the signal can theoretically no longer be heard.
Lon	The satellite's current longitude.
Lat	The satellite's current latitude.
Range	The distance of the satellite from the observer's location measured in kilometers. (A mile is 1.6 kilometers; a kilometer is 0.62 miles.)
Altitude	The altitude of the satellite above sea level measured in meters.
Range Rate	The value required to calculate Doppler frequency adjustment.

# Next Passes

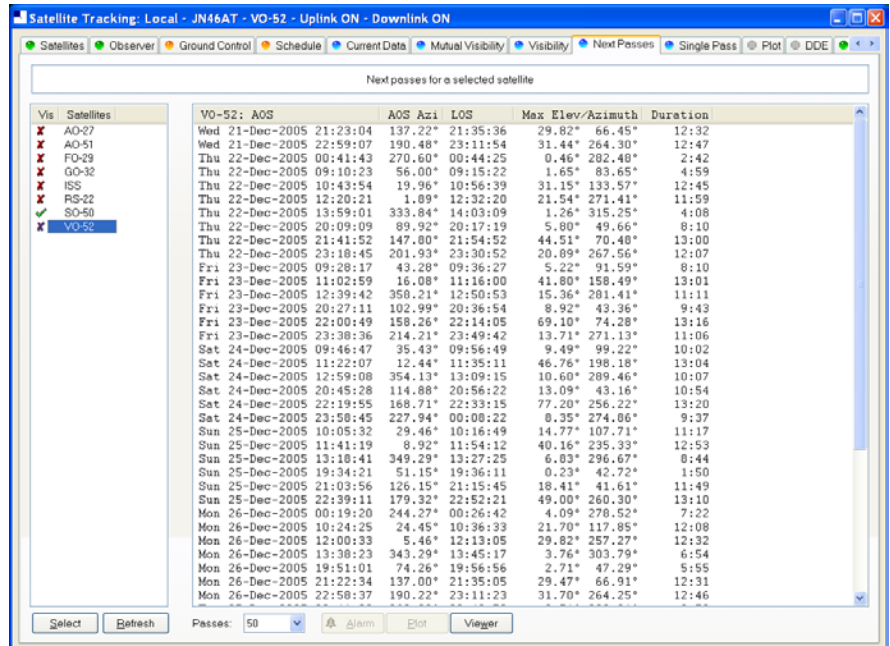


This window shows up to 1,000 passes for a selected satellite. Note: do not select more than 100 passes unless you have a very powerful computer, minimum CPU frequency of 2 GHz is recommended.

Press *Alarm* to add an audio alarm when a satellite is about to pass overhead.

Press *Plot* to plot a selected pass in the Single Pass window.

Press *Viewer* to display the data with the default text file viewer, usually Notepad.

# Single Pass

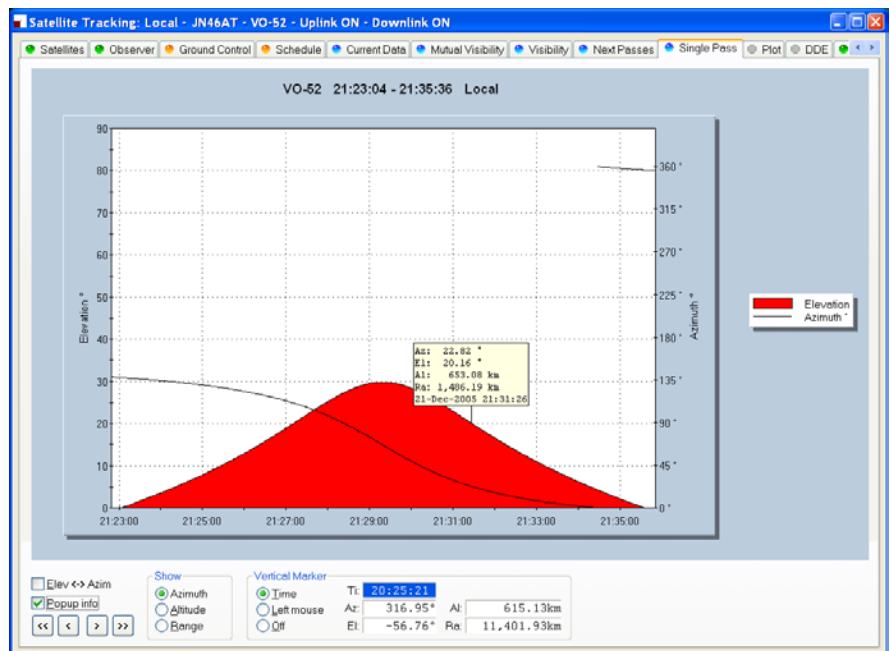


This window plots a single pass for the satellite selected in the Next Passes window. The elevation is plotted on the left y-axis; time is on the x-axis. Select Azimuth, Altitude or Range to be plotted on the right y-axis.

If Popup info is checked a vertical dashed marker line is displayed which either tracks the current time or is positioned by clicking on the chart with the left mouse button.


As the marker position changes, the azimuth, elevation, altitude and range are displayed in the marker fields.

## Plot

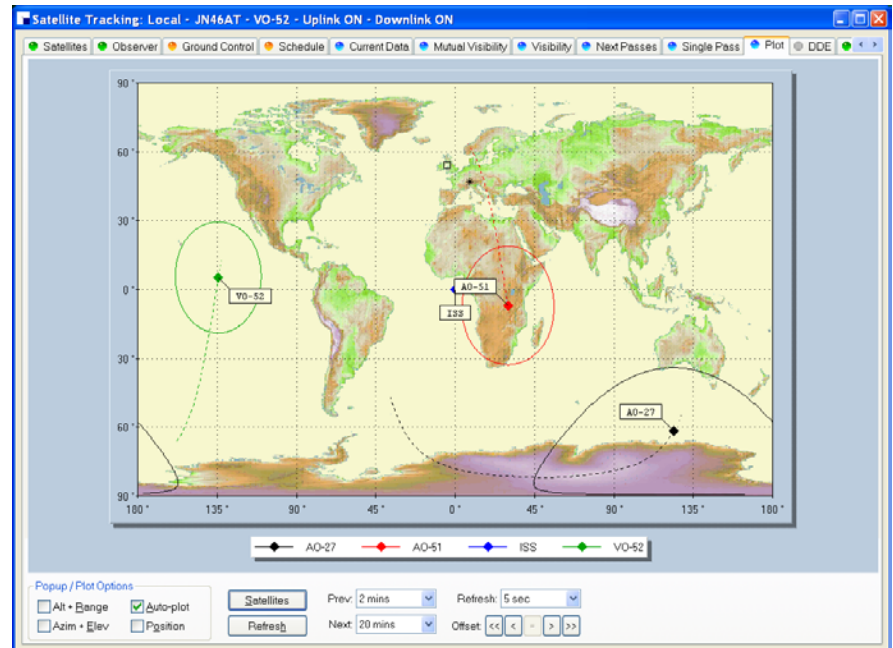

This window shows the position of one to four satellites above the surface of the planet.

# DDE

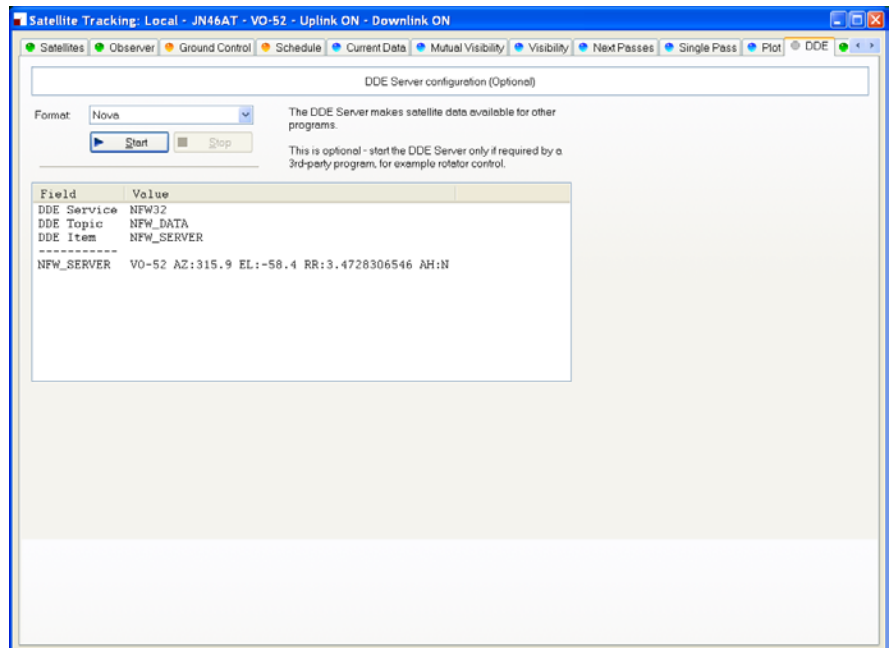

This window controls the DDE server. If you want to use HRD's data with another program you must start HRD's DDE Server. Select the DDE format: currently only Nova is supported. Press *Start* to start the DDE server.

# Synchroniser

---

## Introduction


The synchronizer is used to control two or more radios where a common frequency is shared by using the Dynamic Data Exchange (DDE) mechanism.

For each radio you are using you start an instance of HRD, one instance is the *Master*, the rest are the *Slaves*, the slaves receive frequency and mode information from the master.


---

## Starting

Start the Synchroniser from the Tools> Programs menu, then press Scan to find the active HRD instances.

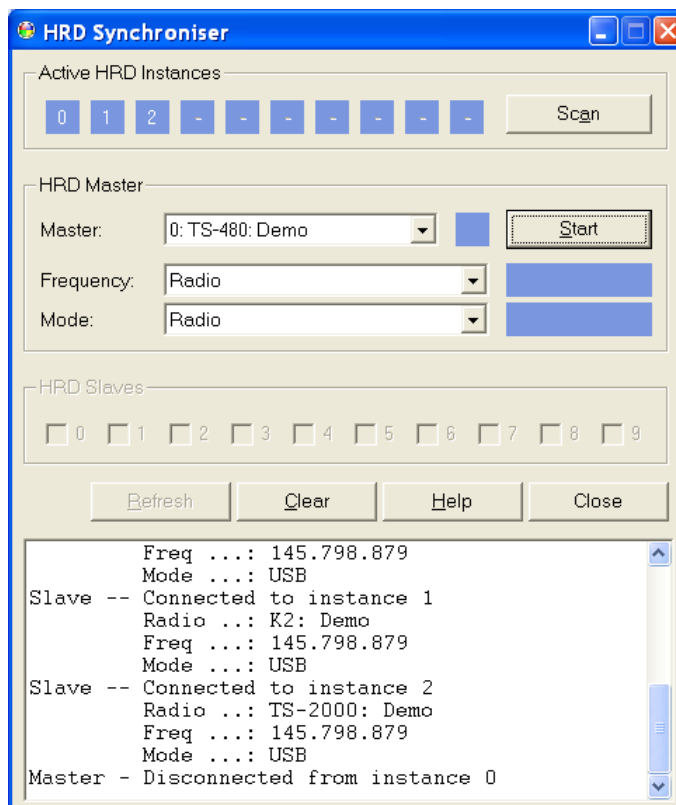

Select the master instance (supplied the frequency and mode), and then press *Start*.

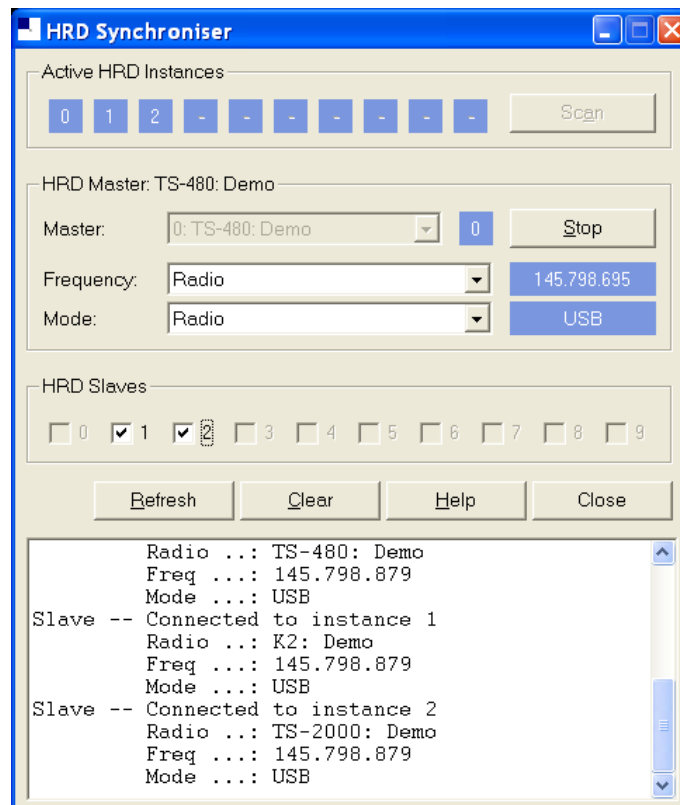

In the Frequency and Mode dropdowns you select the corresponding source from the HRD master instance:

- Radio – as seen on the main HRD display,
- Transverter – frequency is taken from the Transverter window (selected from the Tools menu).
- Satellite uplink – the uplink frequency and mode (see Ground Control on page 105).
- Satellite downlink – the downlink frequency and mode (see Ground Control on page 105).

In the HRD Slaves group box check the instances to be controlled by the Synchroniser.

As soon as you check a slave the slave's frequency and mode are updated with the current values from the master; every time the master frequency and / or mode change they are sent to the slave for so long as the slave option remains checked.

---

## Dual Radio Satellite Tracking

Refer to Satellite Tracking on page 101, specifically Ground Control on page 105.

If you are using two radios for satellite tracking (for example two FT-817 or IC-7000):

1. Start an instance of HRD for each radio; connect to the radios.
2. Select an instance to use as the master, in this example the radio used for receive.
3. In the master (receive) instance:

- Start the display.
  - Enter transmit *and* receive frequency information for the satellite you are tracking.
  - Check the RX VFO, *do not check a TX VFO as this instance will not be used for transmit.*
4. Start the Synchroniser:
- Master is the receive instance,
  - Slave is the transmit instance,
  - Select the *Satellite uplink* option for Frequency and Mode so that the slave receives the frequency and mode used for transmit as computer by the Master instance.

The slave will now be updated with the transmit frequency and mode for transmit every time it changes in the master instance.





# 3<sup>rd</sup>-Party Programs

---

## Introduction

HRD supports 3rd-party programs such as logbooks via a virtual serial port. See also DDE Support on page 57.

An example of a virtual serial port is available from Phil Covington N8VB. His homepage is <http://www.philcovington.com/SDR.html> look for the *N8VB vCOM Virtual Serial Ports Driver* download.

The N8VB driver works with Windows 2000, XP and higher. Windows 95/98/SE/ME and NT 4.0 are not supported.

N8VB's solution creates a pair of virtual COM ports (virtual because there is no hardware associated with a virtual COM port). The ports are effectively connected back-to-back – just like a normal serial cable.

In the description that follows two ports are created during the installation, COM7 (used by HRD) and COM8 (used by the 3rd-party program).

- HRD opens and listens on COM7 port for incoming requests.
- The other program opens COM8 in exactly the same way it would connect to a radio using a hardware serial port.

The connection parameters used by the 3<sup>rd</sup>-party program to connect with COM8 are:

- **Speed** any (9600 by default but this really doesn't matter),
- **Stop bits** 2,
- **Parity** none.

The protocol supported is Kenwood, the command set current supported is:


- **FA** Get / set VFO-A.
- **FB** Get / set VFO-B.
- **MD** Get / set mode.
- **IF** Read status, currently frequency, TX status, and mode are supported,
- **SM** Read the S-Meter.

To use this option Ham Radio Deluxe must be connected to a radio, otherwise the standard Kenwood error response ? ; will be returned. The radio does not have to support the Kenwood protocol as Ham Radio Deluxe makes the necessary conversions.

---

## Configuring

Select *3<sup>rd</sup>-Party Serial Port* from the *Tools* menu.

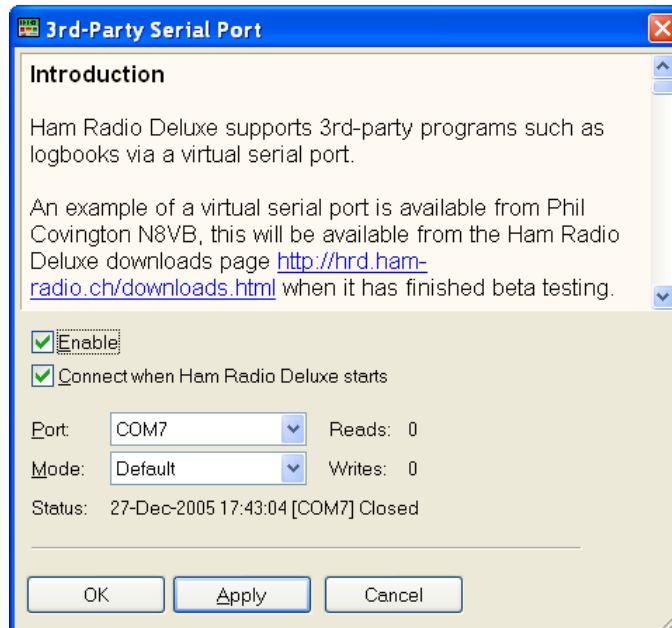

*Enable* opens the connection on the selected port – in this case COM7.

Check *Connect* to automatically open the connected everything HRD starts.

In the *Port* dropdown you select the COM port to use

The *Mode* dropdown is reserved for future use. The only option is *Default*.

And that's all there is to it.

---

## Testing

To test the connection:

- Start HyperTerminal (supplied with Windows).
- Connect to COM8 (the virtual serial port used by the 3<sup>rd</sup> party programs).
- Enter **FA**; you will see a value such as FA00050100000; returned (50.1 MHz).

---

## Command Detail

**FA** Reads and sets the VFO A frequency in Hz

```
Set      FA<11 digit frequency>;
Read     FA;
Answer   FA<11 digit frequency>;
```

**FB** Reads and sets the VFO B frequency in Hz

```
Set      FB<11 digit frequency>;
Read     FB;
Answer   FB<11 digit frequency>;
```

#### **IF** Retrieves the transceiver status

```
Read     IF;
Answer   IFP1P2P3P4p5P6P7P8P9P10P11P12P13P14P15;
```

Where:

```
P1 = 11 digits, frequency in Hz
P2 = 5 digits, not used
P3 = 5 digits, not used
P4 = 1 digit, not used
P5 = 1 digit, not used
P6 = 1 digit, not used
P7 = 2 digits, not used
P8 = 1 digit, 0: RX, 1: TX
P9 = 1 digit, see MD above
P10 = 1 digit, not used
P11 = 1 digit, not used
P12 = 1 digit, not used
P13 = 1 digit, not used
P14 = 2 digits, not used
P15 = 1 digit, not used
```

#### **MD** Recalls or reads the operating mode status

```
Set      MD<mode>;
Read     MD;
Answer   MD<mode>;
```

Where mode is one of:

```
0: None
1: LSB
2: USB
3: CW
4: FM
5: AM
6: FSK
7: CWR (CW Reverse)
8: Tune
9: FSR (FSK Reverse)
```

#### **SM** Retrieves the S-Meter value

```
Read     SM;
Answer   IF<4 digit value>;
```

Where the returned value range is from 0000 to 0030. Each unit is 1/2 an S-unit. S5 is 0010, S9 is 0018.



# Annex: Command Tester

---

## Introduction

### Too Many Radios

In a project like Ham Radio Deluxe it is not always possible for the developers to have every radio available for their own use: it's very expensive and takes up too much room.

This is where the user community helps - by using the Command Tester individual commands are tested by the users of Ham Radio Deluxe and the results sent to the developers as a text file in a standard format.

Very often the problem is either determining the data returned for the various mode / filter / frequency combinations supported by a rig or working out how to set a rig option.

The handbooks supplied by manufacturers can be wrong or just not contain enough information to successfully implement a command.

### Data Formats

There are major differences in the formats selected by the manufacturers whose radios are supported by Ham Radio Deluxe.

The Command Tester supports all necessary formats for the radio manufacturers supported by Ham Radio Deluxe.

### Command Types

There are two types of command – Get and Set.

A *Get* command returns an item of information, for example the VFO frequency or mode. A *Set* command changes a rig setting, typically the frequency or mode.

Command Tester supports both Get and Set commands.


---

## Starting

To start the Command Tester:

- Make sure you have not connected to a radio with Ham Radio Deluxe if you will be using the same COM port for the Command Tester. If you have a radio connection then you must disconnect using the Disconnect option in the File menu.

- Select *Command Tester* from the *Tools* menu.

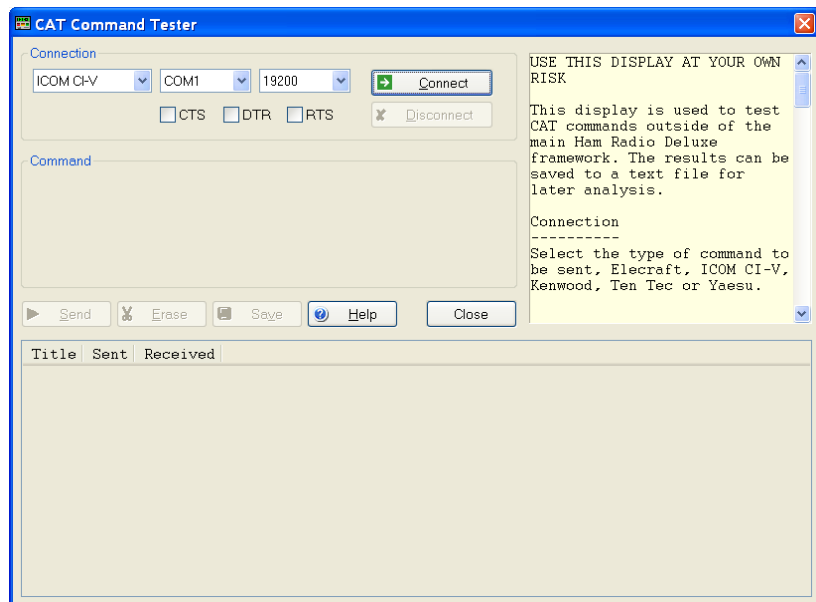


## Connect

To connect to your radio you must select:

- COM port where you have connected the interface cable to the radio,
- The baud rate (COM port speed). If you are not sure of the correct speed consult your radio manual.
- CTS used for flow control, specifies whether the CTS (clear-to-send) signal is monitored for output flow control. Used by Kenwood.
- DTR used either for flow control or to provide power for the CAT interface. This depends on the manufacturer's protocol and your CAT interface.
- RTS used either for flow control or to provide power for the CAT interface. This depends on the manufacturer's protocol and your CAT interface.

Then press *Connect*.

When you press *Connect* a warning message is displayed. Using incorrect commands can confuse some radios, so if you are not sure what you are doing now is the time to leave *Command Tester*.

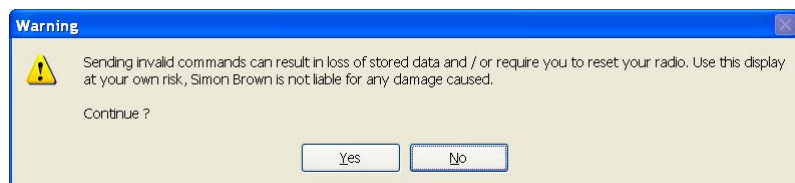

Press *Yes* to continue.

---

## General Options

These options are common to all formats.

- Send - sends a command to the radio.
- Erase - clears the contents of the results window.
- Save - saves the contents of the results to a file in ASCII format. You can send the contents of this file by email to help the developers of ham Radio Deluxe.
- Help - pressing help displays the contents of the small help window as a text file using Notepad.
- Close - closes the Command Tester. If there are entries in the results window you are prompted to save them first.

## Results

The results are shown in the bottom half of the Command Tester window.

- Title – as entered in the Title: field.
- Send – the command sent to the rig, shown in ASCII and/or Hex as appropriate.
- Received – the received data, shown in ASCII and/or Hex as appropriate.

## Platforms

Examples of HRD use with various platforms is shown here.


### Elecraft

The Elecraft protocol uses ASCII characters; it appears to be based more-or-less on the Kenwood protocol. Refer to the ‘Elecraft KIO2 Programmer’s Reference’ for full information.

The data sent and received is always shown in ASCII (text) that makes debugging relatively easy.

If you select *Show hex output* the returned data is also shown in hexadecimal (see the *Change mode to RTTY* below).

When a Set command is sent – for example MD6; to set the mode to RTTY there is no response from the rig, so instead MD6;MD; is sent – set the mode to RTTY (MD6;) and then read the mode (MD;) – this way there is always returned data.

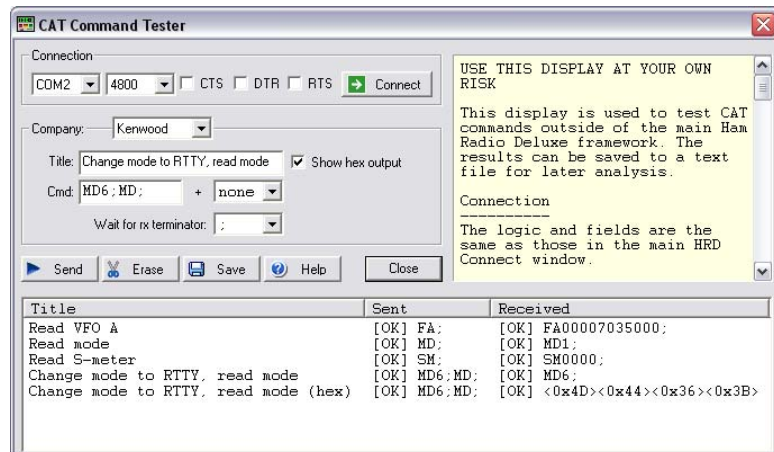

In the *Change mode to RTTY* example above the returned string is shown in both ASCII and hexadecimal because the *Show hex output* option was selected for this command.

### Fields

- Title - a description of the command you are testing, for example 'Read Frequency' or 'read Mode'. Mandatory
- Cmd - the ASCII string sent to the rig. Elecraft strings are terminated with a ;
- Wait for rx terminator - when reading the response read characters from the rig until this character is returned or a timeout occurs.

### Examples


Test	Description
Read Frequency	Command is FA; returned data format is FA + 11 digits + ;. <ul style="list-style-type: none"> <li>• FA00007035000;</li> </ul> Frequency is 7.035.000 MHz.
Read Mode	Command is MD; returned data format is MD + 1 digit + ;. <ul style="list-style-type: none"> <li>• MD1;</li> </ul> (1=LSB, 2=USB, 3=CW, 6=RTTY, 7=CW-REV, 9=RTTY-REV)
Read S-Meter	Command is SM; returned data format is SM + 4 digits + ;. <ul style="list-style-type: none"> <li>• SM0000;</li> </ul> Returned value is in the range 0000 to 0015.

## ICOM CI-V

The example below is uses an IC-7800 with:

- From: (controller address) E0 (personal computer, the default value),
- To: (CI-V address) 6A (the default for the IC-703). Refer to your ICOM radio manual for the correct CI-V address for your rig.

The data received from the radio is always shown in hexadecimal.

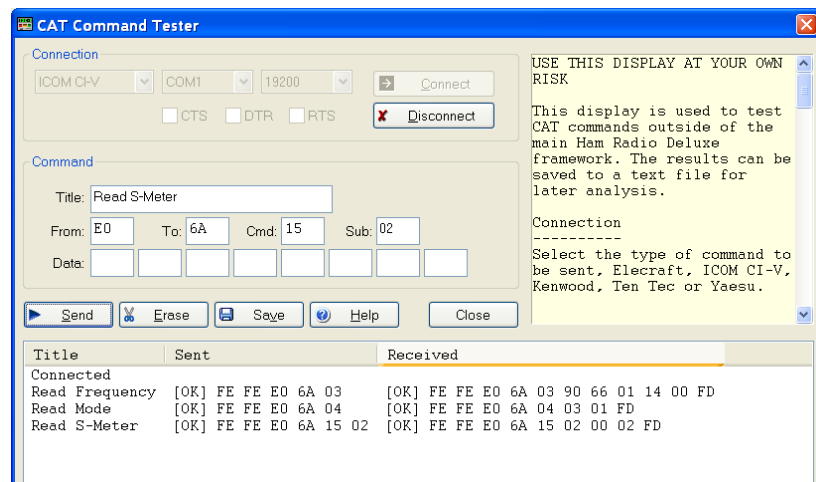

### Fields

- Title - a description of the command you are testing, for example 'Read Frequency' or 'read Mode'. Mandatory
- From - controller's default address. Enter E0 (Personal Computer). Mandatory



- To - transceiver's default address, the IC-703 uses 68. The address used by your radio is found in the user manual. Mandatory
- Cmd - command number (refer to the radio handbook). Mandatory
- Sub - sub command number (refer to the radio handbook). If there is no sub command then this field must be left empty. Optional
- Data - if the command supplies data (for example setting a new frequency or mode) then enter the values in these fields. If there is no data for the command then these fields must be left empty.

### Examples

These examples show a CI-V address of 6A, the default for the IC-7800. Change this to the CI-V address assigned to your radio.

Test	Description
Read frequency	<p>Command is 03, no sub command or data; these fields must be left empty.</p> <p>The returned data is:</p> <ul style="list-style-type: none"> <li>• FE FE (preamble)</li> <li>• E0 (Controller address)</li> <li>• 6A (IC-7800 CI-V address)</li> <li>• 03 (Command number)</li> <li>• 89 38 06 07 00 (frequency in BCD format)</li> <li>• FD (end of message)</li> </ul>
Read Mode	<p>Command is 04, no sub command or data; these fields must be left empty.</p> <p>The returned data is:</p> <ul style="list-style-type: none"> <li>• FE FE (preamble)</li> <li>• E0 (Controller address)</li> <li>• 6A (IC-7800 CI-V address)</li> <li>• 04 (Command number)</li> <li>• 00 01 (mode)</li> <li>• FD (end of message)</li> </ul>
Read S-Meter	<p>Command is 15, sub command is 02. There is no data; these fields must be left empty.</p> <p>The returned data is:</p> <ul style="list-style-type: none"> <li>• FE FE (preamble)</li> <li>• E0 (Controller address)</li> <li>• 6A (IC-7800 CI-V address)</li> <li>• 15 (Command number)</li> <li>• 02 (Sub command number)</li> <li>• 01 09 (s-meter value)</li> <li>• FD (end of message)</li> </ul>

### Mode / Filter

A common problem is determining the data returned for the possible mode and filter combinations.

To list all combinations follow the following steps for each mode and filter combination:

- Select the Mode and Filter on your rig using the rig buttons and controls.
- Enter a value in the Command Tester Title field which corresponds to the mode and filter selected in 1 above, for example Mode = USB, Filter = Wide.
- Enter a command of 04; clear the sub command and data fields.
- Press Send .

When you have finished press *Save* to save the contents of the Results window to a file which you can forward to the Ham Radio Deluxe development team.

### **Other**

Follow the logic in Mode / Filter above for other commands which you want to investigate:

- Select the option on your rig using the rig buttons and controls.
- Enter a value in the Command Tester Title field that corresponds to the option you are investigating.
- Referring to your rig's handbook enter the command, sub command and data value as appropriate to read the rig's current value or set a new value. If there is no sub command or data then these fields must be left empty.
- Press *Send*.


## **Yaesu**

Starting with the FTDX-9000 Yaesu has changed the CAT protocol to one very similar to that used by Kenwood. So if you are fortunate enough to have the FTDX-9000 please use the Kenwood commands.

The example below uses the FT-817. The data received from the radio is always shown in hexadecimal. The overall format of Yaesu commands is always P1 – P4 + OpCode, the actual commands and the data returned from the rig depends on the model and also on the EPROM revision level.

Some commands do not require specific values for P1 – P4, it is recommended that if a value is not specified in the radio handbook then you enter 00, this is the approach taken in Ham Radio Deluxe.

Be aware that there are many errors in the Yaesu documentation, so the data returned may not agree with the handbook and the radio's current settings.

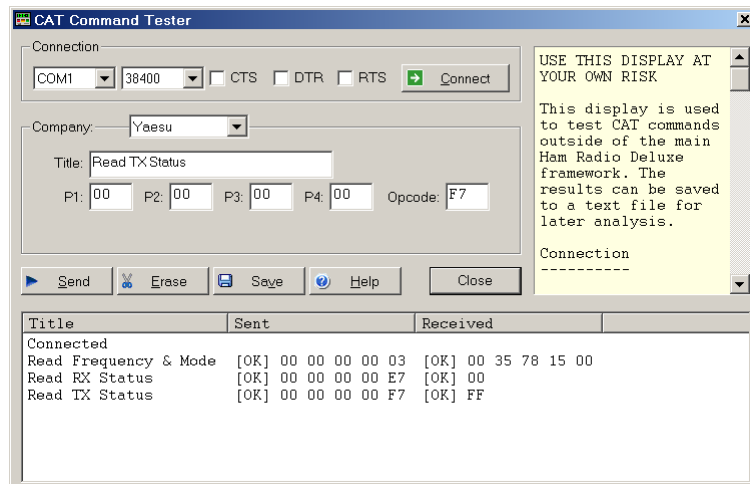

## Fields

- Title - a description of the command you are testing, for example 'Read Frequency' or 'read Mode'. Mandatory
- P1 – P4 - the command parameters. Not all commands require parameters; it is recommended that parameters that can be set to any value be set to 00. Fields left empty are set to 00.
- OpCode - the instruction OpCode. Mandatory.

## Examples

Test	Description
Read frequency and mode	<p>The OpCode is 03, P1-P4 can have any value, in this example they are set to 00.</p> <ul style="list-style-type: none"> <li>• P1: 00 P2: 00 P3: 00 P4: 00 OpCode: 03</li> </ul> <p>The format of the returned data is 5 bytes, the first four containing the frequency in binary coded decimal followed by the mode.</p> <p>The returned value is 00 35 78 15 00 which corresponds to a frequency (00 35 78 15) of 51.875.300 and a mode (00) of LSB.</p>
Read RX status	<p>The opcode is E7, P1-P4 can have any value, in this example they are set to 00.</p> <ul style="list-style-type: none"> <li>• P1: 00 P2: 00 P3: 00 P4: 00 OpCode: E7</li> </ul> <p>The format of the returned data is 1 byte.</p> <p>The returned value is 00.</p>
Read TX status	<p>The OpCode is F7, P1-P4 can have any value, in this example they are set to 00.</p> <ul style="list-style-type: none"> <li>• P1: 00 P2: 00 P3: 00 P4: 00 OpCode: F7</li> </ul> <p>The format of the returned data is 1 byte.</p> <p>The returned value is FF (not in TX mode).</p>

## Other Commands

For the commands you want to investigate:

- Select the option on your rig using the rig buttons and controls.
- Enter a value in the Command Tester Title field that corresponds to the option you are investigating.
- Referring to your rig's handbook enter the P1 – P4 parameters and OpCode as appropriate to read the rig's current value or set a new

value. If there are no values specified for P1 – P4 then enter 00 in these fields.

- Press *Send*.

# Annex: Portmon

---

## Introduction

This excellent utility for monitoring COM port activity can be downloaded from <http://www.sysinternals.com/>.

Quoting the *Sysinternals* website: “Portmon is a utility that monitors and displays all serial and parallel port activity on a system. It has advanced filtering and search capabilities that make it a powerful tool for exploring the way Windows works, seeing how applications use ports, or tracking down problems in system or application configurations.

Portmon works on NT 4.0, Win2K, XP and Server 2003, Windows 95 and Windows 98.”

It is often useful to run Portmon when unexpected results are returned from a radio (or other device such as a rotator or keyer).

The Steps:

- Close any programs connected to your radio or device being interrogated.
- Start Portmon.exe
- Make sure these options are set:

Menu	Option	State / Comment
Options	Show Time	ON
Options	Show HEX	ON if ICOM, Yaesu or TenTec OFF if Elecraft, Kenwood ON if you are not sure (I read hex)
Options	Clock Time	OFF
Computer	Select your local computer	
Capture	Ports	The COM port where you have connected the interface to your radio, select only one COM port to avoid confusion.
Capture	Capture Events	ON

- Start HRD then connect to your radio.
- Let HRD run for about 60 seconds while you perform your tests.
- Stop HRD (File menu: Disconnect).

- In Portmon set the Capture: Capture Events option to OFF.
- Save the logfile to disk, put into a zip file if possible and send to <mailto:simon@hb9drv.ch>.

## Sample Log

For this example the *Process* and *Port* columns are not shown to save space. The log shows the startup for an IC-78000, results are in Hex. The *Time* for each command is shown which helps detect timeouts.

#	Time	Request	Result	Other
0	0.00005929	IRP_MJ_CREATE	SUCCESS	Options: Open
1	0.00000167	IOCTL_SERIAL_SET_QUEUE_SIZE	SUCCESS	InSize: 1024 OutSize: 1024
2	0.00000341	IOCTL_SERIAL_PURGE	SUCCESS	Purge: TXABORT RXABORT TXCLEAR RXCLEAR
3	0.00000261	IOCTL_SERIAL_GET_BAUD_RATE	SUCCESS	
4	0.00000123	IOCTL_SERIAL_GET_LINE_CONTROL	SUCCESS	
5	0.00000092	IOCTL_SERIAL_GET_CHARS	SUCCESS	
6	0.00000088	IOCTL_SERIAL_GET_HANDFLOW	SUCCESS	
7	0.00000903	IOCTL_SERIAL_SET_BAUD_RATE	SUCCESS	Rate: 19200
8	0.00000479	IOCTL_SERIAL_SET_RTS	SUCCESS	
9	0.00000371	IOCTL_SERIAL_SET_DTR	SUCCESS	
10	0.00000278	IOCTL_SERIAL_SET_LINE_CONTROL	SUCCESS	StopBits: 1 Parity: NONE WordLength: 8
11	0.00000118	IOCTL_SERIAL_SET_CHAR	SUCCESS	EOF:0 ERR:3f BRK:3f EVT:0 XON:11 XOFF:13
12	0.00000257	IOCTL_SERIAL_SET_HANDFLOW	SUCCESS	Shake:1 Replace:40 XonLimit:341 XoffLimit:341
13	0.00000085	IOCTL_SERIAL_SET_TIMEOUTS	SUCCESS	RI:500 RM:250 RC:250 WM:250 WC:250
14	0.00000421	IOCTL_SERIAL_SET_DTR	SUCCESS	
15	0.00000396	IOCTL_SERIAL_SET_RTS	SUCCESS	
16	0.00000200	IOCTL_SERIAL_SET_WAIT_MASK	SUCCESS	Mask: RXCHAR TXEMPTY CTS DSR RLSD BRK RING
17	0.00000270	IOCTL_SERIAL_PURGE	SUCCESS	Purge: TXABORT RXABORT TXCLEAR RXCLEAR
18	0.00002902	IRP_MJ_WRITE	SUCCESS	Length 7: FE FE 6A E0 19 00 FD
19	0.00576019	IRP_MJ_READ	SUCCESS	Length 1: FE
20	0.00000294	IRP_MJ_READ	SUCCESS	Length 1: FE
21	0.00000237	IRP_MJ_READ	SUCCESS	Length 1: 6A
22	0.00000230	IRP_MJ_READ	SUCCESS	Length 1: E0
23	0.00000228	IRP_MJ_READ	SUCCESS	Length 1: 19
24	0.00000231	IRP_MJ_READ	SUCCESS	Length 1: 00
25	0.00000229	IRP_MJ_READ	SUCCESS	Length 1: FD
26	0.01237115	IRP_MJ_READ	SUCCESS	Length 1: FE
27	0.00000319	IRP_MJ_READ	SUCCESS	Length 1: FE
28	0.00000233	IRP_MJ_READ	SUCCESS	Length 1: E0
29	0.00000226	IRP_MJ_READ	SUCCESS	Length 1: 6A
30	0.00000232	IRP_MJ_READ	SUCCESS	Length 1: 19
31	0.00000229	IRP_MJ_READ	SUCCESS	Length 1: 00
32	0.00000229	IRP_MJ_READ	SUCCESS	Length 1: 6A
33	0.00000231	IRP_MJ_READ	SUCCESS	Length 1: FD
34	0.00002705	IRP_MJ_WRITE	SUCCESS	Length 6: FE FE 6A E0 03 FD
35	0.00524006	IRP_MJ_READ	SUCCESS	Length 1: FE
36	0.00000282	IRP_MJ_READ	SUCCESS	Length 1: FE
37	0.00000228	IRP_MJ_READ	SUCCESS	Length 1: 6A
38	0.00000234	IRP_MJ_READ	SUCCESS	Length 1: E0
39	0.00000228	IRP_MJ_READ	SUCCESS	Length 1: 03
40	0.00000237	IRP_MJ_READ	SUCCESS	Length 1: FD
41	0.01239791	IRP_MJ_READ	SUCCESS	Length 1: FE
42	0.00000308	IRP_MJ_READ	SUCCESS	Length 1: FE
43	0.00000231	IRP_MJ_READ	SUCCESS	Length 1: E0
44	0.00000231	IRP_MJ_READ	SUCCESS	Length 1: 6A
45	0.00000229	IRP_MJ_READ	SUCCESS	Length 1: 03
46	0.00000230	IRP_MJ_READ	SUCCESS	Length 1: 00
47	0.00000237	IRP_MJ_READ	SUCCESS	Length 1: 00

# Annex: Remote Server

---

## Technical Information

Remember that the software is designed for Windows NT but it should be possible to map all these commands to Linux and other UNIX derivatives.

The source code for the main processing thread is available; the rest is highly-Windows oriented and is of no use for other platforms.

### Commands

The supported commands are:

Command	Description
MSG_CMD_AUTHENTICATE	Authenticate username/password
MSG_CMD_CLOSE_HANDLE	Close COM port.
MSG_CMD_CREATE_FILE	Open a COM port
MSG_CMD_DEVICE_IO_CONTROL	Send control code to COM port driver
MSG_CMD_GET_COM_PORTS	Return a list of COM ports
MSG_CMD_PURGE_COMM	Discards all characters from the input buffer of the COM port. Terminates pending read or write operations on the resource
MSG_CMD_READ_FILE	Read the COM port
MSG_CMD_READ_FILE_EX	Read the COM port (extended read)
MSG_CMD_SET_COMM_MASK	Specify events to be monitored.
MSG_CMD_SET_COMM_STATE	Configure COM port.
MSG_CMD_SET_COMM_TIMEOUTS	SET timeouts.
MSG_CMD_WRITE_FILE_ASYNC	Asynchronous write, no reply expected
MSG_CMD_WRITE_FILE_SYNC	Synchronous write (reply expected)

---

All commands expect a reply except for MSG\_CMD\_WRITE\_FILE\_ASYNC.

---

The command values are:

```
enum RemoteSvrMessages
{
    MSG_CMD_AUTHENTICATE           = 0,
    MSG_CMD_GET_COM_PORTS          = 1,
    MSG_CMD_CREATE_FILE            = 2,
    MSG_CMD_DEVICE_IO_CONTROL      = 3,
    MSG_CMD_SET_COMM_MASK          = 4,
```

```

MSG_CMD_PURGE_COMM           = 5,
MSG_CMD_SET_COMM_STATE      = 6,
MSG_CMD_SET_COMM_TIMEOUTS   = 7,
MSG_CMD_READ_FILE           = 8,
MSG_CMD_READ_FILE_EX        = 9,
MSG_CMD_WRITE_FILE_SYNC     = 10,
MSG_CMD_CLOSE_HANDLE        = 11,
MSG_CMD_WRITE_FILE_ASYNC    = 12,
};

```

## Structures

The structures used are shown below. All members are byte-aligned. All commands start with the structure

```

typedef struct {
    UINT nSize;        // Total command size
    UINT nHead;       // 4 bytes, 'HRD*'
    UINT nCmd;        // Command index
} MSG_HEADER;

```

- nSize - the total size in bytes of the message being sent.
- nHead – 4 bytes of sanity– ‘HRD\*’.
- nCmd – a command from the table below.

Command	Structure
MSG_CMD_AUTHENTICATE	MSG_AUTHENTICATE
MSG_CMD_CLOSE_HANDLE	MSG_COM_PORT
MSG_CMD_CREATE_FILE	MSG_COM_PORT
MSG_CMD_DEVICE_IO_CONTROL	MSG_COM_PORT
MSG_CMD_GET_COM_PORTS	MSG_GENERAL
MSG_CMD_PURGE_COMM	MSG_COM_PORT
MSG_CMD_READ_FILE	MSG_COM_READ
MSG_CMD_READ_FILE_EX	MSG_COM_READ
MSG_CMD_SET_COMM_MASK	MSG_COM_PORT
MSG_CMD_SET_COMM_STATE	MSG_COM_PORT
MSG_CMD_SET_COMM_TIMEOUTS	MSG_COM_PORT
MSG_CMD_WRITE_FILE_ASYNC	MSG_COM_WRITE
MSG_CMD_WRITE_FILE_SYNC	MSG_COM_WRITE

### MSG\_AUTHENTICATE

```

typedef struct {
    MSG_HEADER header;
    BOOL bAuthenticated;
    char szUsername[64];
    char szPassword[64];
    char szStatus[512];
} MSG_AUTHENTICATE;

```

### MSG\_COM\_PORT

```

typedef struct {

```



```

MSG_HEADER      header;
char            lpFileName[32];
DWORD          dwDesiredAccess;
DWORD          dwCreationDisposition;

DWORD          dwIoControlCode;
BYTE          byInBuffer[64];
DWORD          dwInBufferSize;
BYTE          byOutBuffer[64];
DWORD          dwOutBufferSize;
DWORD          dwBytesReturned;

DWORD          dwFlags;
DWORD          dwEvtMask;

DCB            dcb;
COMMTIMEOUTS  timeouts;

HANDLE        hHandle;
BOOL          bStatus;
char          szStatus[256];
} MSG_COM_PORT;

```

#### MSG\_GENERAL

```

typedef struct {
MSG_HEADER  header;
BOOL       bStatus;
BYTE       byData[4096];
} MSG_GENERAL;

```

#### MSG\_COM\_READ

```

typedef struct {
MSG_HEADER  header;
HANDLE      hHandle;
DWORD       dwNumberOfBytesToRead;
BYTE        byTermChar;
DWORD       dwNumberOfBytesRead;
BOOL        bStatus;
OVERLAPPED overlapped;
BYTE        byData[4096];
} MSG_COM_READ;

```

#### MSG\_COM\_WRITE

```

typedef struct {
MSG_HEADER  header;
HANDLE      hHandle;
DWORD       dwNumberOfBytesToWrite;
DWORD       dwNumberOfBytesWritten;
OVERLAPPED overlapped;
BOOL        bStatus;
BYTE        byData[4096];
} MSG_COM_WRITE;

```



# Annex: Settings

---

## Overview

User settings are stored in the registry and in files in the user's application-specific data folder.

---

## Registry

The registry key used for storing options in HRD is:

*HKEY\_CURRENT\_USER*  
*Software*  
*Simon Brown*  
*HamRadioDeluxe*  
*Options*

The values in this key will not make much sense – they are used by HRD to preserve settings such as window geometry (size, position) and the current scheme.

The values in the key can be safely deleted at any time. Don't change values with a registry editor – you may cause unexpected problems for HRD!

---

## Files

HRD stores files in the folder defined by CSIDL\_APPDATA, this is the file system directory that serves as a common repository for application-specific data. A typical path is:

C:\Documents and Settings\*username*\Application Data\Simon Brown, HB9DRV\Ham Radio Deluxe.


You will not normally need to directly access the files in this folder.

File	Description
*.css	Cascading style sheets, used by HTML export options – for example in Logbook Analysis.
HRD Logbook.mdb	Logbook database
*.opt	Optional schemes – see Schemes on page 27.
HRD Bands 02.txt	Band layouts
HRD Countries.txt	A default Log Windows country file
HRD Custom Defs - <radio>.txt	Custom CAT commands for a specific radio – see CAT Commands on page 83.


HRD Favourites 01.txt	See Favourites on page 65.
HRD Logbook Analysis Defns.txt	TBA
HRD Macros - TS-480.txt	Macro definitions – see Macros on page 83.
HRD Parallel Port Defns.txt	Parallel port definitions – see Auxiliary Switching on page 49.
HRD Satellite Definitions.txt	Used by Ground Control on page 105 – contains a list of satellites and associated frequencies and modes.

## Archiving


The *Archive* option in the *Tools* menu takes a copy of the registry values and files used by all HRD programs (HRD, PSK31 Deluxe, Mapper) and copies them to another folder.

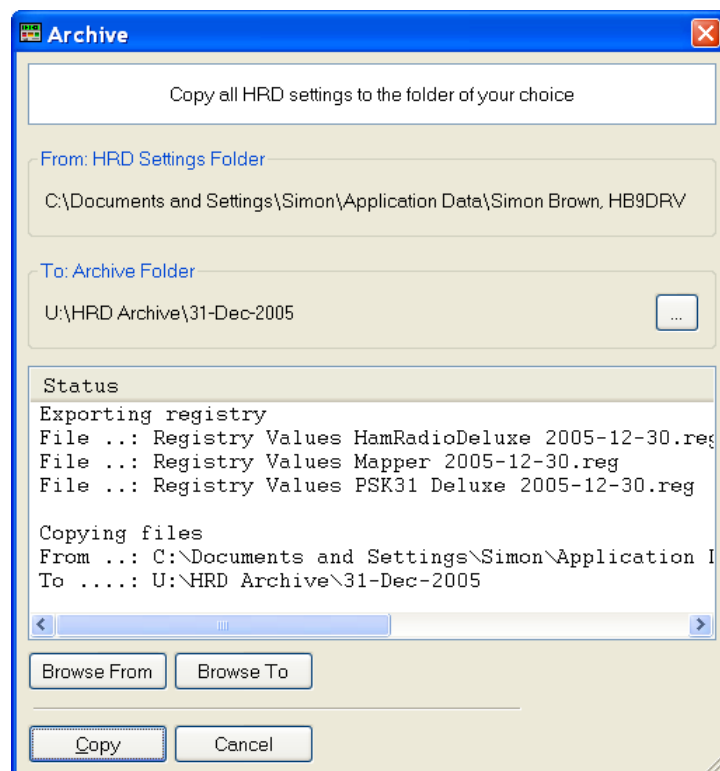


Select the destination folder



Browse the *From* folder



Browse the *To* folder



Start copying files and registry values.

When you press *Copy* you see a DOS window appear briefly a few times. HRD uses **regedit /e** to copy the registry values, this in turn causes the DOS to appear.

To restore registry values just double-click on a .reg file. Windows will prompt you to load the values into the registry.

# Annex: Logbook Database

---

## Introduction

The logbook uses a very simple Access database. Originally DAO 3.5 (Access 97) was used as the programming interface; this has been replaced with ODBC in early 2006 starting with version 3.3 build 984.

Apart from getting away from DAO and the need to install the DAO support (not shipped with Windows) ODBC is needed for used of 64-bit Windows, as DAO is not supported on 64-bit Windows.



The database structure is the same for DAO and ODBC.

Each table contains an auto-incrementing primary key.

To analyse the database yourself:

- Start Microsoft Access,
- Convert the database if necessary using the *Convert Database* option selected from the *Tools* menu; do not overwrite the database!
- Use the *Analyzer> Documenter* option selected from the *Tools* menu.

Notes:

-  Do not use programs such as Microsoft Access to convert the database – or if you do just make sure that you do not overwrite the database. DAO is delicate – if you convert to a newer version of Access you will not be able to open the database with HRD.
-  Take regular backups.

---

## Tables

### Bands

This table defines the frequency ranges for the ADIF bands, used when exporting to ADIF.

### Columns

Name	Type	Size
PrimaryKey	Long Integer	4
MinFreq	Long Integer	4
MaxFreq	Long Integer	4

Title	Text	32
ADIF	Text	32
Comment	Text	64

## Countries

The country list; used to lookup a country based on prefix, also to cross-reference a country and DXCC number.

### Columns

Name	Type	Size
PrimaryKey	Long Integer	4
Country	Text	64
DXCC	Text	32
Comment	Memo	-
Prefix	Memo	-

## Logbook

This table stores information for each QSO.

### Columns

Name	Type	Size
PrimaryKey	Long Integer	4
Created	Date/Time	8
Modified	Date/Time	8
Station	Text	32
EndTime	Date/Time	8
StartTime	Date/Time	8
Remark	Memo	-
ReportRecv	Text	32
ReportSent	Text	32
BandMHz	Text	32
Mode	Text	32
Frequency	Text	32
Locator	Text	32
Country	Text	64
DXCC	Text	10
IOTA	Text	10
QSLRecv	Text	10
QSLSent	Text	10
QSLRecvDate	Date/Time	8
QSLSentDate	Date/Time	8
eQSLRecv	Text	10
eQSLSent	Text	10
eQSLRecvDate	Date/Time	8
eQSLSentDate	Date/Time	8
eQSLStatus	Text	255
QSLVia	Text	64
Name	Text	64
Address	Text	255
QTH	Text	255
MyStation	Text	128
MyAntenna	Text	128
MyCallsign	Text	32
MyLocator	Text	10
MyPower	Text	32
MyName	Text	32
MyCountry	Text	64

## Modes

The supported modes, this list contains all modes supported by ADIF.

## Columns

Name	Type	Size
PrimaryKey	Long Integer	4
Title	Text	32
ADIF	Text	32
Comment	Text	64

## QRZ

When a QRZ lookup is made a copy of the returned data is stored in this table so that subsequent lookups are much faster.

The fields correspond to the fields extracted from the returned QRZ data.

## Columns

Name	Type	Size
PrimaryKey	Long Integer	4
QRZUpdated	Date/Time	8
QRZCallsign	Text	255
QRZName	Text	255
QRZAddr1	Text	255
QRZAddr2	Text	255
QRZCountry	Text	255
QRZGrid	Text	255
QRZHomePage	Text	255
QRZQslMgr	Text	255

---

## ADIF

Ideally HRD's logbook will support all ADIF fields. The table below contains all ADIF fields as of ADIF spec 2.1.7 and the location in the Add/Modify window.

This table is really a programmer's checklist to ensure essential fields are supported. ADIF fields that have not yet been added have empty values in HRD Field.

- *Antenna* and *Satellite* are combined into one dialog.

For ADIF information: <http://groups.yahoo.com/group/adifdev/files/> .

Location	ADIF Field	HRD Field
Antenna	ANT_AZ	Azimuth
Antenna	ANT_EL	Elevation
Antenna	ANT_PATH	Path
Contest	CHECK	Check
Contest	CLASS	Class
Contest	CONTEST_ID	Contest
Contest	PRECEDENCE	Precedence
<i>Deprecated</i>	OPERATOR	
<i>In ADIF files</i>	PROGRAMID	
<i>In ADIF files</i>	PROGRAMVERSION	
Location	ARRL_SECT	ARRL sect
Location	CNTY	County
Location	CONT	Continent
Location	CQZ	CQ zone
Location	DISTANCE	Distance

Location	ITUZ	ITU zone
Location	LAT	Latitude
Location	LON	Longitude
Location	STATE	State
<i>Deprecated</i>	VE_PROV	
Main	ADDRESS	Address
Main	BAND	Band
Main	CALL	Station
Main	COMMENT	Remark
Main	COUNTRY	Cntry
Main	DXCC	Cntry (read-only)
Main	FREQ	Freq
Main	GRIDSQUARE	Locator
Main	IOTA	IOTA
Main	MODE	Mode
Main	NAME	Name
Main	QSO_DATE	Start
Main	QTH	QTH
Main	RST_RCVD	RST Recv
Main	RST_SENT	RST Sent
Main	TIME_OFF	End
Main	TIME_ON	Start
My Station	MY_CITY	City
My Station	MY_CNTY	County
My Station	MY_COUNTRY	Country
My Station	MY_CQ_ZONE	CQ zone
My Station	MY_GRIDSQUARE	Locator
My Station	MY_IOTA	IOTA
My Station	MY_ITU_ZONE	ITU zone
My Station	MY_LAT	Lat
My Station	MY_LON	Lon
My Station	MY_NAME	Name
My Station	MY_POSTAL_CODE	ZIP
My Station	MY_RIG	Equipment
My Station	MY_SIG	SIG
My Station	MY_SIG_INFO	SIG info
My Station	MY_STATE	State
My Station	MY_STREET	Street
My Station	TX_PWR	Power
Operator	AGE	Age
Operator	CONTACTED_OP	Operator call
Operator	EMAIL	Email
Operator	EQ_CALL	Owner call
<i>t.b.a.</i>	GUEST_OP	
<i>t.b.a.</i>	OWNER_CALLSIGN	
Operator	RIG	Equipment
Operator	SIG	SIG
Operator	SIG_INFO	SIG info



<i>t.b.a.</i>	STATION_CALLSIGN	
Operator	TEN_TEN	10-10
Operator	WEB	URL
Propagation	A_INDEX	A index
Propagation	K_INDEX	K index
Propagation	MAX_BURSTS	Max bursts
Propagation	MS_SHOWER	MS shower
Propagation	NR_BURSTS	Num bursts
Propagation	NR_PINGS	Num pings
Propagation	PROP_MODE	Prop mode
QSL Info	QSL_RCVD	QSL Recv
QSL Info	QSL_RCVD_VIA	
QSL Info	QSL_SENT	QSL Sent
QSL Info	QSL_SENT_VIA	
QSL Info	QSL_VIA	QSL Via
QSL Info	QSLMSG	
QSL Info	QSLRDATE	QSL Recv
QSL Info	QSLSDATE	QSL Sent
Satellite	SAT_MODE	Mode
Satellite	SAT_NAME	Name
<i>t.b.a.</i>	BAND_RX	
<i>t.b.a.</i>	FORCE_INIT	
<i>t.b.a.</i>	FREQ_RX	
<i>t.b.a.</i>	NOTES	
<i>t.b.a.</i>	PFX	
<i>t.b.a.</i>	PUBLIC_KEY	
<i>t.b.a.</i>	QSO_COMPLETE	
<i>t.b.a.</i>	QSO_RANDOM	
<i>t.b.a.</i>	RX_PWR	
<i>t.b.a.</i>	SFI	
<i>t.b.a.</i>	SRX	
<i>t.b.a.</i>	SRX_STRING	
<i>t.b.a.</i>	STX	
<i>t.b.a.</i>	STX_STRING	
<i>t.b.a.</i>	SWL	



# Annex: Links

---

## HRD

Homepage – <http://hrd.ham-radio.ch/>.

Forums – <http://forums.ham-radio.ch/>.

Yahoo! Mailing list – <http://groups.yahoo.com/group/ham-radio-deluxe/>.

---

## Other Software

BV Software by DF3CN - <http://www.df3cb.com/> . Excellent QSL management and label printing software.

DXLab by Dave Bernstein AA6YQ - <http://www.qsl.net/dxlab>.

IrfanView - <http://www.irfanview.com/>. Great image viewer and sound file player.



# Annex: Building HRD

---

## Overview

HRD is a Windows-only program; please do not ask for the source code for porting to other platforms such as Linux or the Macintosh. Not only are there legal reasons (see below), it's also a technical waste of time! It would be much easier to start from scratch than try to port the code.

The information here is provided for anyone who takes over the development and maintenance of HRD for whatever reason.

Note that commercial programming libraries have been used – this saves a lot of time and provides a much better ‘look and feel’.

---

## Source Code

The root folder is `\Ham Radio` containing the folders in the table below.

Folder	Description
Alerter	Source for the Alerter module used by the satellite tracking. The Alerter is a standalone executable that announces upcoming satellite passes.
APEX	Contains Oletra Chart 6.0.6 now owned by <a href="http://www.componentone.com/">http://www.componentone.com/</a> and called <i>ComponentOne Chart</i> . A license is required to use the contents of this folder for development, the <code>olch2d32.dll</code> DLL can be redistributed.
boost_1_20_1	The boost library, provides regular expression support used in PSK31 Deluxe.
CD Image	The CD Image which contains a full HRD distribution containing absolutely everything (except the source).
Codejock Software	Xtreme Toolkit Pro - a fine programming library from <a href="http://www.codejock.com/">http://www.codejock.com/</a> . A license is required to use the contents of this folder for development.
Common	Code common to more than one HRD component.
DDE Demos	DDE demonstration programs, source can be distributed.
Debug	All executable code compiled in debug mode, this is not shipped to end-users.
Defaults	Default files shipped in the HRD kits. Examples are colour schemes and satellite data.
Doc	Source for this document. The PDF is in the <i>Ship</i> sub-folder.

Dundas	A fine programming library from <a href="http://www.dundas.com/">http://www.dundas.com/</a> subsequently sold to <a href="http://www.theultimatetoolbox.com/">http://www.theultimatetoolbox.com/</a> . A license is required to use the contents of this folder for development.
Dundas Software 001	See <i>Dundas</i> above.
HamRadioDeluxe	The source code for ham Radio Deluxe.
HRDSats	The source code for the HRD Sats DLL. This may be redistributed; it comes mostly from public domain sources and freely available work from other people, notably Michael F. Henry.
HRDSync	The source code for the program used to synchronise multiple instances of HRD.
InstallShield	The InstallShield folder contains the InstallShield DevStudio 9 project that builds the distribution kit. A licence is needed for InstallShield products.  The project file is <i>Ham Radio Deluxe.ism</i> .
Kit	To build a kit run Make.bat .
lame-3.92	Open source MP3 encoder, used by the Audio Grabber.
mad-0.14.2b	Source code to produce a DLL that converts MP3 files to WAV or PCM. It is based on the open source library libmad.
madlllib	See <i>mad-0.14.2b</i> above.
Mapper	Source code for <i>Mapper</i> , slowly being replaced with Google Earth and Google Maps.
PSK31 Deluxe	Source for <i>PSK31 Deluxe</i> .
PSKCore119	The PSK31 engine, copyright 2000, Moe Wheatley, AE4JY. Licence is <i>not</i> needed.
Release	All executable code compiled in release mode, this is shipped to end users.
RemoteSvr	The source code for the HRD Remote Server.
Workspace	Contains the Microsoft VisualStudio workspace <i>HamRadio.dsw</i> .

---

## Tools

To compile HRD you need *Visual C++ version 6.0* from Microsoft. There is no reason to use a later version such as *Visual Studio 2005* as by all accounts the user interface is less friendly and the compiler is slower.

To build kits you need *InstallShield DevStudio 9*. As this version can no longer be purchased you will have to buy the latest version available.

Note that you will need licences for the products listed in Source Code on page 149.

- ComponentOne Chart,
- Codejock Software's Xtreme Toolkit Pro,
- Ultimate Toolbox.

---

## Building

To rebuild:

- Open the workspace,
- Build all Win32 Release configurations,
- Build the kit.

# Index

- 3<sup>rd</sup>-Party Programs, 121
- Accelerators, 37
- AlfaSPID, 97
- AMSAT, 101
- Archive*, 140
- Archiving, 140
- Audio, 45
- Audio Browser, 46
- Audio Grabber, 45
- Auxiliary Switching, 49
- Band Layouts, 53
- Band Selection, 25
- Bands, 141
- Building, 150
- Buttons, 26, 30
- CAT Commands, 83
- CI-V, 128
- CI-V Address, 18
- COM Port, 18
- COM Port TX, 39
- Command Tester, 125
- Comms, 38
- Connecting, 18
- Connection, 17
- Countries, 142
- CSIDL\_APPDATA, 139
- CTS, 18
- Current Data, 111
- Customise Layout, 27
- Date & Time, 25
- DDE, 116
- DDE Server, 116
- DDE Support, 57
- Dem-o-matic, 17
- Display Scroll, 25
- Docking Panes, 39
- Dropdowns, 26
- DTR, 18
- DX Cluster, 59
- Eddystone EA12, 9
- Elecraft*, 11, 84, 86, 127
- Faceplate, 31
- Favourites, 65; Markers, 67
- Filter**, 129
- Fine Tuning, 23
- FlexRadio*, 11
- Frequency, 32
- Frequency Display, 22
- Frequency range, 54
- FT-817, 109
- FT-817 Commander, 9
- FT-847, 108
- Griffin Powermate, 37
- Ground Control, 105
- HRDRemoteSvr.cfg*, 92
- IC-703, 9
- IC-910H, 108
- ICOM*, 11, 85, 108, 128
- ICOM Calibration, 40
- Info: Modes, 40
- Info: Options, 41
- Installation, 13
- InstallShield*, 150
- Interfacing, 12
- Internet, 42
- Johannes Kepler, 101
- K1EL, 75
- Kenwood*, 11, 84
- Keplerian elements, 101
- Layout, 28
- Linear Transponders, 109
- Linux, 149
- Locator, 98
- Logbook, 142
- Logbook Database, 141
- Long path, 98
- LPT1, 50
- LPT2, 50
- LPT3, 50
- Macintosh, 149
- Macros, 83
- Main Tuning, 23
- Meters, 33
- Mode**, 129
- Modes, 142
- Mouse Wheel, 43
- MP3, 45, 46
- MP3 Player, 47
- Mutual Visibility, 112
- N8VB, 121
- Next Passes, 114
- NORAD, 101

Observer, 104  
ODBC tracing, 72  
OH2AQ, 59  
Out Of Band, 42  
Parallel port, 49  
Performance, 72  
PHP1PH, 9  
Plot, 115  
Portmon, 133  
Program Options, 37  
QRZ, 143  
Quick Save, 89; Markers, 89  
Radio Display, 21  
Record, 45  
Registry, 139  
Remote Connection, 95  
Remote Server, 91, 135  
Rotator, 97  
RTS, 18  
Satellite Tracking, 101  
Schedule, 111  
Schemes, 27  
SDP4, 101  
Selection Window, 43  
SGP4, 101  
Short path, 98  
Single Pass, 114  
Sliders, 26  
Sliders: Appearance, 34  
Sliders: Layout, 34  
Snapshots, 88  
Source Code, 149  
Speed, 18  
Sponsors, 10  
Supported Radios, 11  
Synchroniser, 117  
T.S. Kelso, 103  
*Ten-Tec*, 11, 85  
Toolbars, 44  
Tuning Dial, 23, 35  
Updates, 44  
Virtual COM ports, 121  
Visibility, 113  
*Visual C++*, 150  
WinKey, 75  
*Yaesu*, 11, 86, 108, 130